



## ***LIFEPLAY PLAY SETS***

### **Owner's Manual and Assembly Instructions**

**STOP!**

**\*\*U.S. and Canada customers ONLY\*\***  
**IF ASSISTANCE IS NEEDED,**

**STOP!**

**DO NOT CONTACT THE STORE!**

**CALL OUR CUSTOMER SERVICE DEPARTMENT at 1 (800) 225-3865**

**HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)**

**Call, or visit our Web site at [www.lifetime.com](http://www.lifetime.com) for Saturday hours**

**\*\*For customers outside the U.S. or Canada, please contact the store for assistance.\*\***



**Lifetime Products, Inc.**  
**P.O. Box 160010 • Freeport Center, Bldg. D-11**  
**Clearfield, Utah 84016-0010**

***This product is intended for use by children ages 3 to 12  
and is for residential use only.***

**STOP!**

## ***Before Beginning Assembly!***

**STOP!**

**Do not start assembly until you have read all instructions.**

### **Tools Required for Assembly**

(not all tools will be used depending on your play set configuration)

1/2" wrench  
3/4" wrench  
#2 Phillips Screwdriver  
#3 Phillips Screwdriver  
Drill with 3/8" bit and 1/4" bit

12' Step Ladder (not extension ladder)  
Hammer  
Rubber Mallet (optional)  
3/16" and 1/4" Allen wrench (included)

*The Person Symbol indicates the number of adults required to complete the assembly step.*



**Two Adults Required for Assembly**



**Three Adults Required for Assembly**



**Four Adults Required for Assembly**

***Only adults should set up the play equipment. Do not allow children in the setup area until assembly is complete.***

**Save this owner's manual for future reference and in the event that the manufacturer has to be contacted.**



### **WARNING**



**FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID THE WARRANTY.**

**To ensure safety, do not attempt to assemble this playset without following the instructions carefully. Before beginning assembly, read the instructions. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury.**

*Most injuries are caused by misuse and/or not following instructions. Use caution when using this playset.*

## **\*\*IMPORTANT SAFETY INFORMATION\*\***

### **PLEASE READ BEFORE BEGINNING ASSEMBLY:**

#### ***Installation and Ground Preparation Instructions:***

- Place the equipment on level, well-drained ground, not less than 6 ft. (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install home playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user (see page 7).
- Install the playground equipment with the slide facing North, this helps prevent the surface on the slide from getting too hot.
- To prevent serious injury, warn children that they must not use the equipment until properly installed.
- With unstable soil conditions, we recommend anchoring the playset into the ground. Call our Customer Service Department at 1-800-225-3865 for more information.

#### ***Operating Instructions:***

Observing the following instructions and warnings reduces the likelihood of serious or fatal injury.


- The maximum number of occupants that may safely use the entire playset including all components is 20 with a maximum weight of 2000 pounds.
- On-site adult supervision should be provided for children of all ages.
- Instruct children not to walk close to, in front of, behind, or between moving items.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children to avoid swinging empty seats.
- Teach children to sit in the center of the swings with their full weight on the seats.
- Instruct children not to use the equipment in a manner other than intended.
- Instruct children not to get off equipment while it is in motion.
- To prevent entanglement and strangulation, dress children appropriately using well-fitting shoes and avoiding ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using equipment.
- Instruct children not to climb when the equipment is wet.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.

## Maintenance Instructions:

- Check surfacing material and replenish as necessary to maintain proper depth (see page 7).
- Check all nuts and bolts twice monthly during the usage season for tightness and tighten as required. It is particularly important that this procedure be followed at the beginning of each season.
- Remove any tripping hazards, such as exposed concrete footings, tree stumps, or rocks.
- Oil all metallic moving parts monthly during the usage period.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- Check swing seats, ropes, cables and chains monthly during usage season for evidence of deterioration. Contact Customer Service for replacement parts.
- Sand rusted areas on tubular members and repaint using a nonlead-based paint (included with system).
- Take plastic swing seats indoors or do not use when the temperature drops below 40 degrees F.
- If the warning sticker is illegible, destroyed or removed, contact Customer Service for a replacement.

**Disposal Instructions:** Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the swing set is discarded. Follow all local disposal requirements.

Place the equipment no less than 6 ft. (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires. Make sure the clearance in front of and behind the swings is at least twice the height of the swing bar. The impact surfacing needs to cover the entire recommended play area. Refer to the example below.

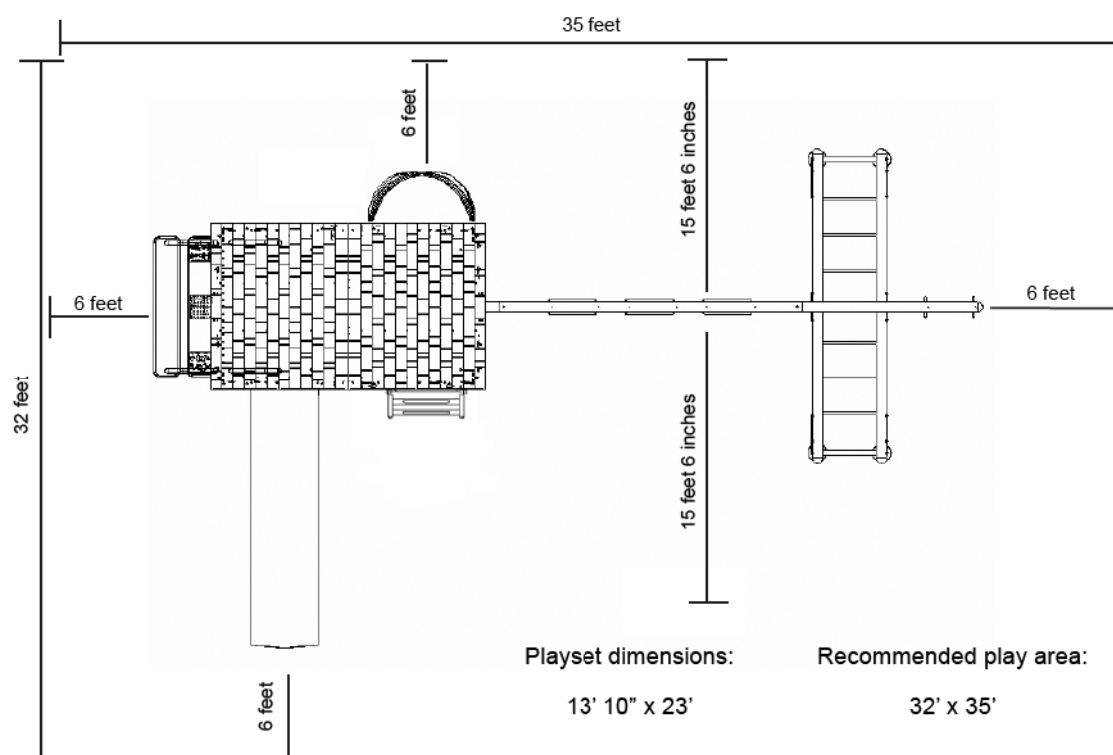



## CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS\*

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury causing potential of a fall. It is self evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable, it may quickly turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table 1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto different loose-fill surfacing materials if they are installed and maintained at

depths of 6, 9, and 12 inches. However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

It is recommended that a shock-absorbing material should extend a minimum of 6 ft. in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area, and its cost.

**Fall Heights for this Unit and Other Accessories.**  
(Compare heights in this table to the heights in the following table. We recommend using 12" of Double Shredded Bark Mulch.)

Clubhouse	3, 5, or 7 feet	Monkey Bars	7 feet 6 inches
Swing Bar	7 feet 6 inches	Climbing Wall	8 feet


**TABLE 1 — FALL HEIGHT IN FEET FROM WHICH A LIFE THREATENING HEAD INJURY WOULD NOT BE EXPECTED**

<i>Type of Material</i>	<i>Material Depth: 6 in. depth</i>	<i>Material Depth: 9 in. depth</i>	<i>Material Depth: 12 in. depth</i>
Double Shredded Bark Mulch	6 ft (fall height)	10 ft (fall height)	11 ft (fall height)
Wood Chips	6 ft (fall height)	7 ft (fall height)	12 ft (fall height)
Fine Sand	5 ft (fall height)	5 ft (fall height)	9 ft (fall height)
Fine Gravel	6 ft (fall height)	7 ft (fall height)	10 ft (fall height)
Shredded Tires***	10 ft (fall height)	N/A (fall height)	N/A (fall height)

\*This information has been extracted from the CPSC publications "Playground Surfacing--Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

\*\*\*This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

# USE AT YOUR OWN RISK!

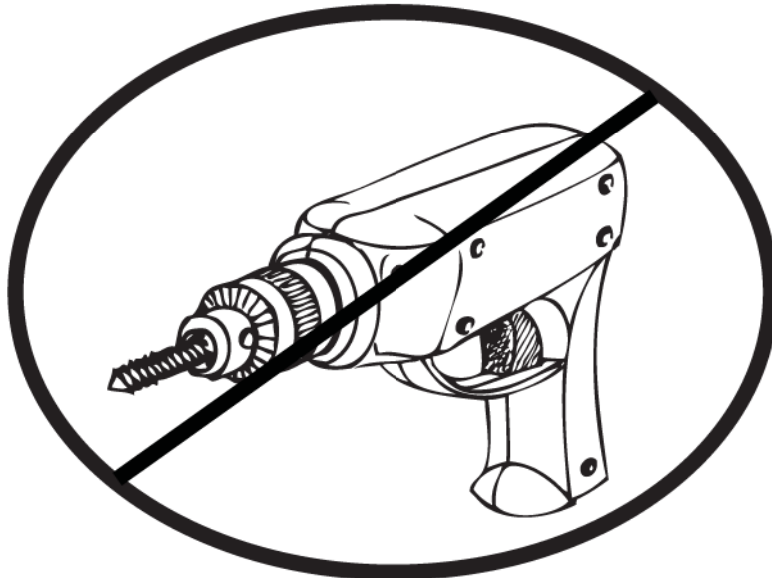

## ***USING A DRILL IS NOT RECOMMENDED FOR DRIVING BOLTS.***

***A cordless drill can be used for driving screws;  
however, care should be taken not to  
over tighten or strip screws.***

If you decide to use a drill for driving bolts, follow the tips to reduce the chance of damaging the product:

1. Always start bolts by hand to prevent cross-threading.
2. Use a drill with the clutch set at the lowest setting that will drive the bolts.
3. Use an Allen wrench for final tightening of bolt to prevent over-tightening.

This instruction manual includes assembly instructions for the following models. Each model consists of specific component kits, which are also listed below. Do not open the component kits until called for in the instructions. Because the instruction manual covers assembly for each possible component, skip assembly sections that do not apply to the model and/or accessories purchased and proceed to the next assembly section.



### **BASIC TOWER**

*Model 462001 (Earth Tones) consists of kits:*  
424001, 442501, 1056163, 445001, 1056228, 452001, 445101




### **BASIC CLUBHOUSE**

*Model 464001 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001, 1056228, 1056195,  
430501, 1056199, 452000, 445101  
Tower Only: Model 461100 (Earth Tones)




### **COMPLETE CLUBHOUSE**

*Model 466001 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001, 1056228, 1056195, 430501,  
1056199, 1056218, 439000, 440001, 452001, 445101

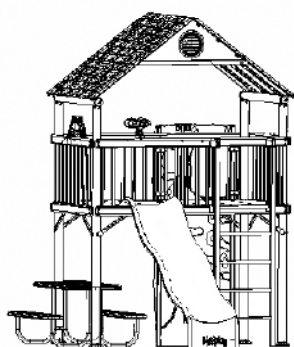


### **DELUXE CLUBHOUSE**

*Model 466101 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001, 1056228, 1056195, 430501,  
1056199, 1056218, 439000, 440001, 452001, 1056240

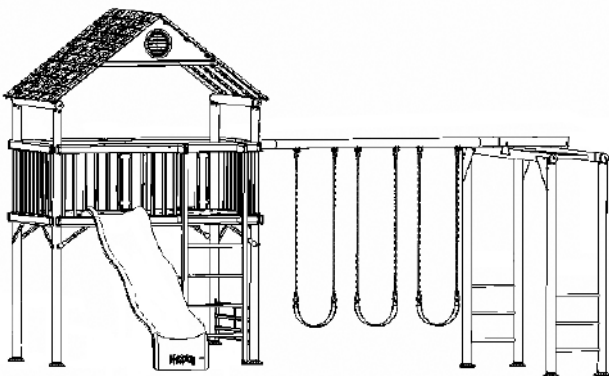


### **BASIC PLAY SET**

*Model 468001 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001, 1056228,  
1056195, 430501, 1056199, 1056140, 449001,  
455000, 452001, 445101

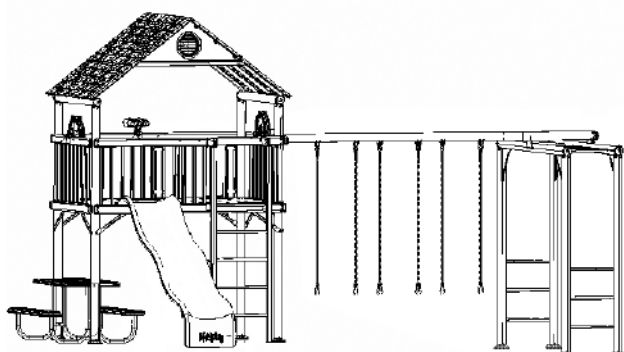


### **COMPLETE PLAY SET**

*Model 470001 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001,  
1056228, 1056195, 430501, 1056199,  
439000, 440001, 1056140, 449001, 455000,  
452001, 1056218, 445101

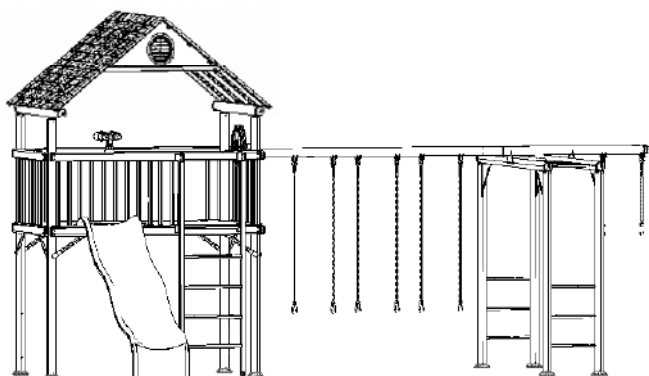

### **DELUXE PLAY SET**

*Model 438001 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001, 1056228,  
1056195, 430501, 1056199, 439000, 440001,  
1056140, 449001, 457000, 452001, 447000,  
1056218, 1056240

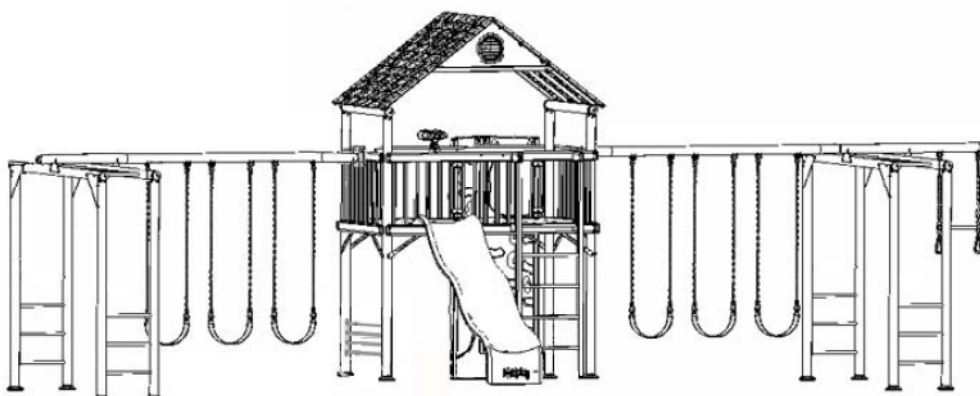

### **DOUBLE DELUXE PLAY SET**

*Model 471001 (Earth Tones) consists of kits:*  
424001, 1056155, 1056163, 445001, 1056228, 1056195, 430501, 1056199,  
439000, 440001, 1056140, 449001, 457000, 452001, 451000, 455000



## TABLE OF CONTENTS

<u>Assembly Section</u>	<u>Page</u>
Section 1- Clubhouse	10
Section 2- Monkey Bar	22
Section 3- Swing Bar Assemblies & Attachments	26
Monkey Swing Bar	27
Trapeze Swing Bar	29
Swing Bar	32
Section 4- Roof	37
Section 5- Picnic Table	43
Section 6- Slide	48
Section 7- Climbing Wall	51
Section 8- Binocular	54
Section 9- Steering Wheel	57

**See page 63 for examples of correct and incorrect accessory placement.**

# SECTION 1







## Clubhouse Assembly

Earth Tone Boxes: 1056155 (or 442501, Basic Tower only), 1056163, 424001, 445001, 1056228, 445101 (no Climbing Wall)

### Hardware List (Hardware is located in Box 1056163 Part #8002040)

ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3/4"	36	☐	8000162	HD	Cap, Hole	28 ☐ 8000265
HB	Washer, 5/16" Bonded	20	☐	8001161	HE	Cap, Foot	4 ☐ 8000261
HC	Washer, 5/16" Zinc	16	☐	8001343	HF	Cap, D-Tube	16 ☐ 8001007
					HG	Cap, Round End	4 ☐ 8000260




There may be extra hardware in this bag.

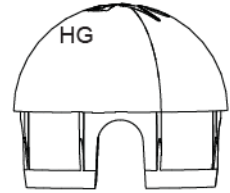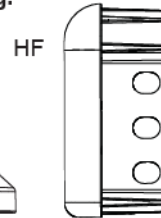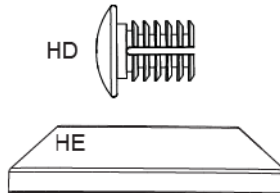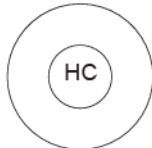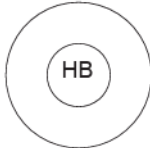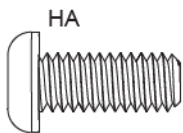

### Hardware List (Hardware is located in Box 445001 Part #8000178)







ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3/4"	20	☐	8000162	HB	Washer, 5/16" Bonded	40 ☐ 8001161
					HH	Bolt, 5/16" x 1 1/4"	20 ☐ 8000163

There may be extra hardware in this bag.

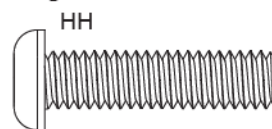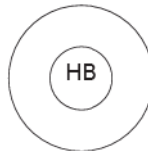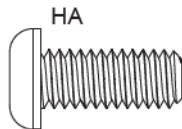

## Parts List

 ID	Item Description	Qty	✓	Part #					
A	Corner Pole	4	☐	1056156	G	Deck Support	1	☐	1056196
B	D-Tube, Top Long	2	☐	1056164	H	Deck	1	☐	8001622
C	D-Tube, Bottom Long	2	☐	1056187	I	Vertical Ladder	1	☐	1056230
D	D-Tube, Top Short	2	☐	1056189	J	2 Piece Railing	8	☐	8000915
E	D-Tube, Bottom Short	2	☐	1056190	K	4 Piece Railing	2	☐	8000913
F	Cross Brace	8	☐	1056192	L	5 Piece Railing	3	☐	8000914
					L	5 Piece Railing (extra)	1	☐	8000914

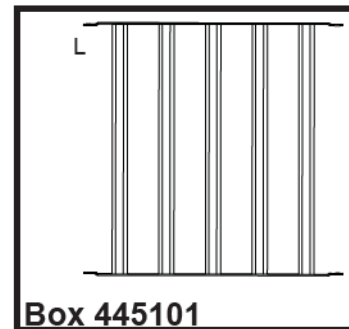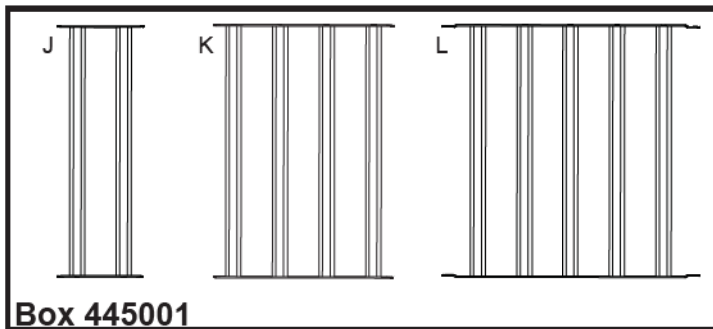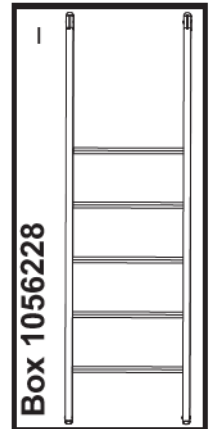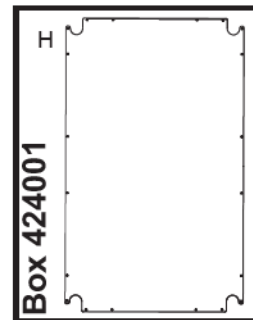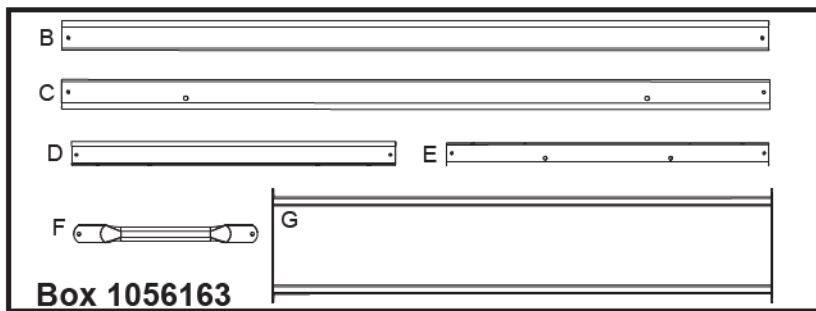

**Note: If a Leveling or Anchoring Kit was purchased with the unit, assemble the Leveling or Anchoring Feet before completing this step. Follow the instruction manuals included with the Leveling and Anchoring Kits.**




1

Lay two Corner Poles (A) on the ground. The holes must be oriented as shown. The flat edges of the Short Top and Bottom D-Tubes (D, E) face each other. Secure with the hardware shown.


Parts for this step are in box 1056163

HC x 4

HA x 4

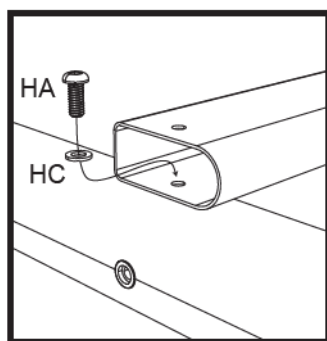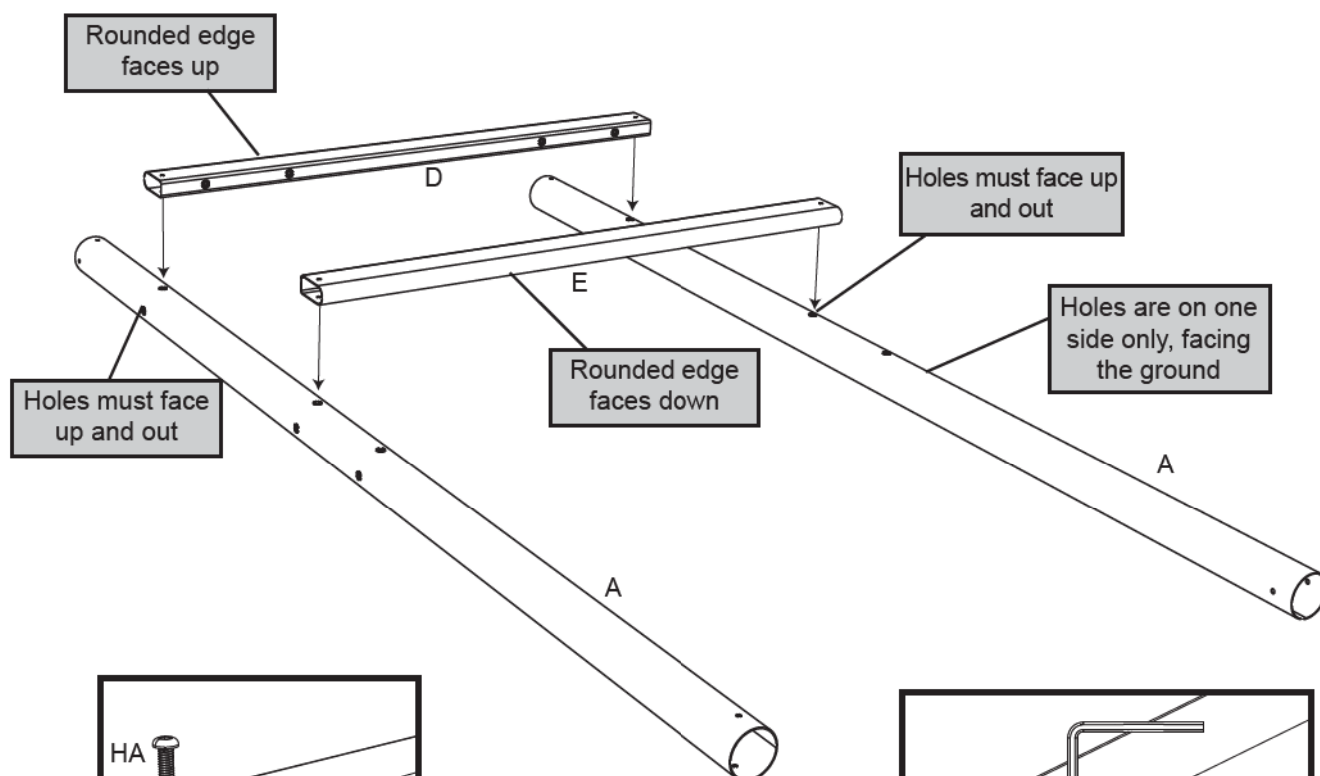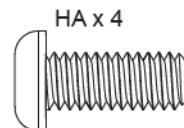

**Secure the Bolts with an Allen Wrench through the outside holes in the D-Tubes.**

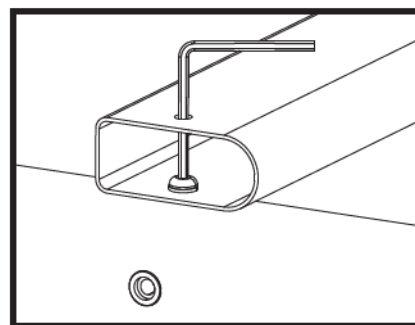

2

Attach Cross Braces (F) between the Bottom Short D-Tube (E) and the Corner Poles (A). Secure with the hardware shown.





**Do not tighten the hardware--the Bolts attaching the Cross Braces to the D-Tube will be shared with another part later in the assembly.**

Repeat steps 1 and 2 to assemble the other Short D-Tubes (D, E) to the Corner Poles (A), and to attach the Cross Braces (F) to the Corner Poles (A) and the Short Bottom D-Tube (E).

Parts for this step are in box 1056163

HB x 4

HA x 4

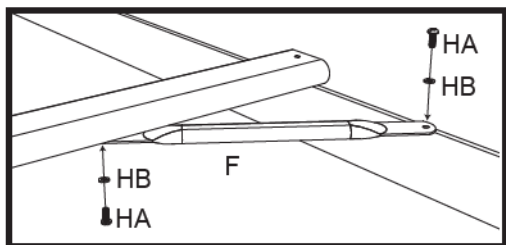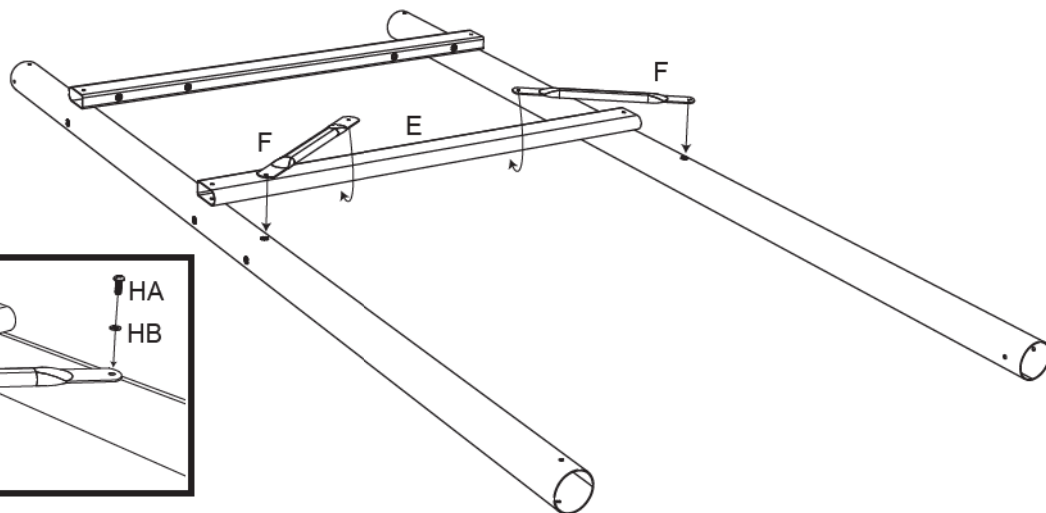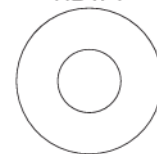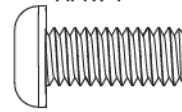

3




Carefully stand up the assembled Short Ends of the Clubhouse.

Attach the Bottom Long D-Tubes (C) to one of the assembled short ends, while the other end of the D-Tube remains on the ground. **The flat sides of the D-Tubes should face up, and the holes in the D-Tubes should face in.**

**Have one person hold each short end while the next steps are completed.**

Parts for this step are in box 1056163

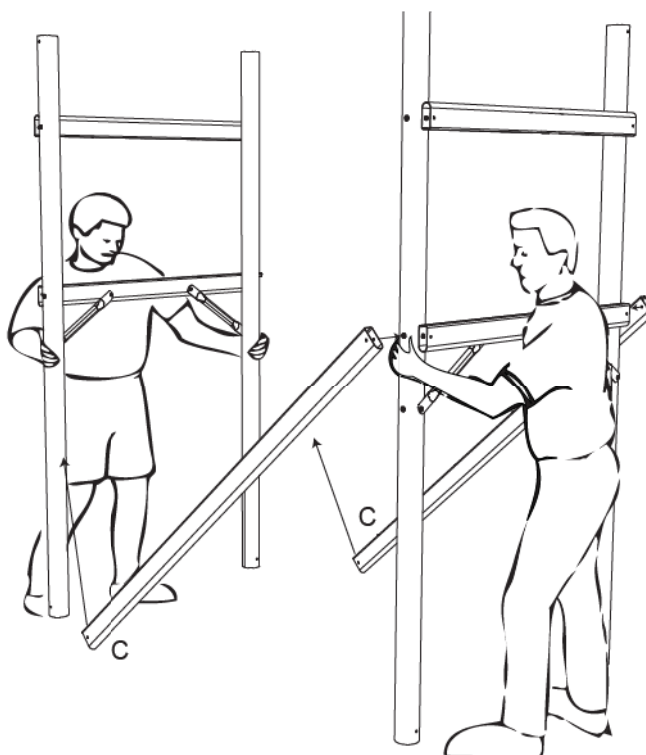



4







Attach the other end of the Bottom Long D-Tubes (C) to the Corner Poles (A).

Parts for this step are in box 1056163

HC x 4

HA x 4

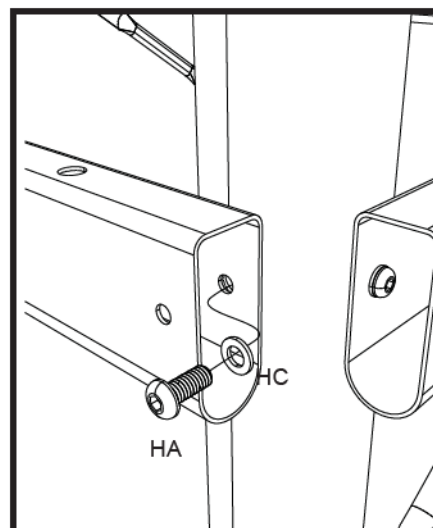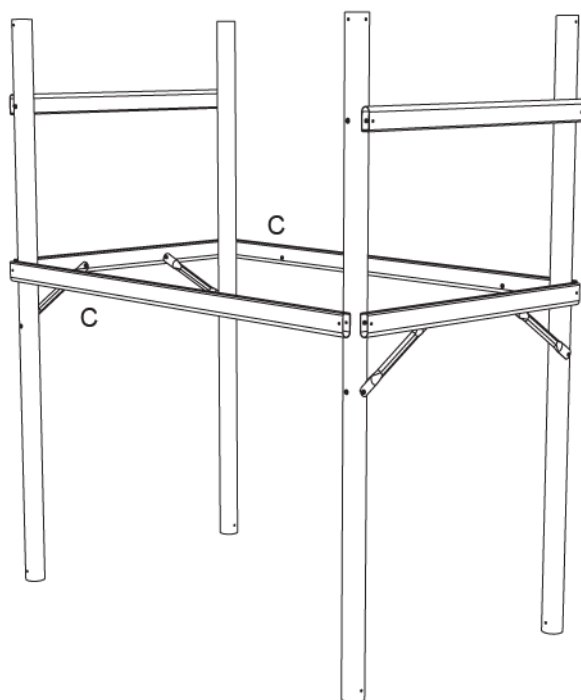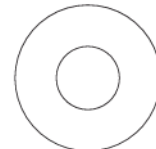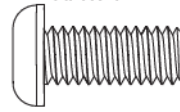



5

Attach Cross Braces (F) on both of the Long Bottom D-Tubes (C) as shown in step 2.

Parts for this step are in box 1056163


HB x 8

HA x 8

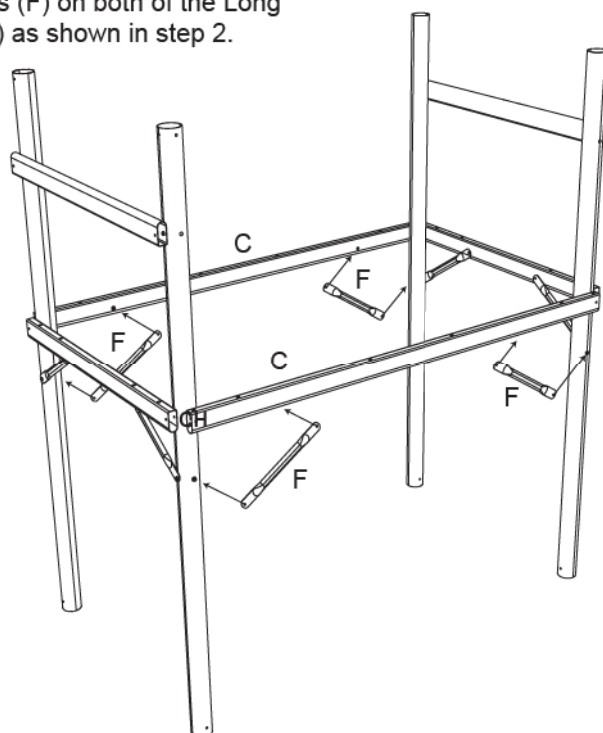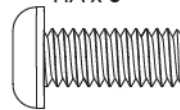

6


Attach the Long Top D-Tubes (B) to the Corner Poles (A). **The flat edges of the D-Tube should face down.** Refer to step 4 to secure the D-Tubes with the hardware shown.

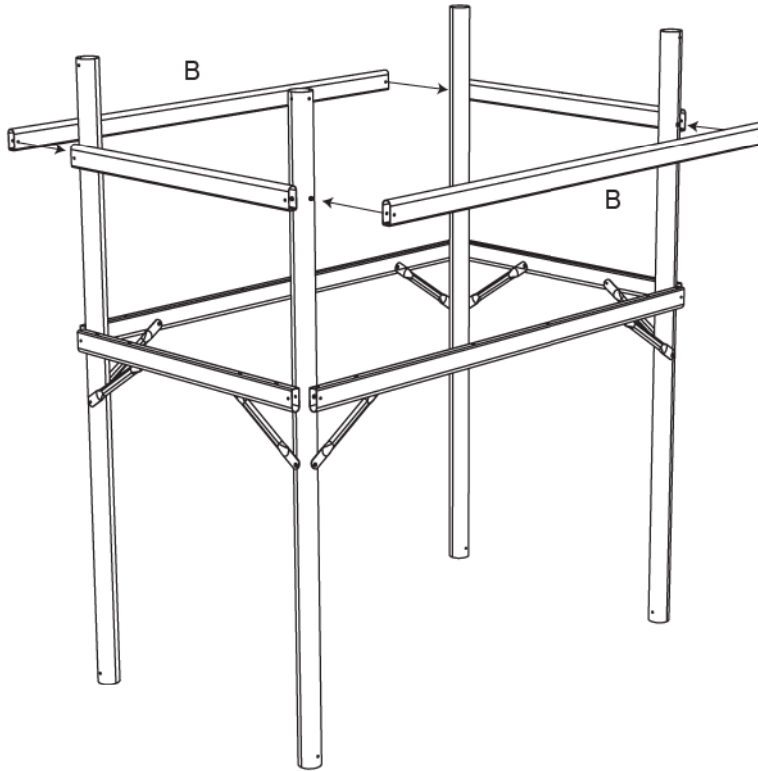

Parts for this step are in box 1056163

HC x 4

HA x 4

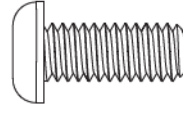


### CAUTION

Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.



7

Insert a D-Tube End Cap (HF) into the ends of the D-Tubes.

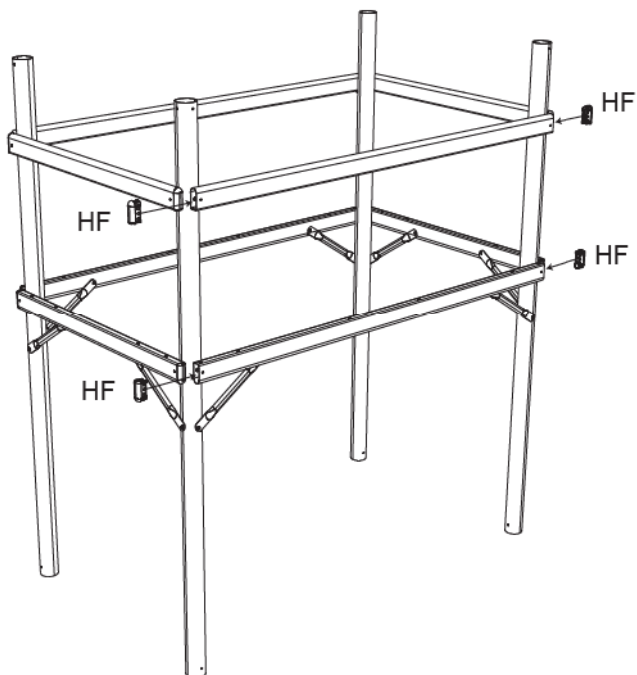

Parts for this step are in box 1056163

HF x 16

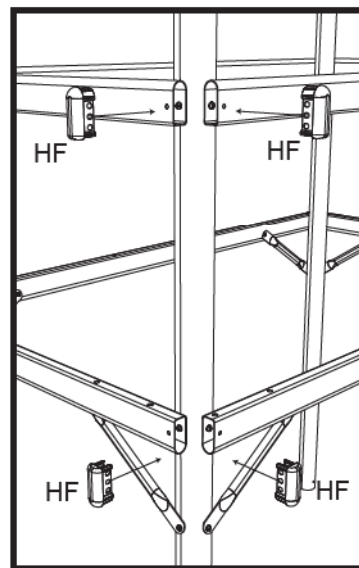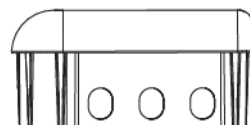



8



Move the Clubhouse to the location desired, and place the Foot Caps (HE) in the location shown.

Parts for this step are in box 1056163




HE x 4

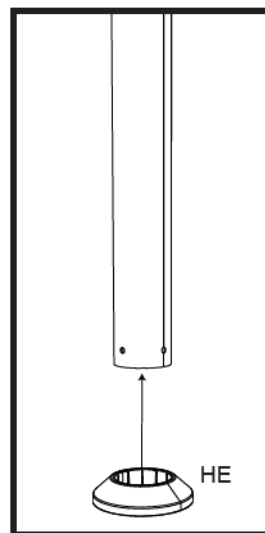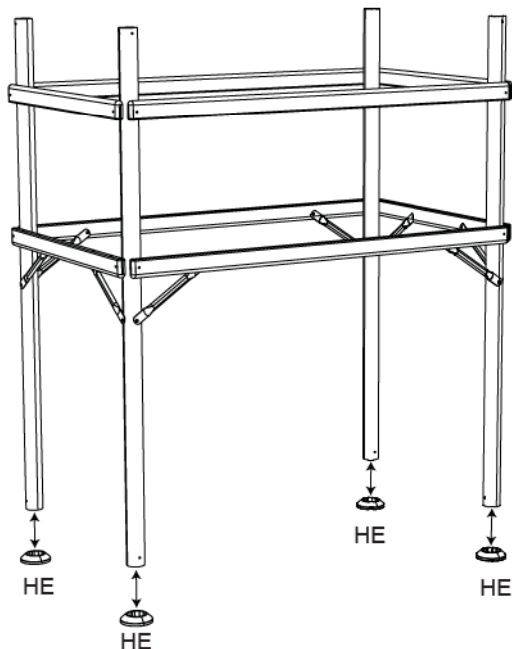

9

Remove the hardware connecting the Cross Braces (F) to the Bottom Short D-Tubes (E). Do not remove the Cross Braces from the Corner Poles (A).

Attach the Deck Support (G) with the hardware that was removed from the Cross Braces (F) by placing the Cross Braces (F) over the Deck Support (G) and securing it to the Bottom Short D-Tubes (E) as shown.

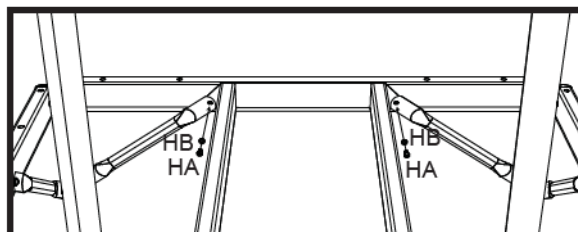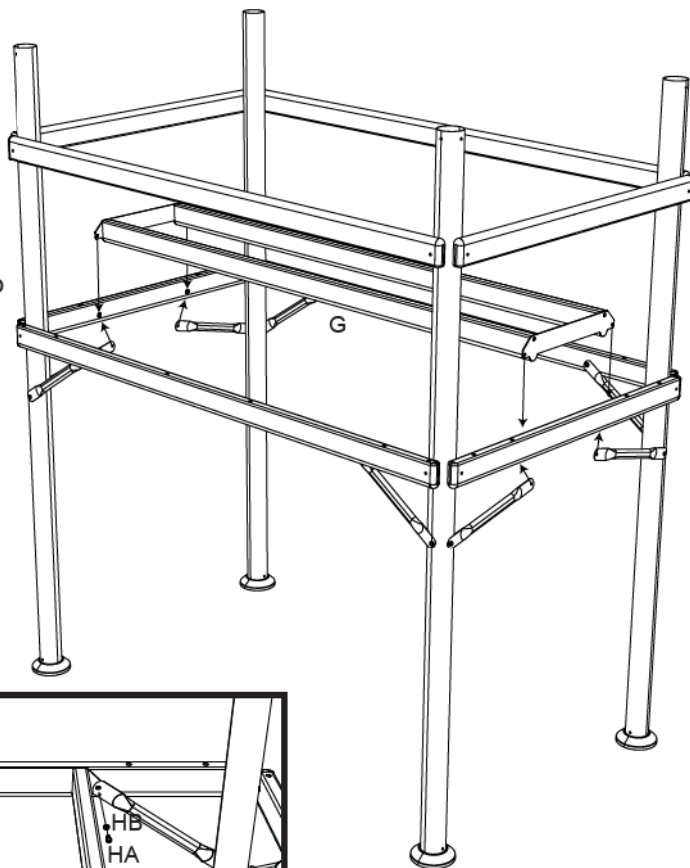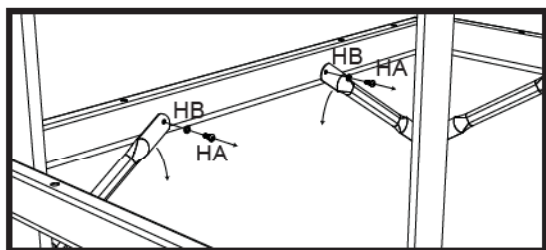

**Note: If a Leveling or Anchoring Kit was purchased with the unit, attach the Leveling or Anchoring Feet to the Corner Poles before completing this step. Refer back to the instruction manuals included with the Leveling or Anchoring Kits.**

10



Parts for this step are in box 424001


Slide the Deck (H) on to the Deck Support (G) as shown. Unfold the Deck, allowing the corners to fit into place. **The diamond pattern should be facing upward.**

The Deck will be secured in the next steps.




## WARNING

Do not stand in the Clubhouse until the floor is completely attached.

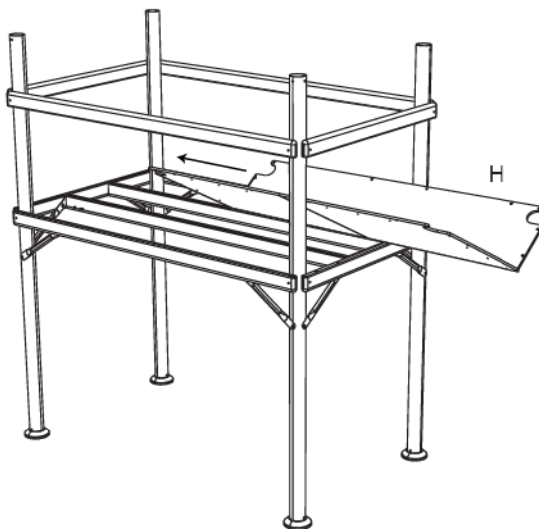

**Note: The location of the Railings will depend on which accessories were purchased, and their desired placement. The 2 Piece Railings go on each corner of the Clubhouse, and the 4 Piece Railings go in the middle of each long side. The 5 Piece Railings can move between the open spots to allow for accessories. All open spots without an accessory must be filled with a Railing, as well as the side with the Swing Bar.**

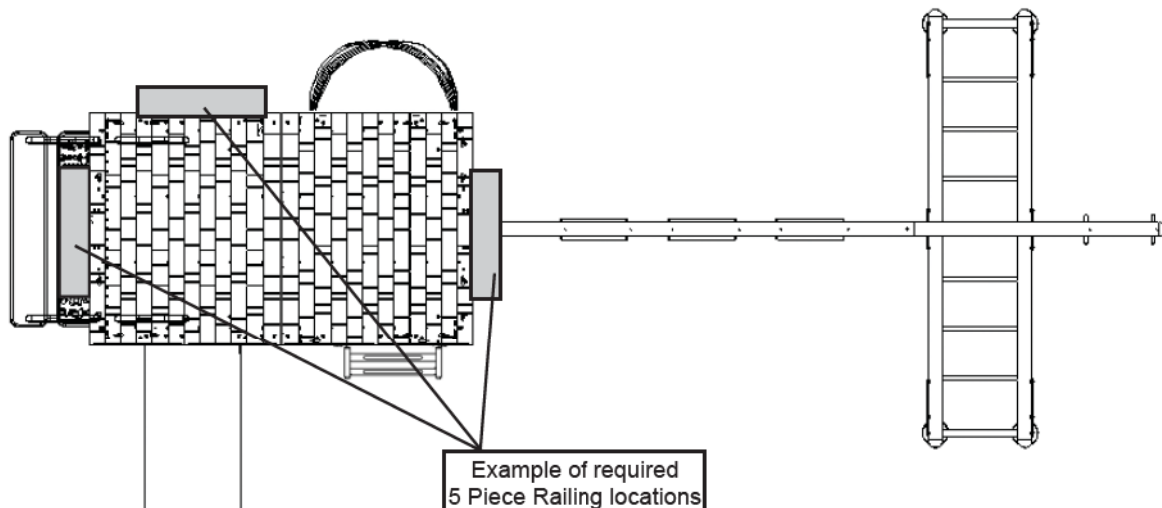


**These instructions show Railing assembly and placement for the play set configuration shown above. The Ladder shares hardware with the Railings. To prevent having to remove hardware, start the Railing assembly where the Ladder will be located.**

11

Install a 4 Piece Railing (K) in the middle of the Clubhouse as shown. **Only install hardware on the left side of the Railing (the Ladder will be installed on the other side).** If a different accessory is placed here, attach both sides of the 4 Piece Railing.

**Do not tighten bolts for Railings until all the Railings are attached.**

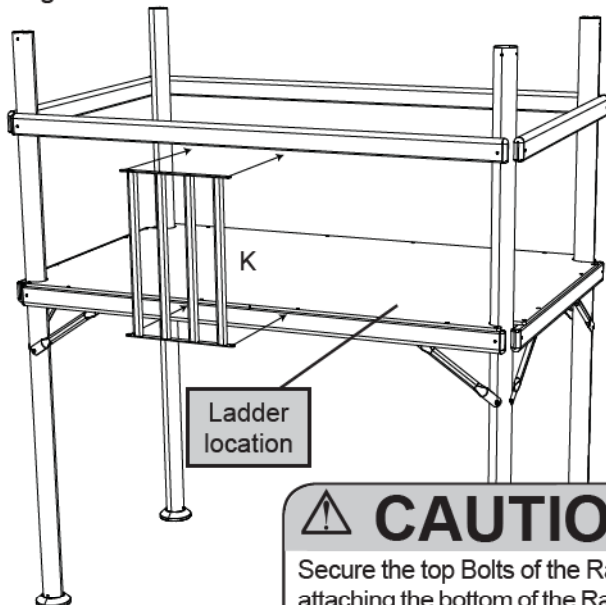

### CAUTION





Secure the top Bolts of the Railing before attaching the bottom of the Railing. Do not overtighten the hardware that attaches the bottom of the Railing through the Deck.

Parts for this step are in box 445001

HB x 2


HH x 1

HA x 1

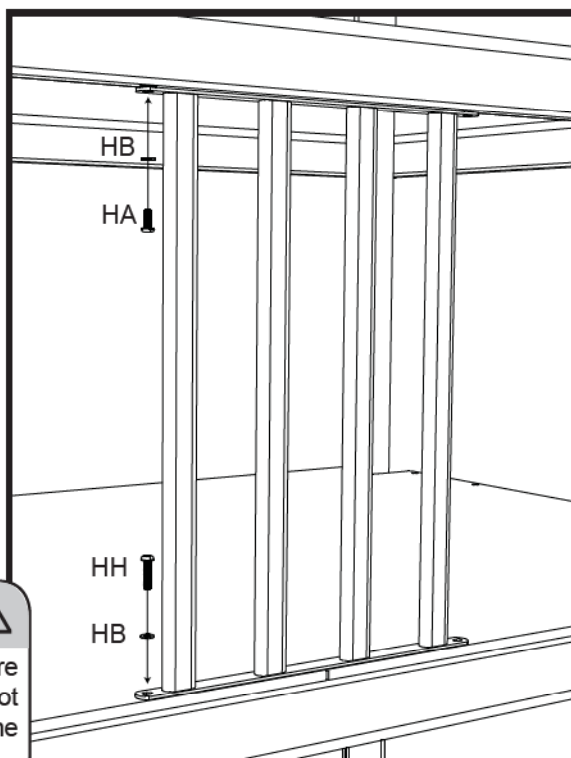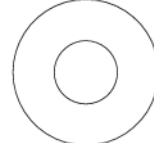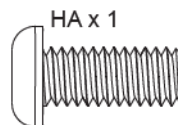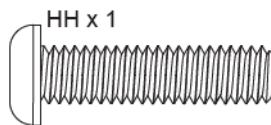

12

Install a 2 Piece Railing (J) on the corner of the Clubhouse as shown. **Only install hardware on the right side of the Railing (the Ladder will be installed on the other side).** If a different accessory is placed here, attach both sides of the 2 Piece Railing.

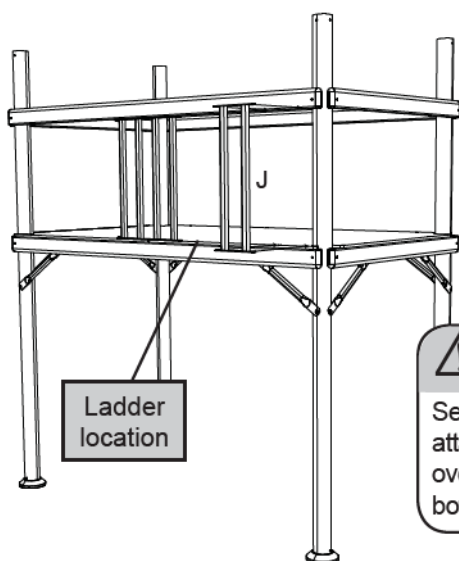

### CAUTION





Secure the top Bolts of the Railing before attaching the bottom of the Railing. Do not overtighten the hardware that attaches the bottom of the Railing through the Deck.

Parts for this step are in box 445001

HB x 2

HH x 1

HA x 1

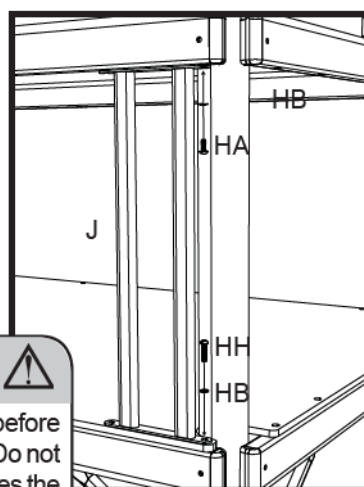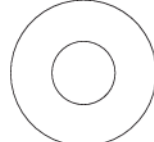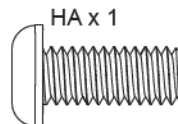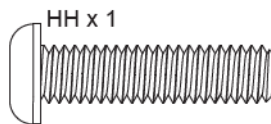



13

Place the Ladder (I) between the two Railings installed in steps 11 and 12, and attach the Ladder and Railings with the hardware shown. **Secure the top Bolts in the Ladder first to make alignment easier.**





*If there are rubber pieces on the ladder, remove them before assembly.*

Parts for this step are in box 445001

HB x 4

HH x 2

HA x 2

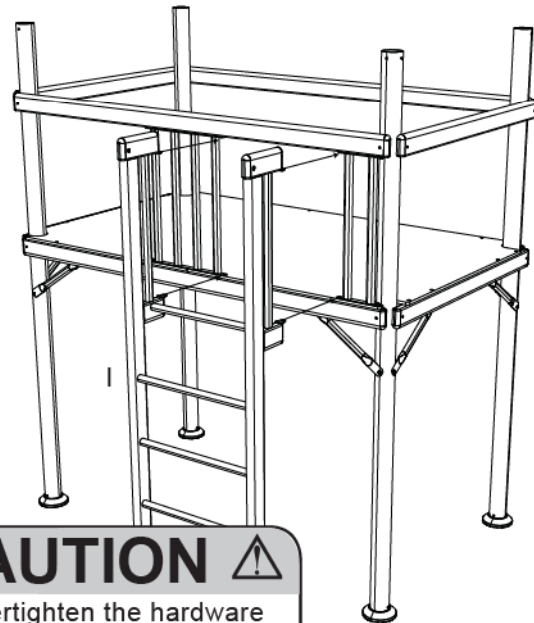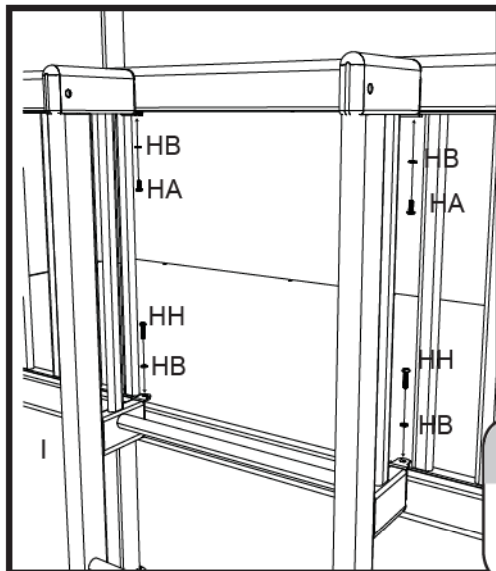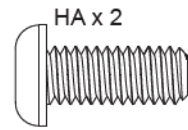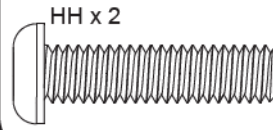

**CAUTION**

Do not overtighten the hardware that attaches the bottom of the Ladder through the Deck.

14

Install a 5 Piece Railing (L) between two 2 Piece Railings (J) on the short side of the Clubhouse as shown. Secure with the hardware shown. The Railings will share hardware where they overlap.





Repeat step 14 to install Railings on the other short side of the Clubhouse.

Parts for this step are in box 445001

HB x 8

HH x 4

HA x 4

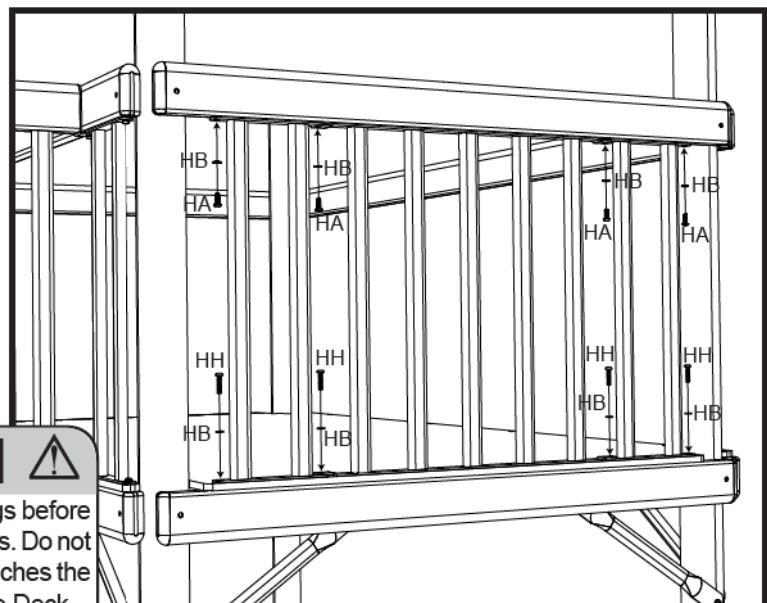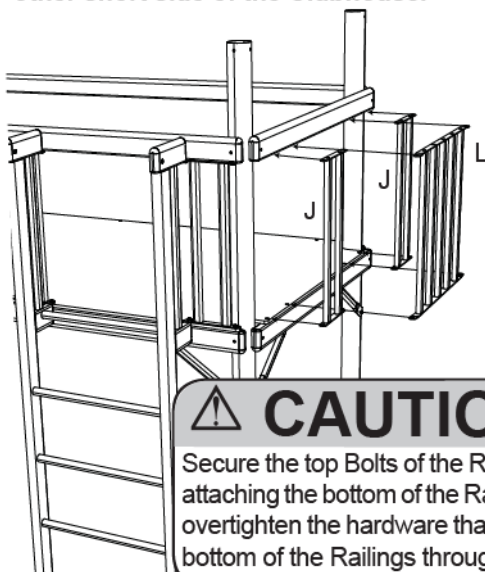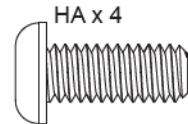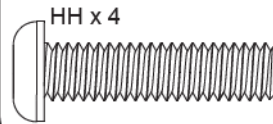

**CAUTION**

Secure the top Bolts of the Railings before attaching the bottom of the Railings. Do not overtighten the hardware that attaches the bottom of the Railings through the Deck.


15

Install 2 Piece Railings (J) on both ends of long side of the Clubhouse. Place a 4 Piece Railing (K) and a 5 Piece Railing (L) between them in the location shown. Refer back to the previous steps to secure the Railings with the hardware shown. The Railings will share hardware where they overlap.

*If a Climbing Wall was not purchased, another 5 Piece Railing will be included. Install it in the spot left open.*

### CAUTION

Secure the top Bolts of the Railings before attaching the bottom of the Railings. Do not overtighten the hardware that attaches the bottom of the Railings through the Deck.

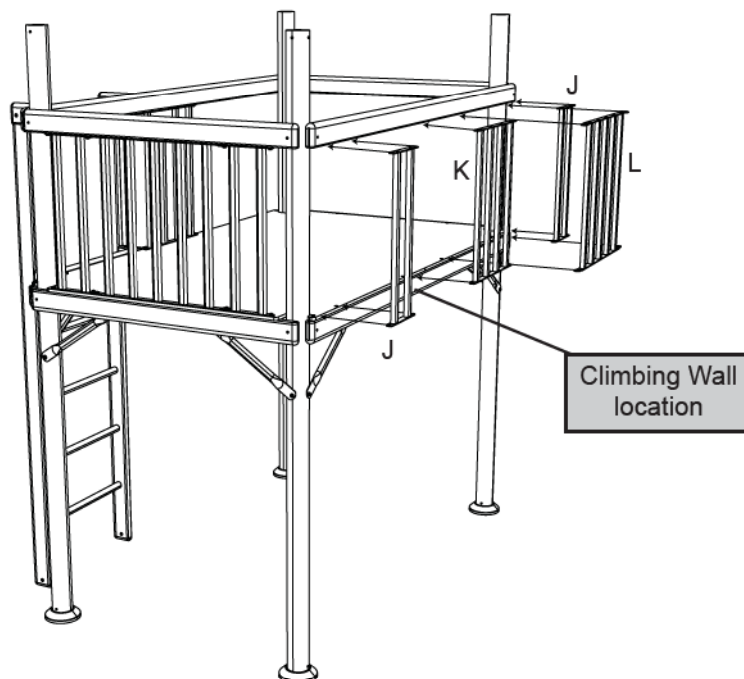

Parts for this step are in box 445001


HB x 12

HH x 6

HA x 6

16

Install the remaining 2 Piece Railing (J) on to the last corner of the Clubhouse. Refer back to the previous steps to secure the Railing with the hardware shown.

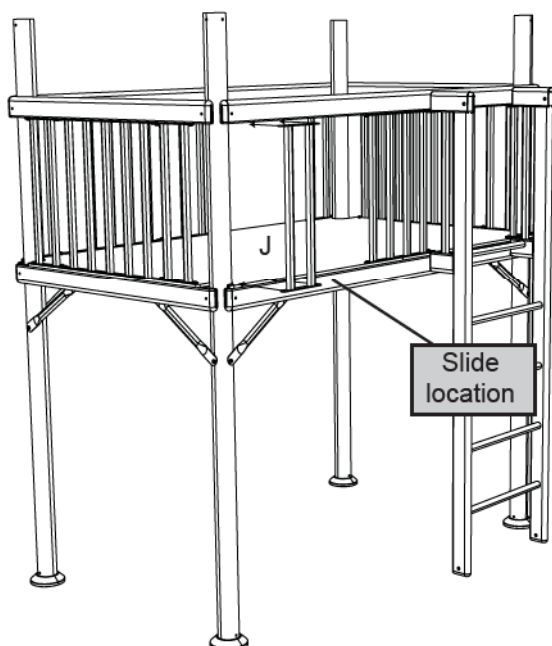

Parts for this step are in box 445001

HB x 4

HH x 2

HA x 2

### CAUTION

Secure the top Bolts of the Railing before attaching the bottom of the Railing. Do not overtighten the hardware that attaches the bottom of the Railing through the Deck.

17




After completing steps 1 through 16, tighten all the hardware on the Clubhouse. Do not continue until all hardware has been tightened.

Insert Hole Caps (HD) into the holes at the end of each Top and Bottom D-Tube, and also into the holes at the bottom of each Corner Pole (A).

**NOTE:** Use a rubber mallet to install the Hole Caps.

Parts for this step are in box 1056163

HD x 28

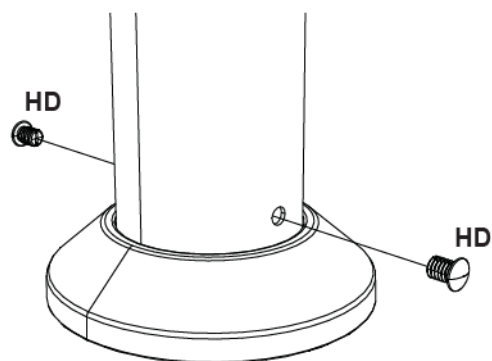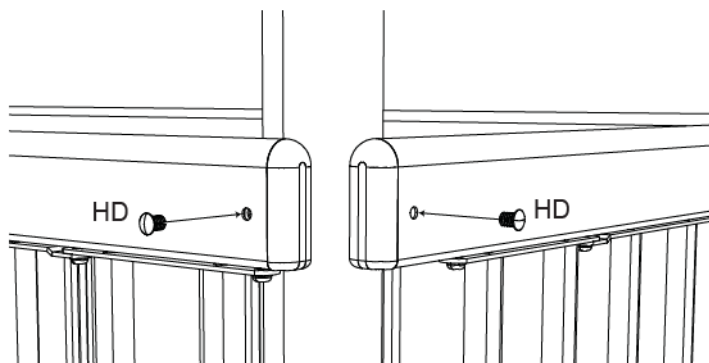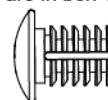

**Note:** Complete the following step if a Roof was not purchased. If a Roof was purchased, the Round End Caps will be inserted in the Roof Poles on page 39.

18

Install a Round End Cap (HG) into the top of each Corner Pole (A).

Parts for this step are in box 1056163

HG x 4



# SECTION 2

## Monkey Bar Assembly

Earth Tones Box: 1056140

### Hardware List (All Hardware is located in Box 1056140 Part #8000174)


ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3/4"	16	☐	8000162	HD	Cap, Foot	4 ☐ 8000261
HB	Washer, 5/16" Bonded	16	☐	8001161	HE	Cap, Round End	4 ☐ 8000260
HC	Cap, Hole	8	☐	8000265	HF	Cap, Cradle	4 ☐ 8000264

There may be extra hardware in this bag.



### Parts List (All Parts are located in Box 1056140)

ID	Item Description	Qty	✓	Part #			
A	Monkey Bar Rungs	1	☐	1056141	B	Monkey Bar Ladder	2 ☐ 1056142
					C	Monkey Bar Bracket	4 ☐ 8000979

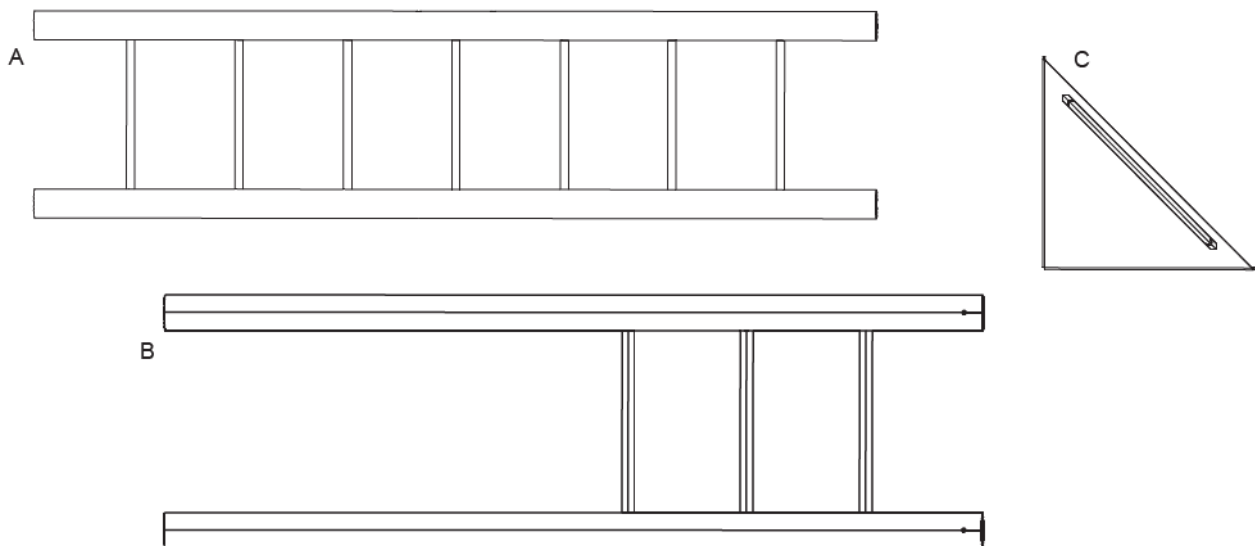

### WARNING





The Monkey Bar is not intended to be a stand alone unit. Do not use until completely attached to the main unit as instructed.

1

Install Round End Caps (HE) into each end of the Monkey Bar Rungs (A).

Parts for this step are in box 1056140

HE x 4

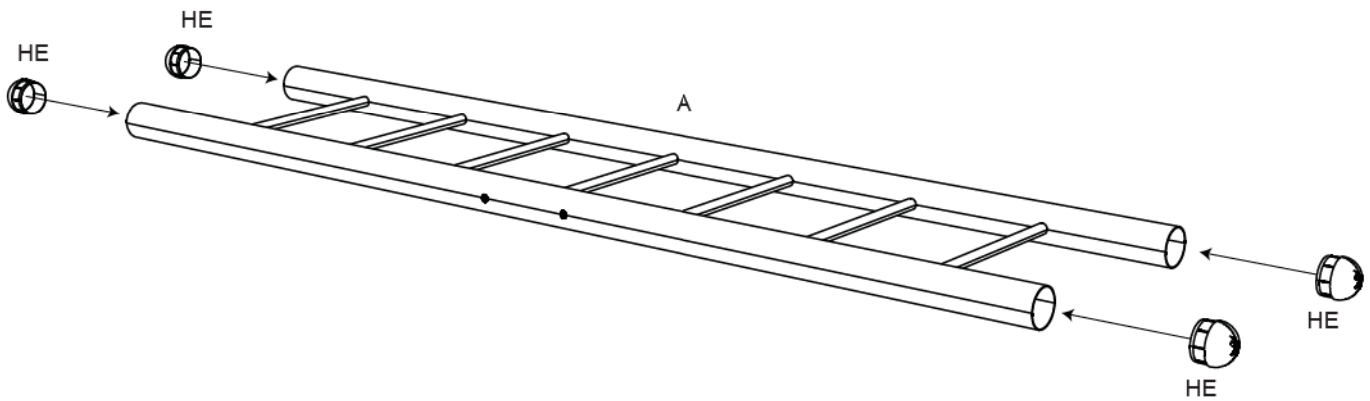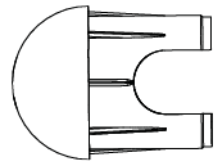




2

With the Monkey Bar Rungs (A) laying flat, place the Monkey Bar Brackets (C) over the holes in the Monkey Bar Rungs. Attach the Monkey Bar Brackets (C) with the hardware shown. Get the bolts started only enough to hold the Brackets in place.

Parts for this step are in box 1056140

HA x 8

HB x 8

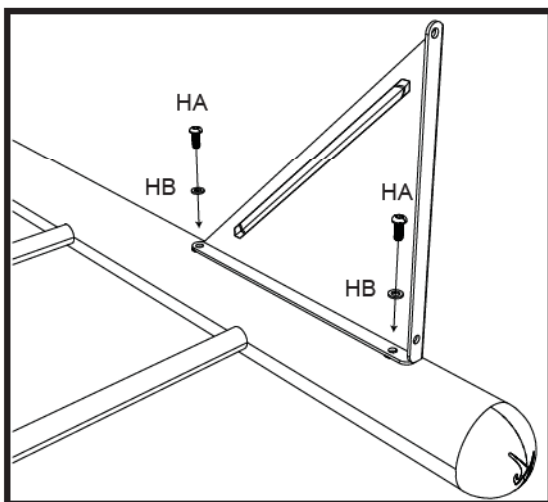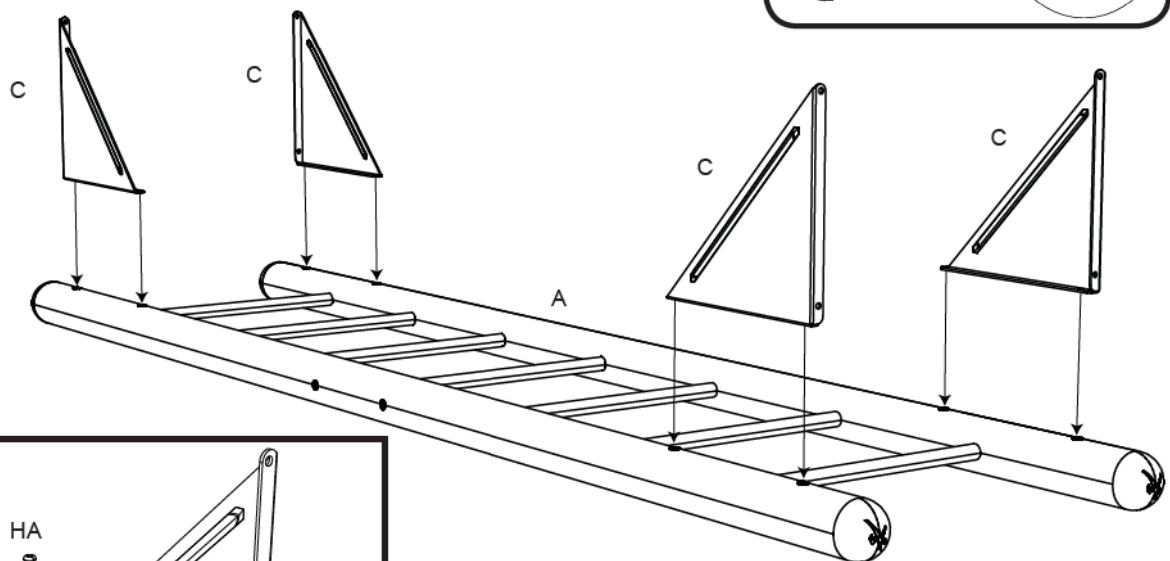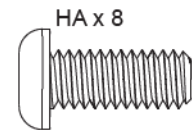





3



Place Cradle Caps (HF) between the Monkey Bar Ladder (B) and the Monkey Bar Rungs (A). Secure the Brackets (C) to the Ladder (B) with the hardware shown. Tighten all the hardware evenly to avoid gaps. One person should hold the Ladder (B) while the other attaches the hardware.

**Repeat this step to attach the Monkey Bar Ladder on the other side of the Monkey Bar Rungs.**


Parts for this step are in box 1056140

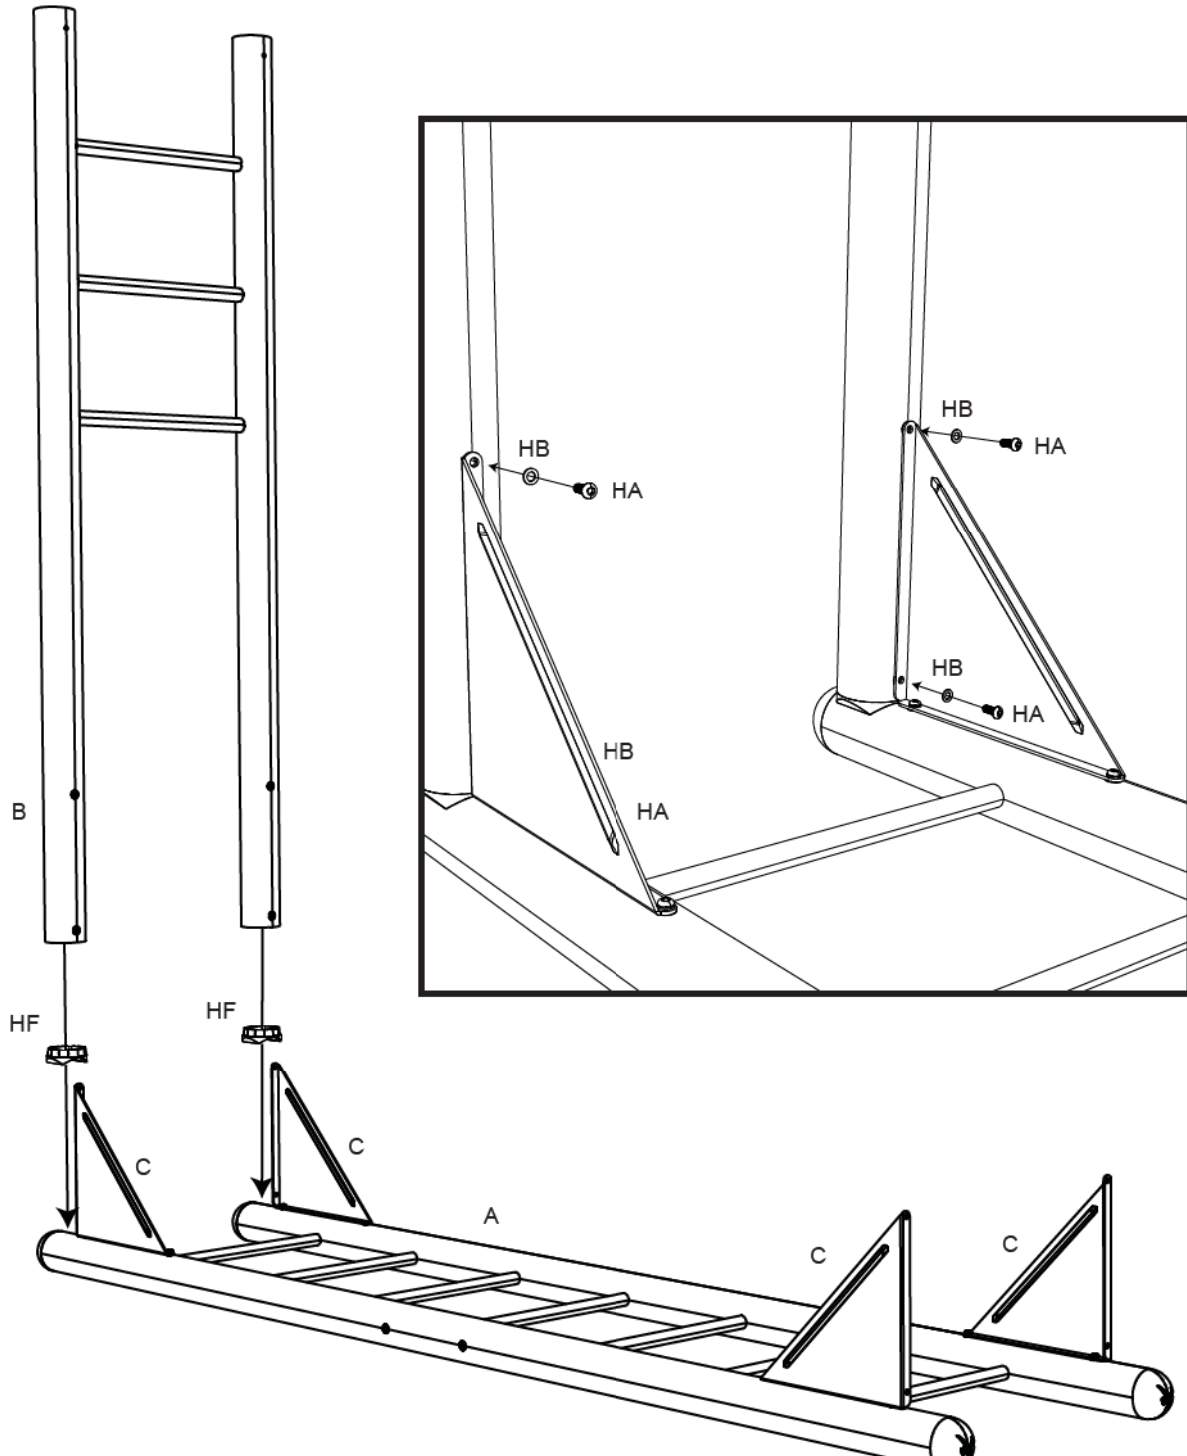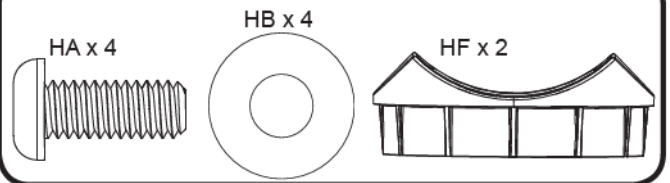

4



Carefully turn the Monkey Bar assembly upright and set it up in the desired location by the Clubhouse.

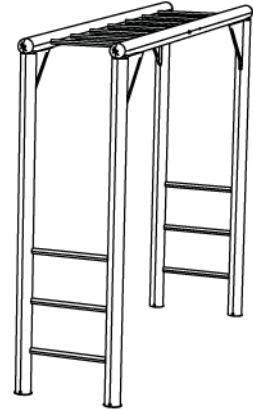

## WARNING



The Monkey Bar is not stable until attached to the Clubhouse with a Swing Bar. Do not use until completely attached to the main unit as instructed.


5

Carefully tilt one end of the Monkey Bar assembly and install two Foot Caps (HD), and then repeat for the other end of the Monkey Bars. Insert Hole Caps (HC) into the holes at the bottom of the Monkey Bar Ladders (B). If using the leveling kit, use the holes to attach the extensions.




Attach the Monkey Bars to the Clubhouse according to the instructions in section 3.

Parts for this step are in box 1056140

HD x 4

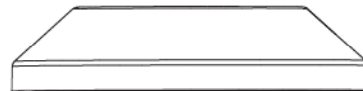

HC x 8

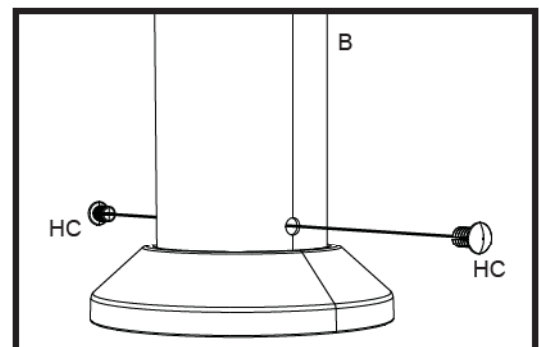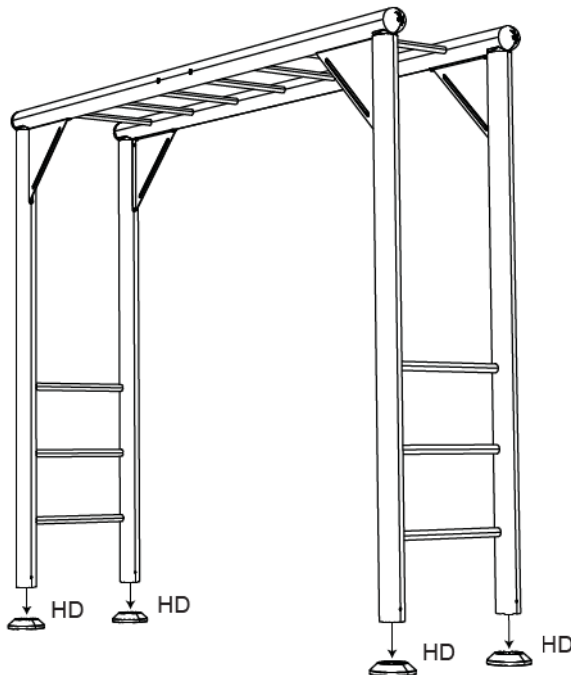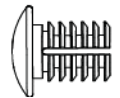

# SECTION 3

## *Swing Bar Assemblies & Attachments*


Monkey Swing Bar: 455000 (Earth Tones)

Trapeze Swing Bar: 457000 (Earth Tones)


Swing Bar: 1056223 (Earth Tones)

**This instruction section shows assembly steps for all available Swing Bar Attachment options. Follow the applicable steps for the specific play set configuration purchased.**

The picture below shows all Swing Bar Attachments, where they attach to the play set, and the page number of that particular attachment's assembly instructions.

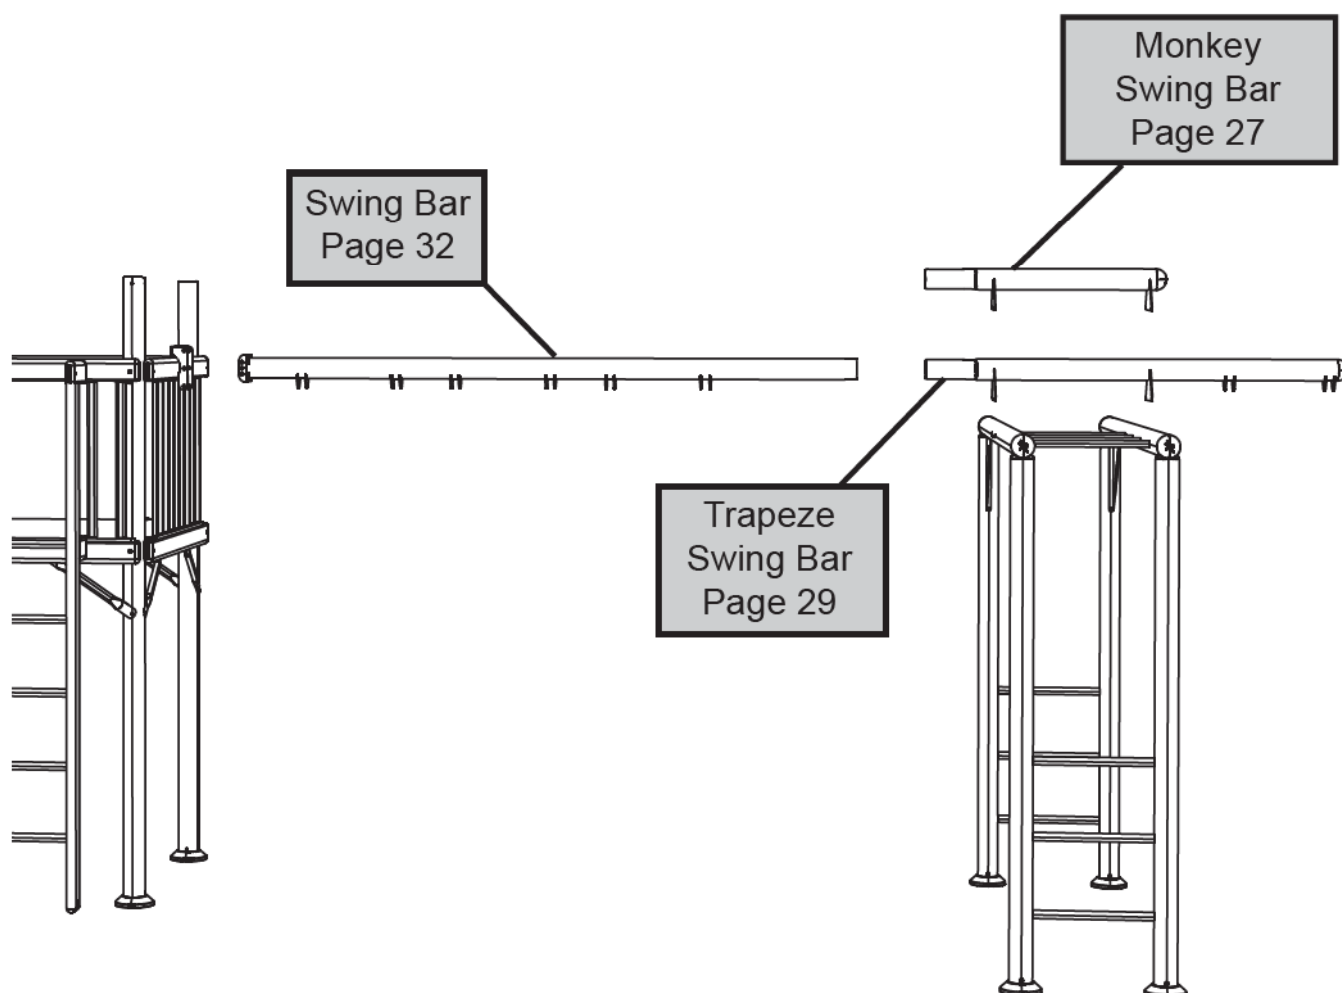


# Monkey Swing Bar Assembly & Attachment

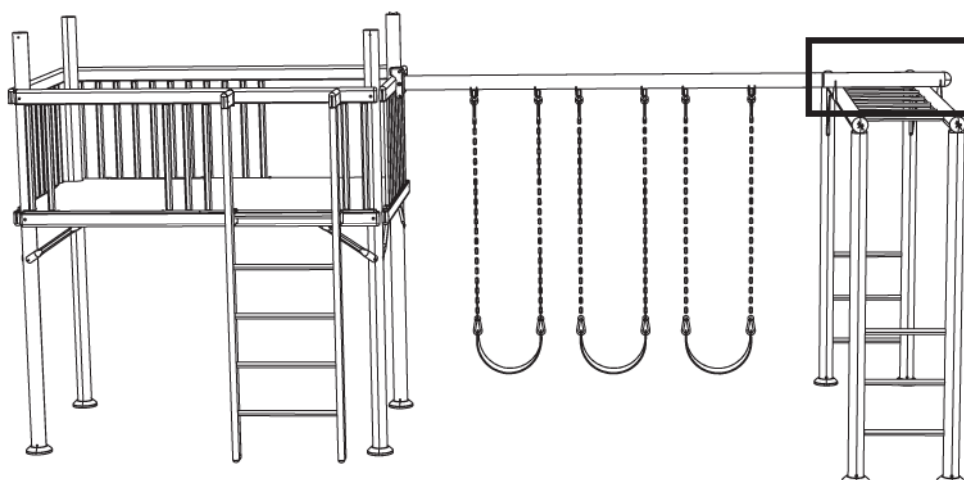

## Hardware List (All Hardware is located in Box 455000 Part #8000372)


ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3/4"	4	☐	8000162	HB	Washer, 5/16" Bonded	4 ☐ 8001161
					HC	Cap, Round End	1 ☐ 8000260

There may be extra hardware in this bag.

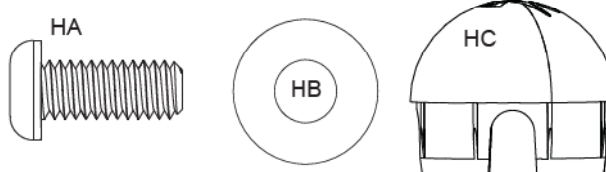

## Parts List (All Parts are located in Box 455000)

ID	Item Description	Qty	✓	Part #
A	Monkey Swing Bar	1	☐	8000295

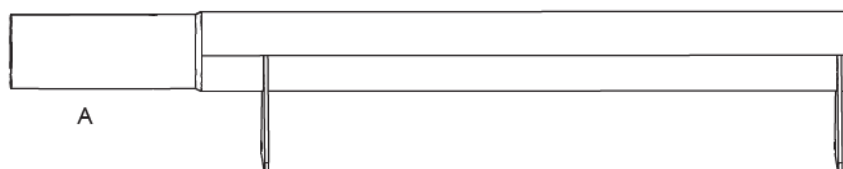


1




Attach the Monkey Swing Bar (A) to the Monkey Bars as shown. Make sure an adult supports the Monkey Bars during assembly. A rubber mallet may be needed to install the Round End Cap (HC). To prevent the Round End Cap from breaking, do not hit the Cap once it is flush with the tube.

Parts for this step are in box 455000

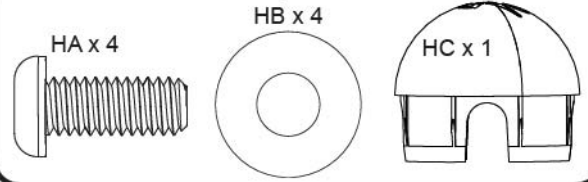


### **CAUTION**

Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.

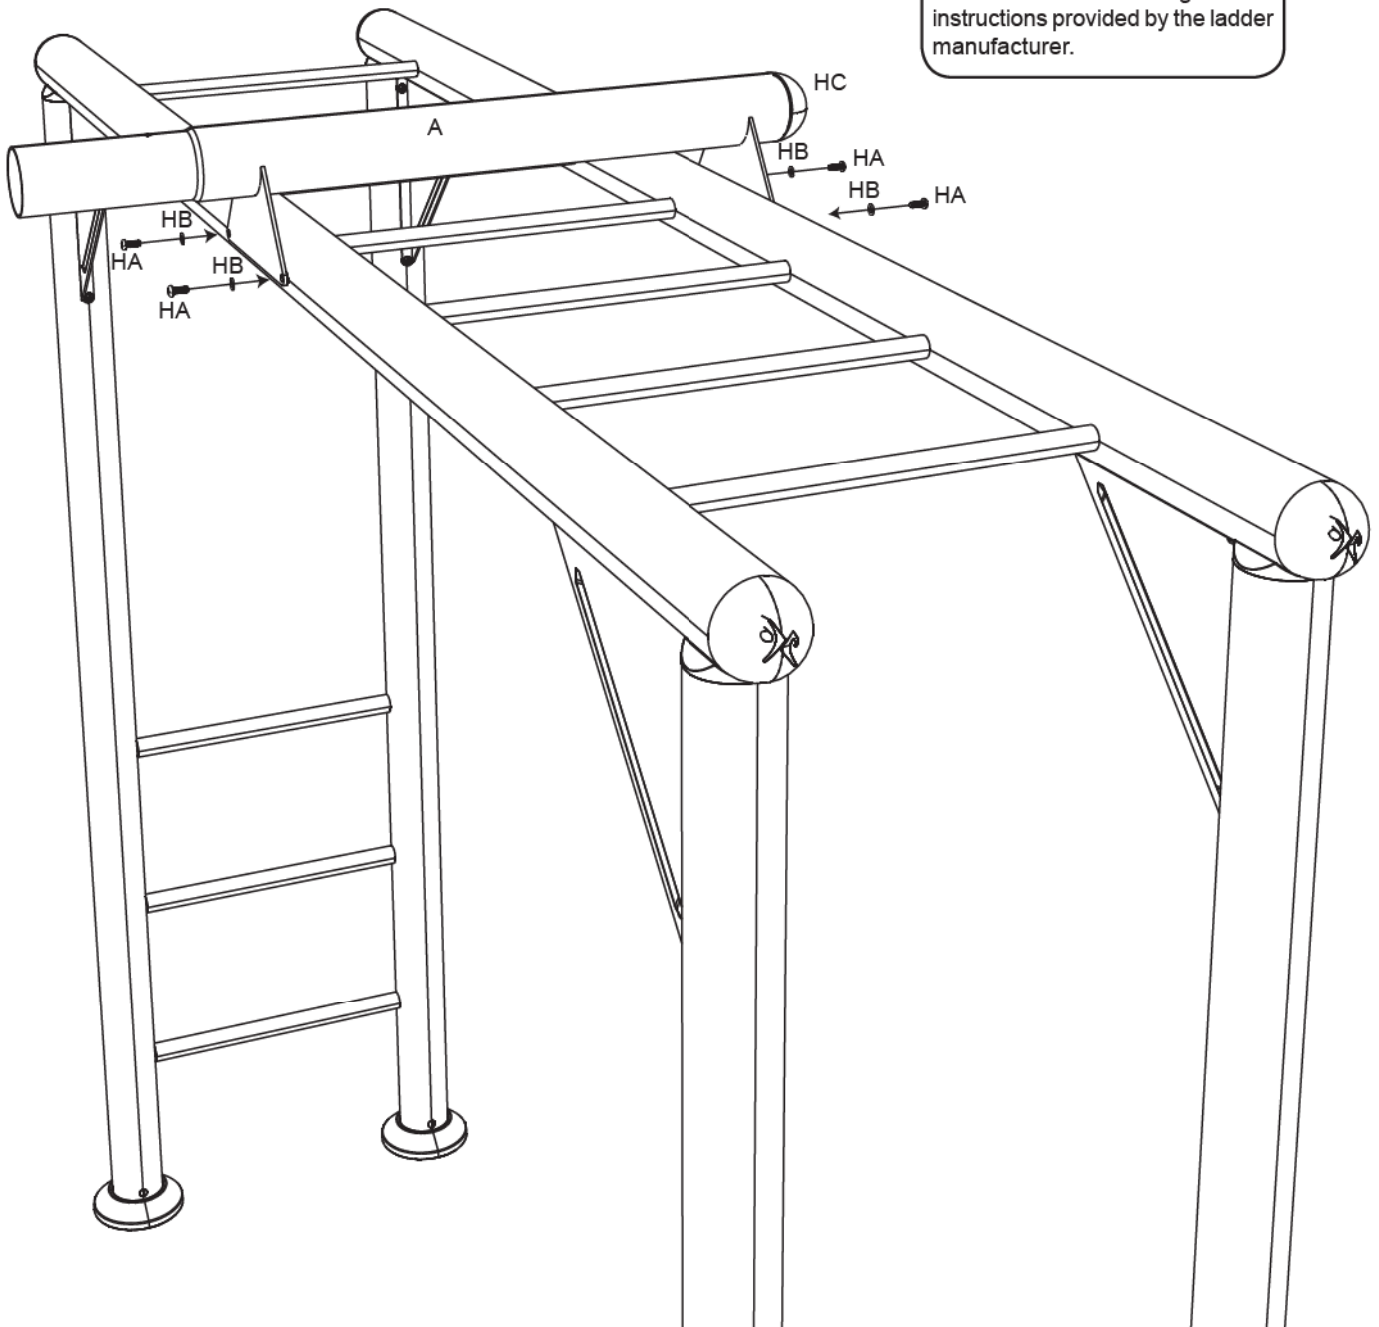




# Trapeze Swing Bar Assembly & Attachment

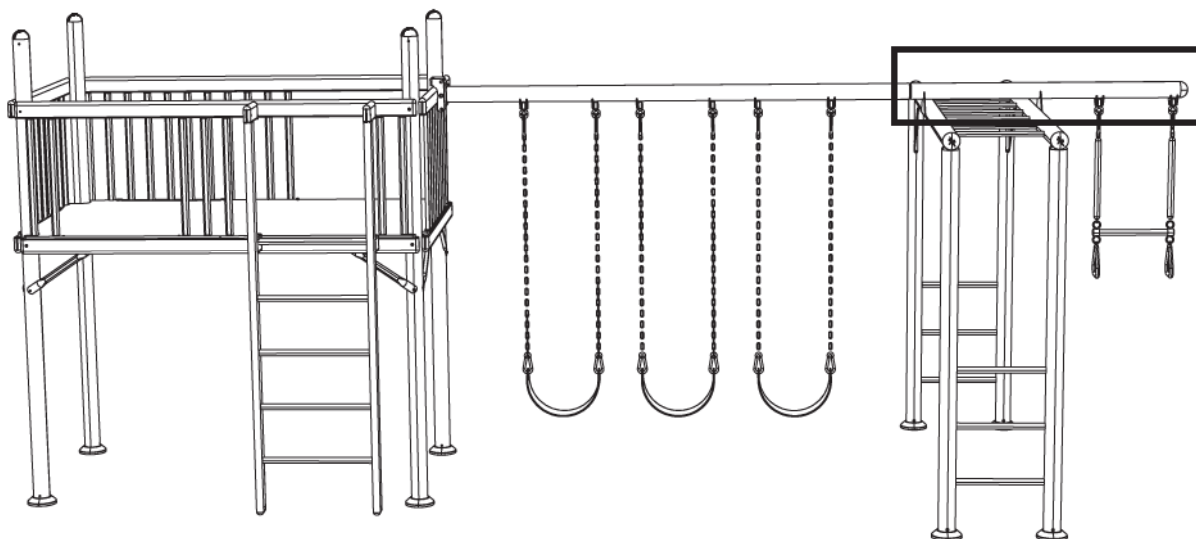

## Hardware List (All Hardware is located in Box 457000 Part #8000306)



ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3/4"	4	☐	8000162	HE	Nut, Acorn 7/16"	2 ☐ 8000170
HB	Washer, 5/16" Bonded	4	☐	8001161	HF	Washer, Small Nylon 7/16"	4 ☐ 8000154
HC	Pendulum	2	☐	8000014	HG	Washer, Large Nylon 7/16"	4 ☐ 8000169
HD	Bolt, 7/16" x 2"	2	☐	8000167	HH	Cap, Round End	1 ☐ 8000260

There may be extra hardware in this bag.

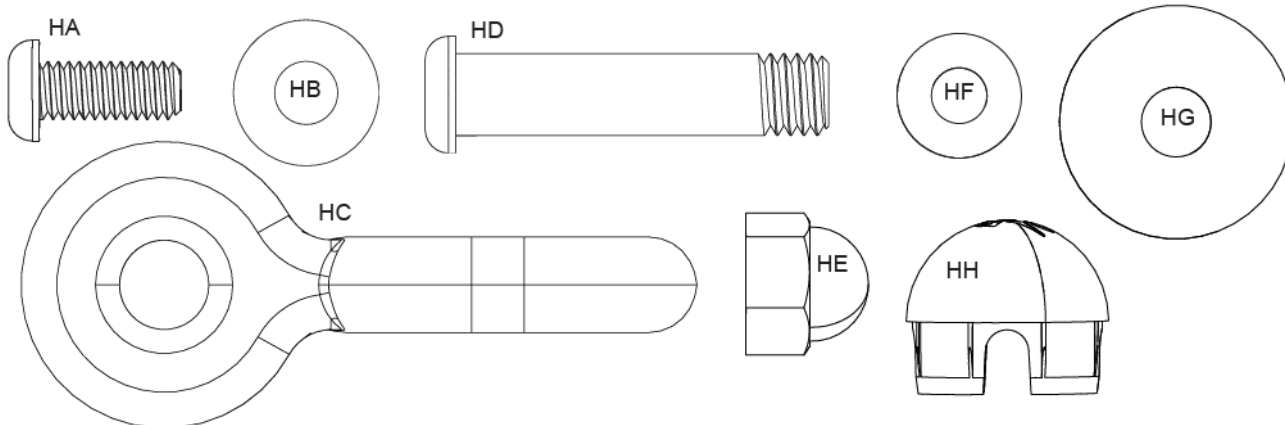


## Parts List (All Parts are located in Box 457000)


ID	Item Description	Qty	✓	Part #			
A	Trapeze Swing Bar	1	☐	8000300	B	Trapeze Swing	1 ☐ 8000020

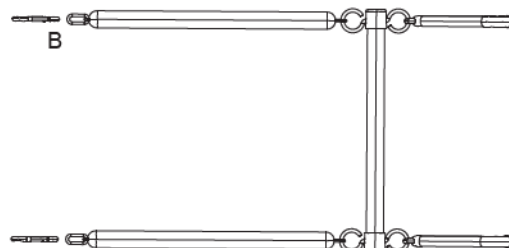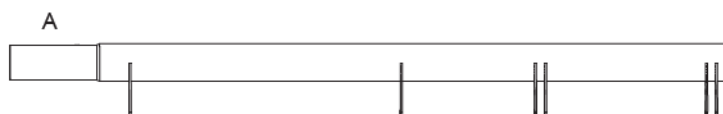

Parts for this step are in box 457000

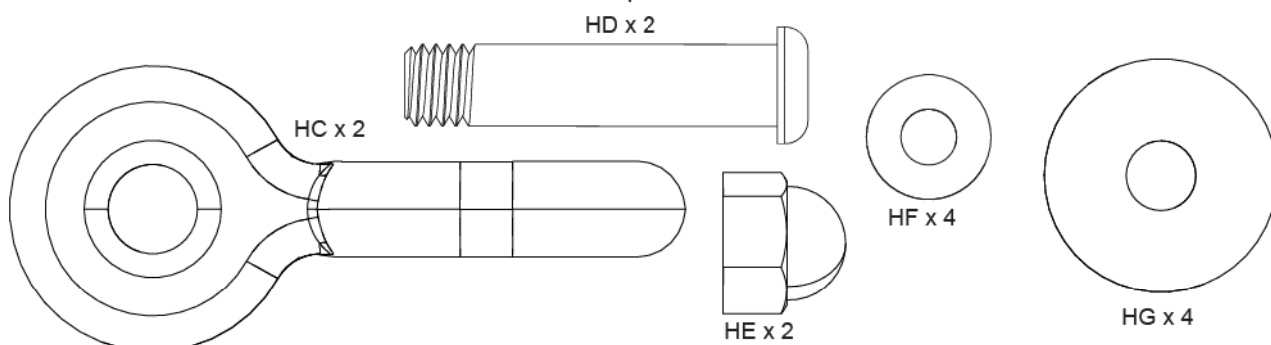

- 1 Attach the hardware shown to the Trapeze Swing Bar (A) while the Trapeze Bar is not attached to the Monkey Bars. Do not over tighten.


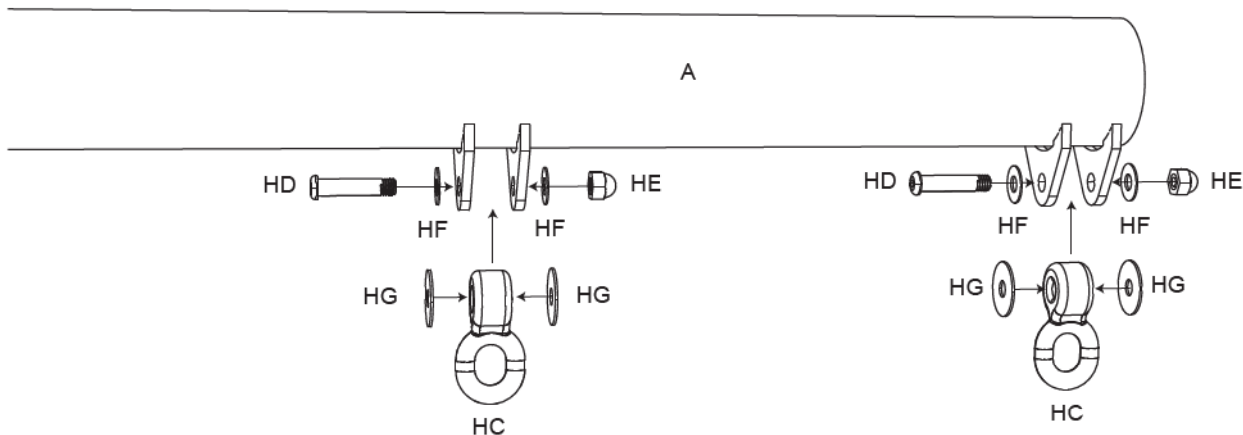


2



Attach the Trapeze Swing Bar (A) to the Monkey Bars as shown. Make sure an adult supports the Monkey Bars during assembly. A rubber mallet may be needed to install the Round End Cap (HH). To prevent the Round End Cap from breaking, do not hit the Cap once it is flush with the tube.


Parts for this step are in box 457000

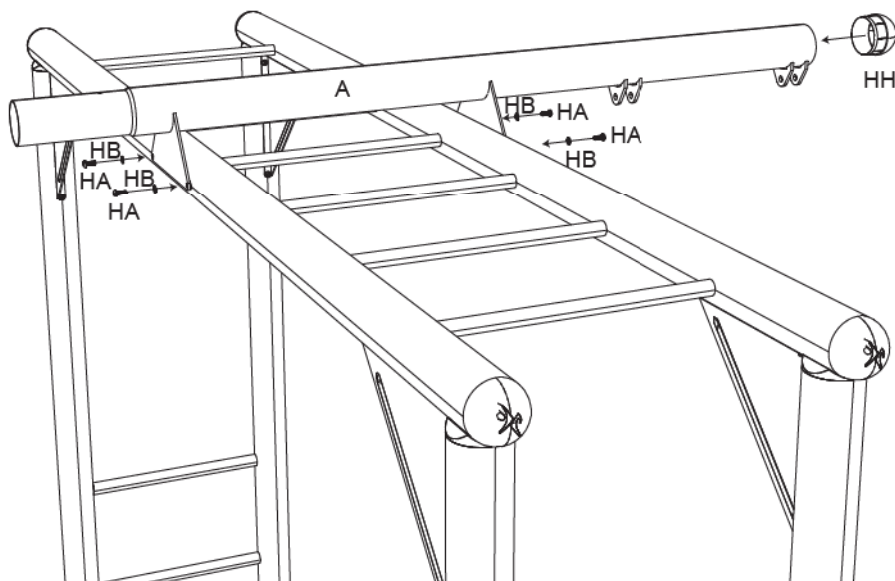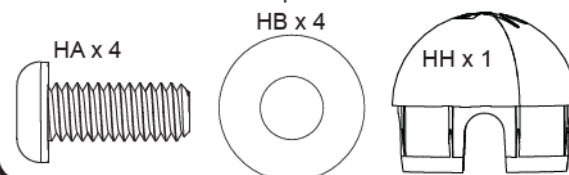

## CAUTION

Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.

Attach the Trapeze Swing (B) to the Trapeze Hardware already attach to the Trapeze Swing Bar (A).

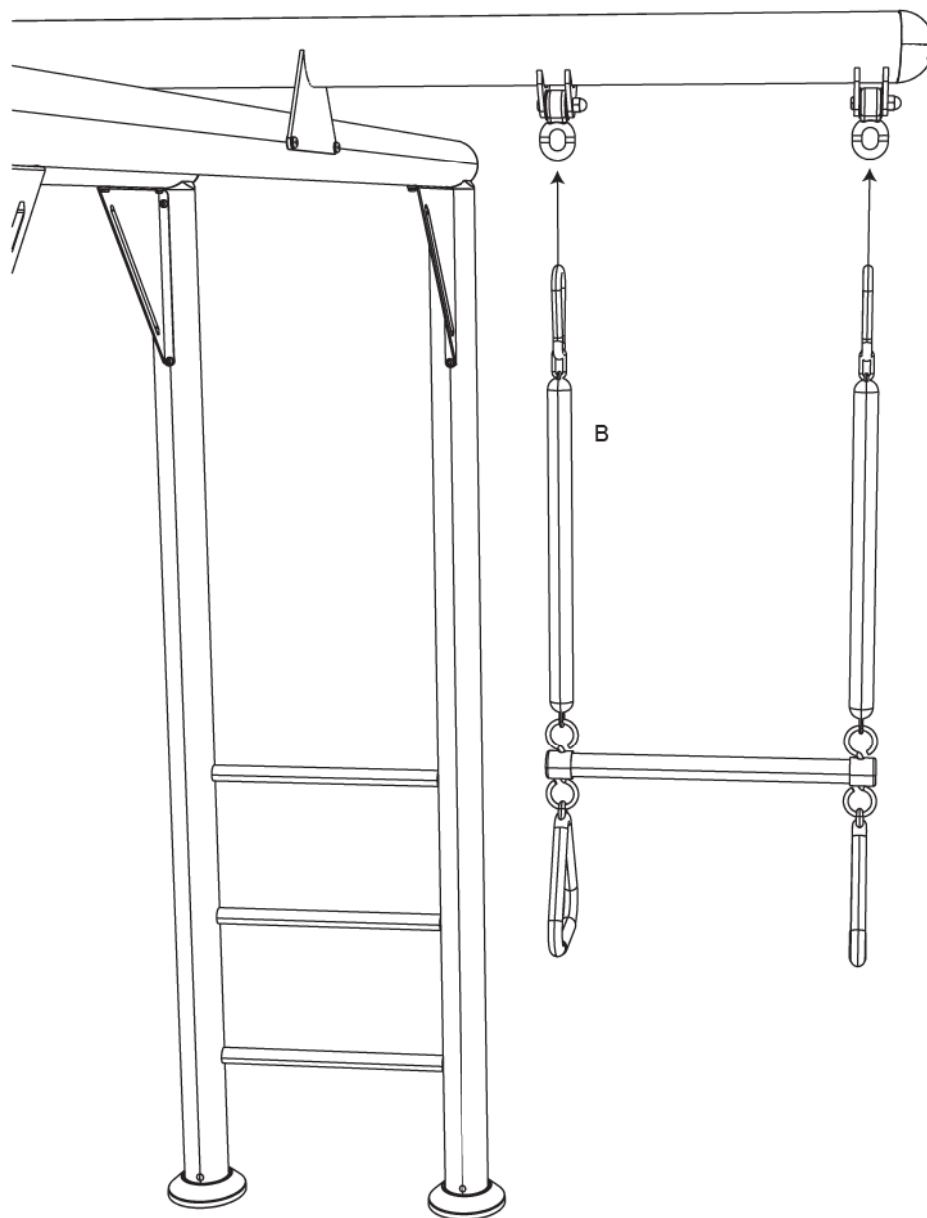


# Swing Bar Assembly & Attachment

## Hardware List (All hardware is located in Box 1056223 Part #1051974)

ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 4"	1	☐	8001834	HF	Nut, Center Lock 1/2"	1 ☐ 8001069
HB	Bolt, Hex 1/2" x 5"	1	☐	8001067	HG	Nut, Acorn 7/16"	6 ☐ 8000170
HC	Nut, Acorn 5/16"	1	☐	8000165	HH	Washer, Large Nylon 7/16"	12 ☐ 8000169
HD	Washer, 5/16" Bonded	2	☐	8001161	HI	Washer, Small Nylon 7/16"	12 ☐ 8000154
HE	Washer, 1/2" Zinc	2	☐	8001068	HJ	Bolt, 7/16" x 2"	6 ☐ 8000167
					HK	Pendulum	6 ☐ 8000014


There may be extra hardware in this bag.

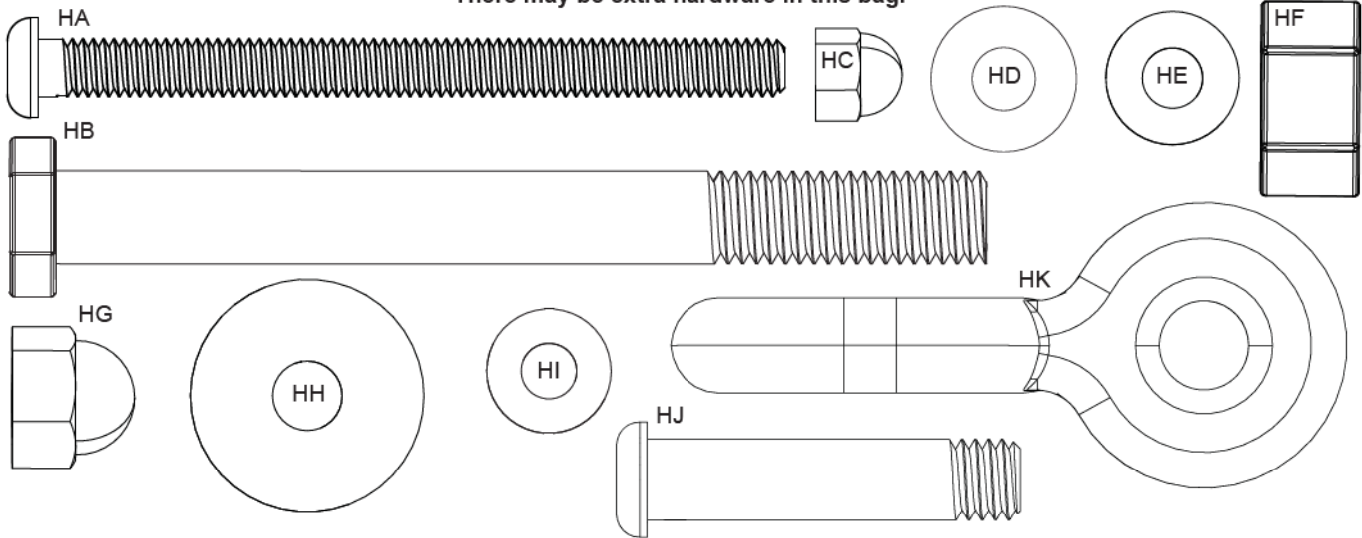

## Hardware List (All hardware is located in Box 1056223 Part #8003504)


ID	Item Description	Qty	✓	Part #			
HL	Bolt, 5/16" x 3/4"	4	☐	8000162	HN	Nut, 5/16" Nylock	4 ☐ 8000209
HM	Washer, 1/4" Zinc	8	☐	8002027	HO	Neoprene Strip 3/4"	2 ☐ 8003138
					HP	Neoprene Strip 4.6"	2 ☐ 8003139

There may be extra hardware in this bag.

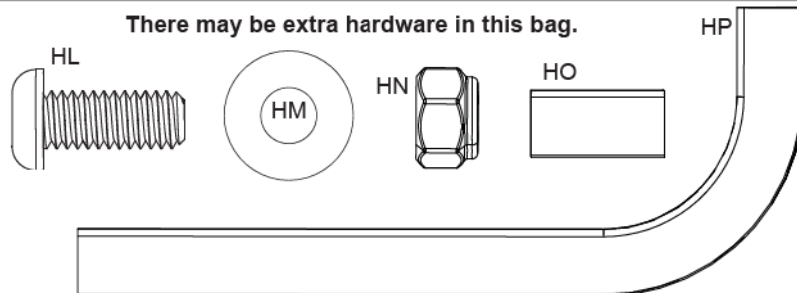


## Parts List (All Parts are located in Box 1056223)


ID	Item Description	Qty	✓	Part #			
A	Swing Bar, 3 Swing	1	☐	1056225	C	Bracket, Swing to D-Tube	1 ☐ 1056224
B	Belt Swing	3	☐	8001497	D	Plate, Swing to D-Tube	1 ☐ 1056226

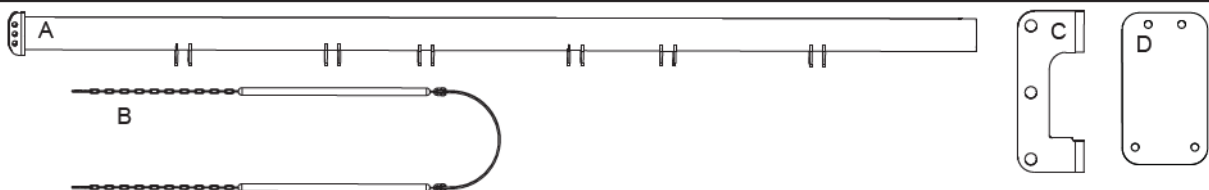

Parts for this step are in box 1056223

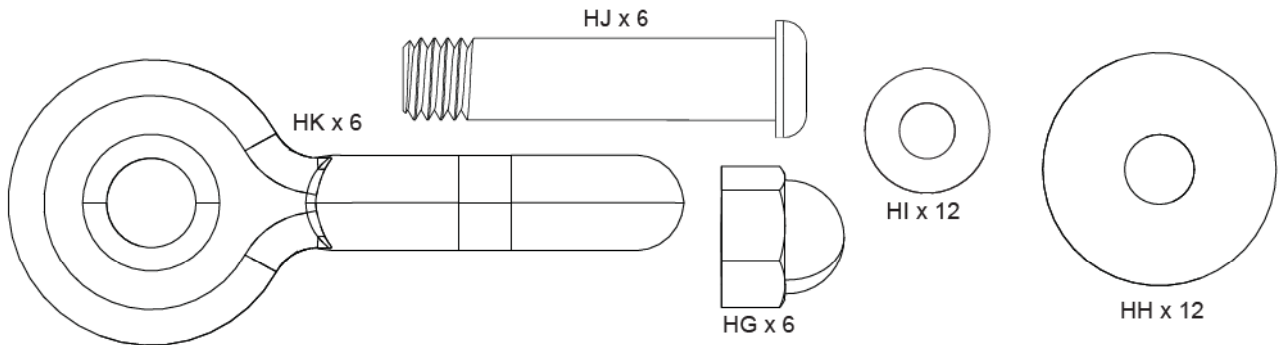




- 1 Attach the Swing hardware to the Swing Bar (A) while the Swing Bar is still on the ground. Do not over tighten.

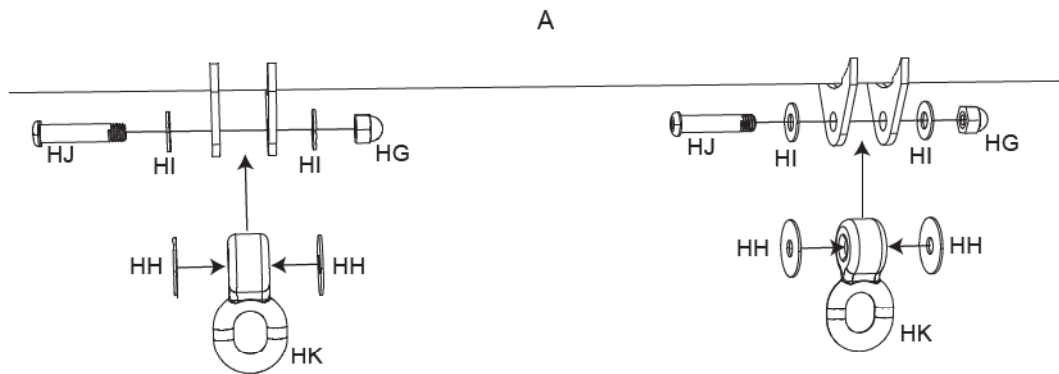

2

Attach the Neoprene Strips (HO, HP) to the Bracket (C). Make sure the strips are secured in place before the bracket is used in the next step




Parts for this step are in box 1056223

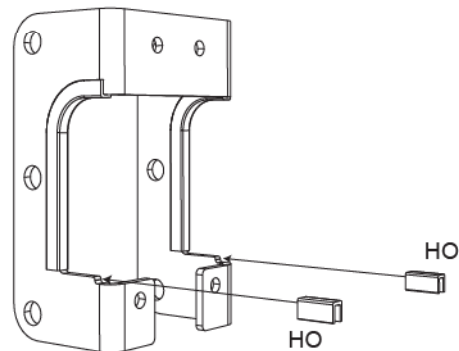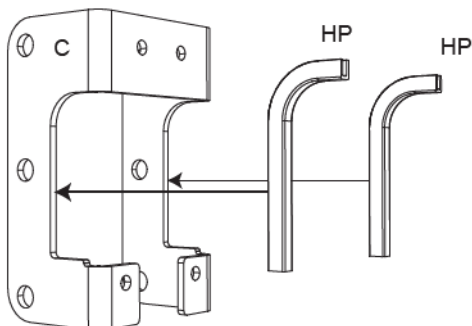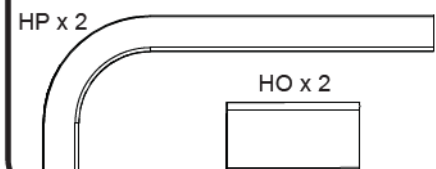



3

Make sure the Bracket (C) is placed on to a D-Tube with the D-Tube fitting into the opening of the Bracket as shown. Bring the Plate to the Bracket and line up the holes in the Plate (D) with the holes in the Bracket (C).

Parts for this step are in box 1056223

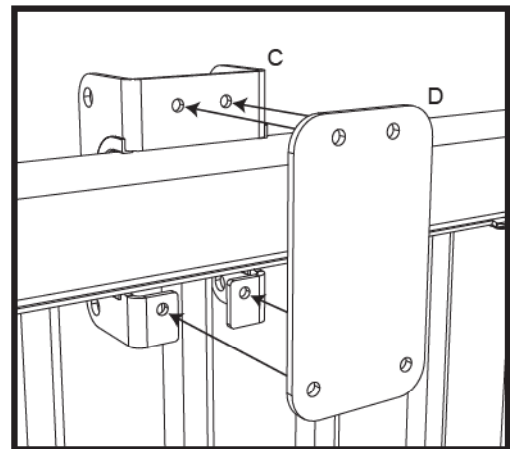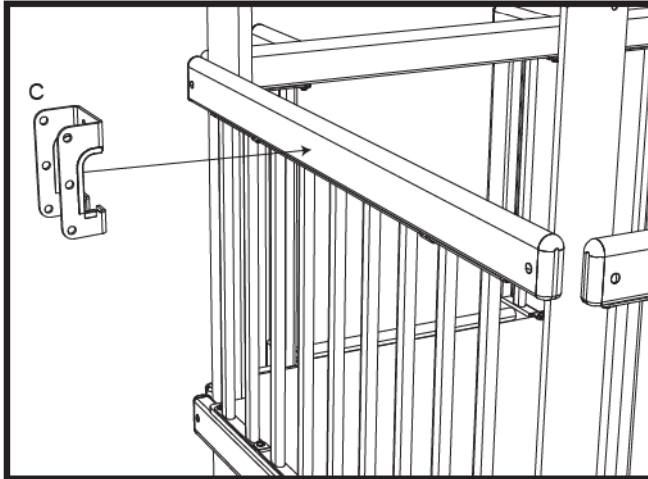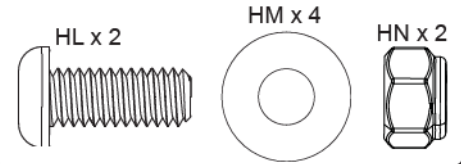

Secure the Bracket (C) and Plate (D) using the hardware shown.

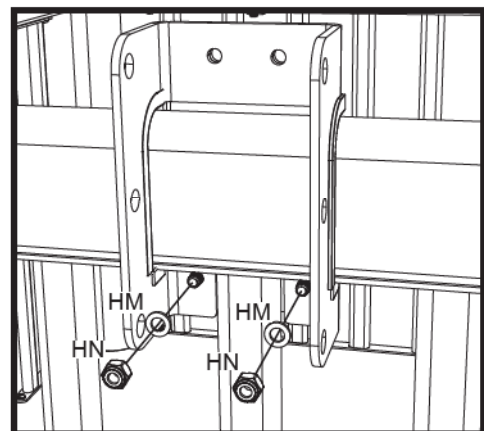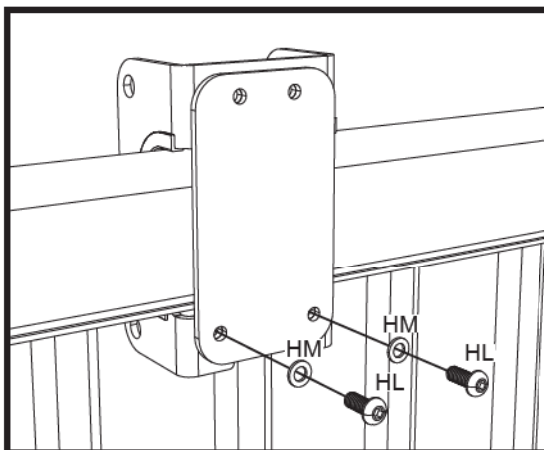





**Note: If a Steering Wheel was purchased with the Swing Bar, skip to Page 60.**

4

Secure the top part of the Bracket (C) with the hardware shown

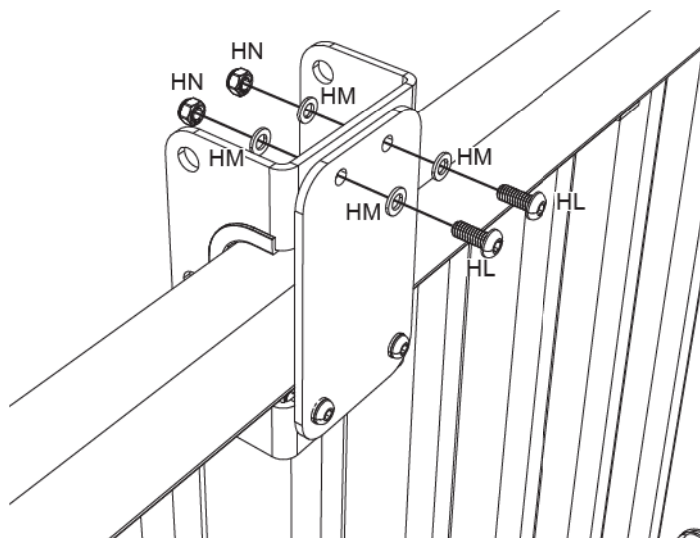


Parts for this step are in box 1056223

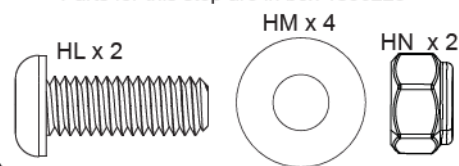

5




Carefully lift the Swing Bar (A) between the Clubhouse and the Monkey Bars.

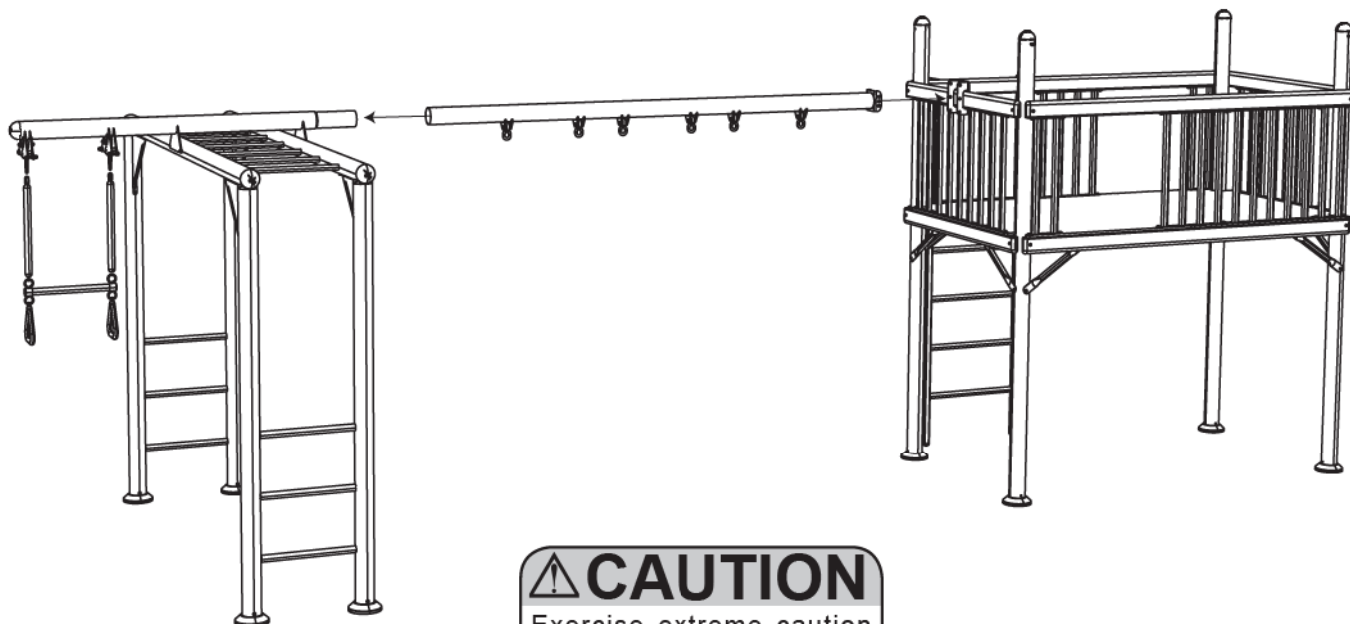

**CAUTION**

Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.



Parts for this step are in box 1056223

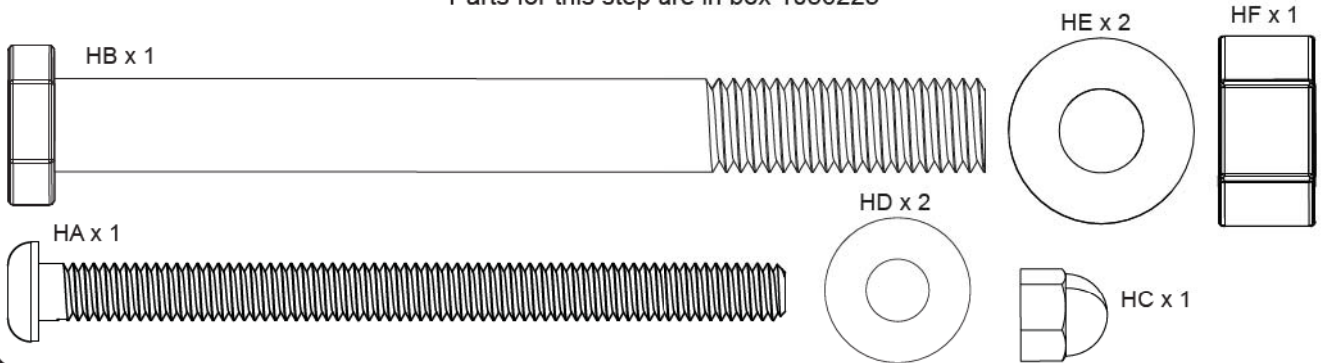

6




Bring the Swing Bar (A) to the Bracket (C) on the D-Tube, and attach the end of the Swing Bar to the Bracket. Secure with the hardware shown. Insert the other end of the Swing Bar (A) into the attachment on the Monkey Swing Bar or the Trapeze Swing Bar, and secure with the hardware shown. To align the Swing Bar with the Monkey Swing Bar, move the Monkey Bars to the appropriate location.

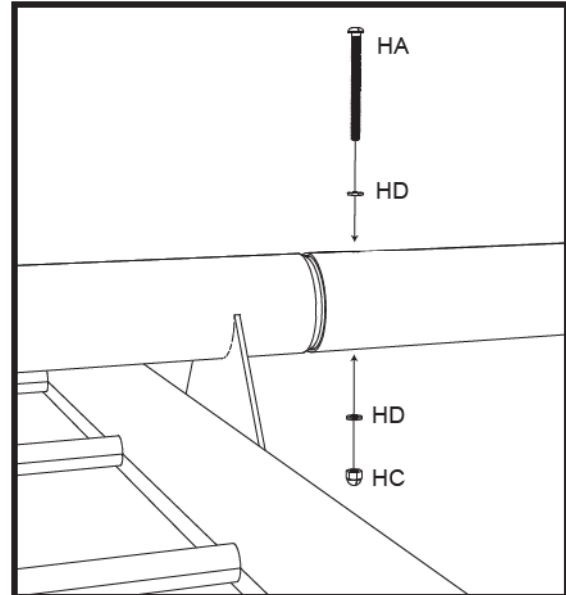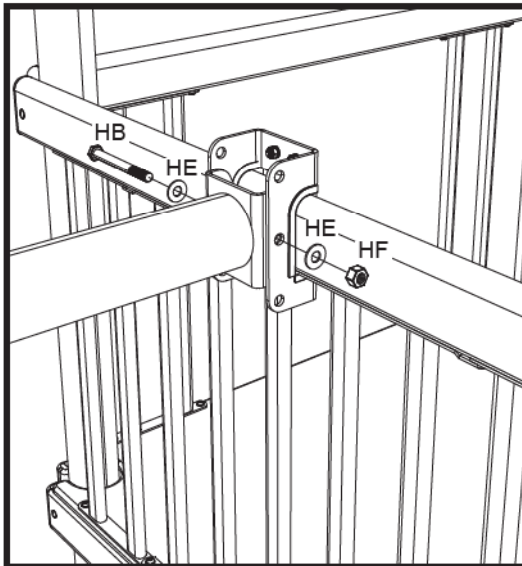

7

Attach the Swings (B) to the Swing Hardware already attach to the Swing Bar (A).

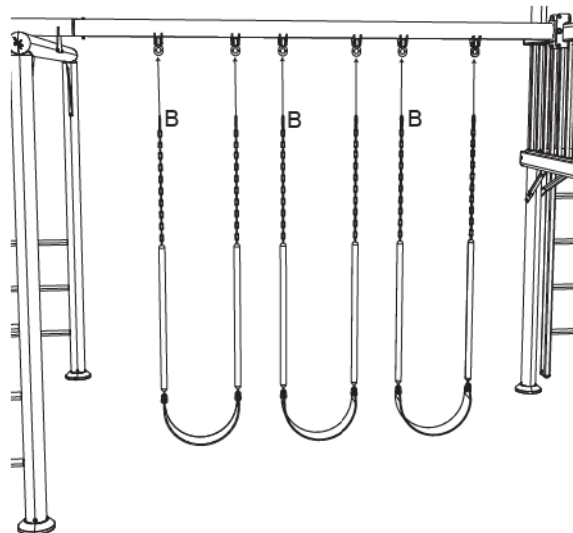

Parts for this step are in box 1056223

# SECTION 4


## Roof Assembly

Earth Tone Boxes: 1056199, 1056195, 430501

### Hardware List (All Hardware is located in Box 1056199 Part #8003575)

ID	Item Description	Qty	✓	Part #				
HA	Bolt, 5/16" x 3/4"	12	☐	8000162	HF	Screw, 1/4" x 1"	12	☐ 8000668
HB	Bolt, 5/16" x 1 1/4"	4	☐	8000163	HG	Screw, #10 x 3/4"	10	☐ 8000347
HC	Washer, 1/4" x 1/2"	10	☐	8000424	HH	Nut, Acorn 5/16"	4	☐ 8000165
HD	Washer, 5/16" Bonded	20	☐	8001161	HI	Cap, Cradle	4	☐ 8000264
HE	Screw, #14 x 1/4"	48	☐	8000350	HJ	Cap, Roof Pole 1 1/2"	8	☐ 8001087
					HK	Cap, Round End (Box 1056163)	4	☐ 8000260

There may be extra hardware in this bag.

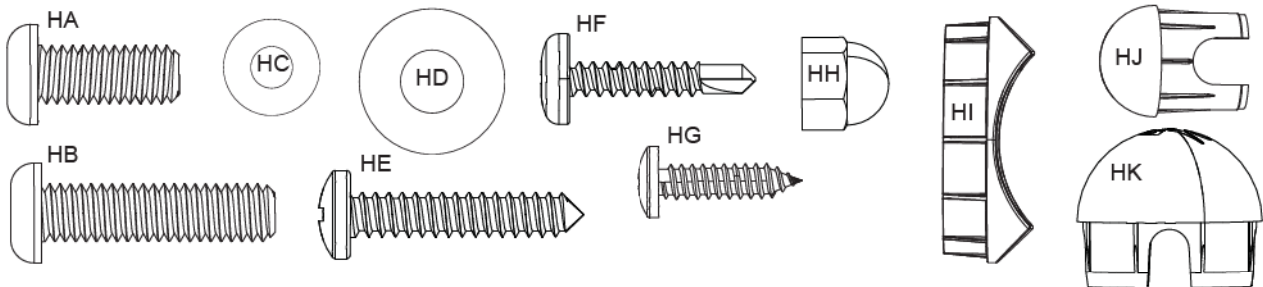


### Parts List (All Parts are located in Box 1056199, 1056195, & 430501)

ID	Item Description	Qty	✓	Part #				
A	Roof Pole	2	☐	1056201	C	Roof Panel	4	☐ 8002550
B	Roof Truss	8	☐	8002542	D	Gable	2	☐ 8000135
					E	Gable Vent	2	☐ 8000136

A


Box 1056199

 B




Box 1056195

C

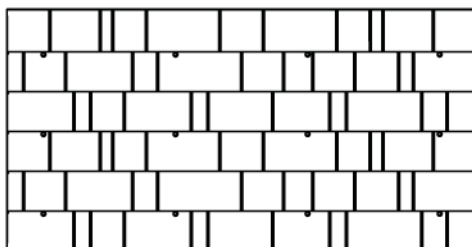

Box 430501

D

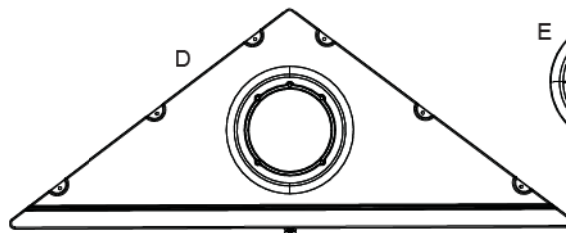

E





1

Insert a Cradle Cap (HI) into each Corner Pole.

Parts for this step are in box 1056199

HI x 4

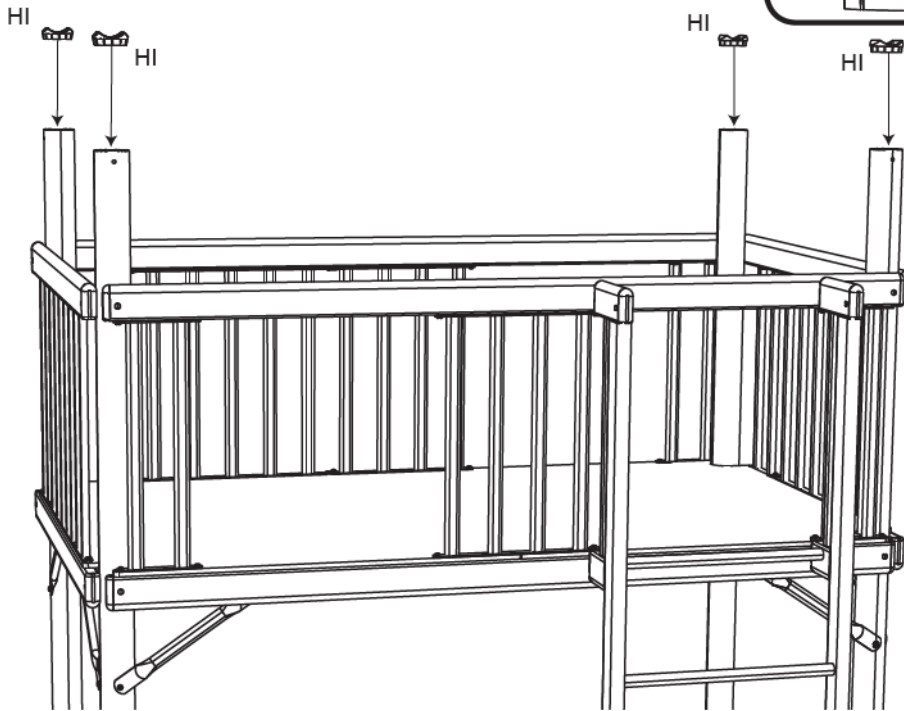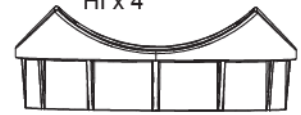

2





Attach the ends of Roof Poles (A) to the Corner Poles of the Clubhouse. Secure with the hardware shown. Make sure the end of the Roof Poles are even with the Corner Poles, and then tighten each Bolt evenly until they are completely secure.


Parts for this step are in box 1056199

HD x 4

HB x 4

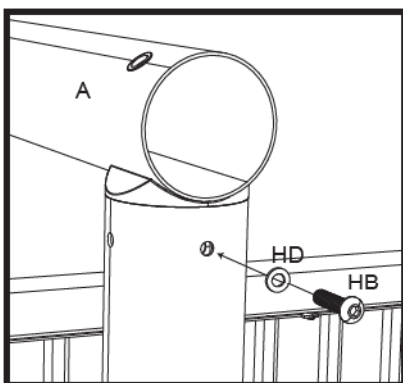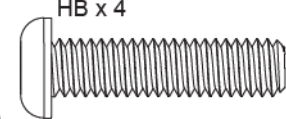

The holes face up and out.

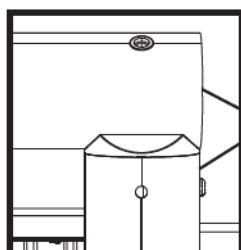

The Roof Pole and Corner Pole must be even after the Bolts are tightened.





3

Insert a Round End Cap (HK) into the end of each Roof Pole (A).

**Use the Round End Caps (HG) provided with the Clubhouse assembly in Box 1056163 to complete this step.**

Parts for this step are in box 1056163

HK x 4

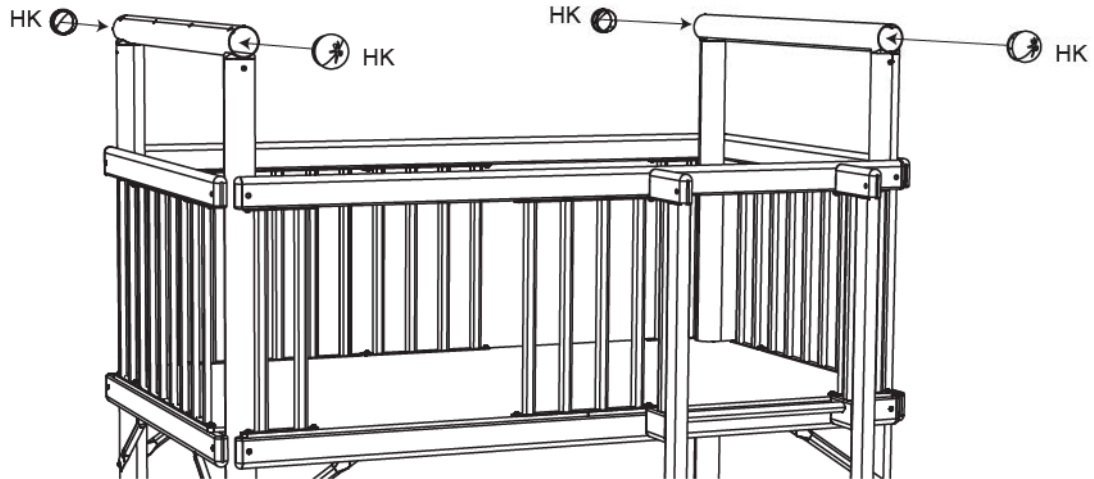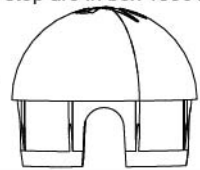

4



Attach two Roof Trusses (B) together with the hardware shown.




**Repeat this step for all eight Trusses.**

Parts for this step are in box 1056199

HD x 2

HA x 1

HH x 1

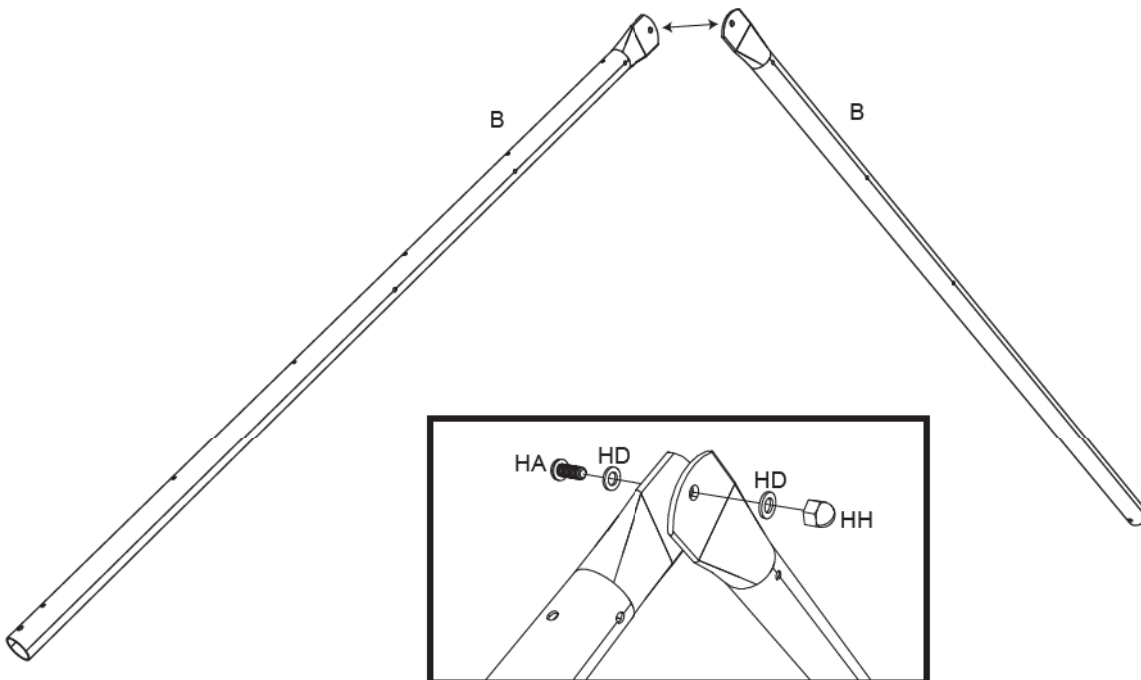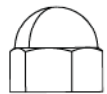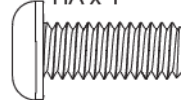

5

Attach the Gable Vent (E) to the Gable (D), and secure with the hardware shown.



*To prevent the Screws from going through the plastic, do not overtighten.  
Use a #2 Phillips Screwdriver.*

Repeat this step to assemble the other Gable.

Parts for this step are in box 1056199

HG x 5

HC x 5

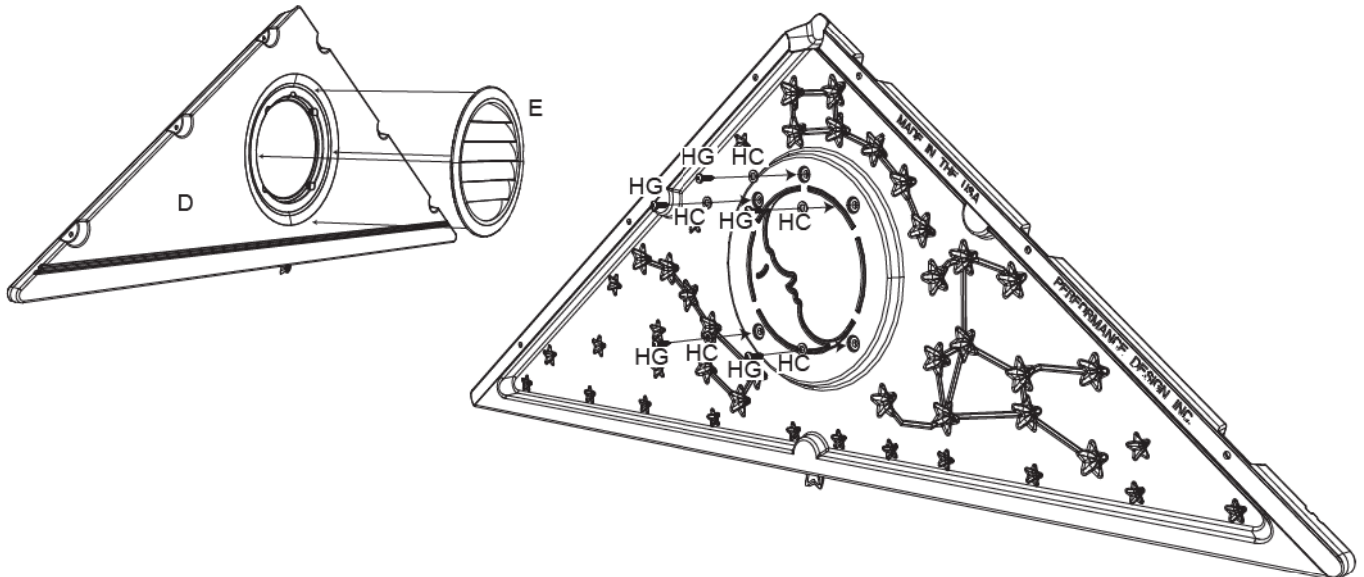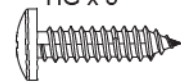

6



Attach the Gable (D) to one of the assembled Roof Trusses (B).

*To prevent the Screws from going through the plastic, do not overtighten.  
Use a #3 Phillips Screwdriver.*

Repeat this step to attach the other Gable to an assembled Roof Truss.

Parts for this step are in box 1056199

HF x 6

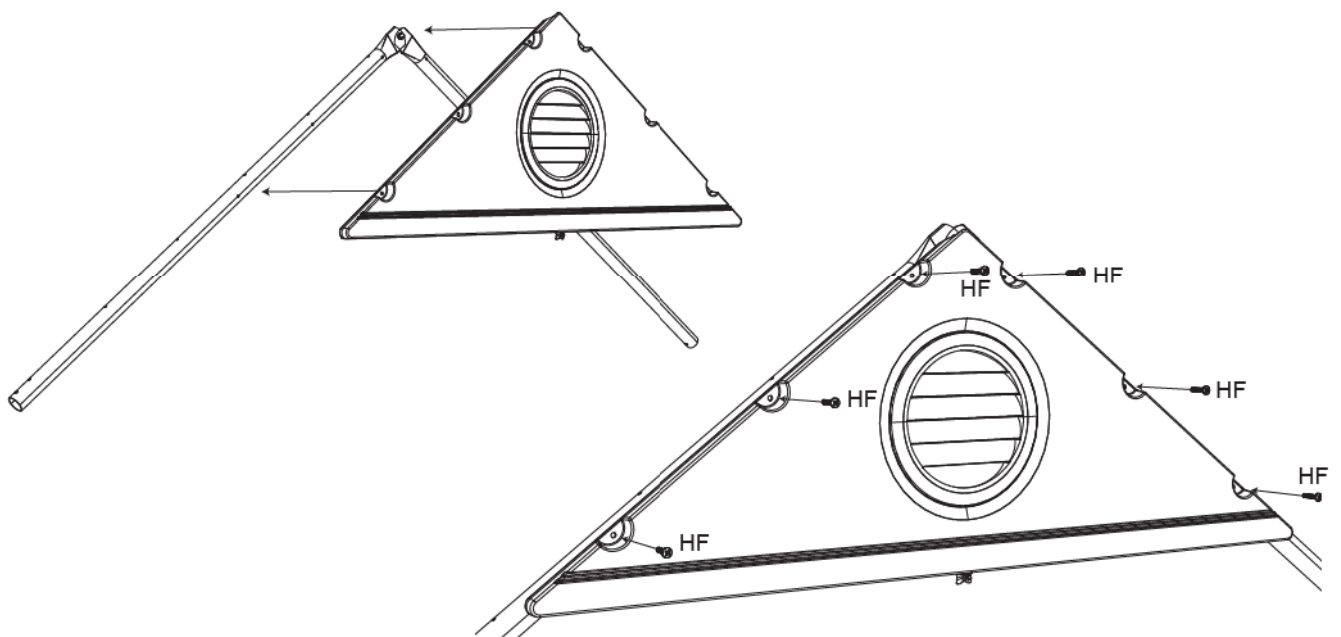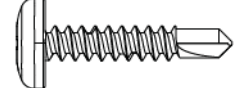




7





Attach the assembled Roof Trusses (B) to the Roof Poles (A) with the hardware shown. Make sure the Roof Trusses that are attached to the Gables are placed on both ends of the Clubhouse.

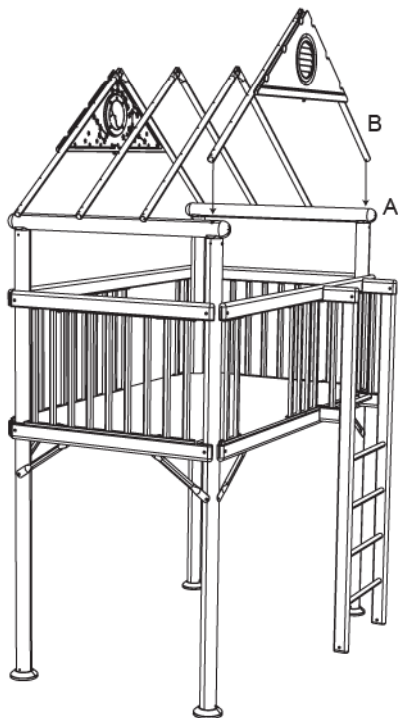

Parts for this step are in box 1056199

HA x 8

HD x 8

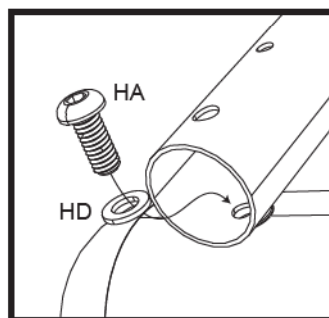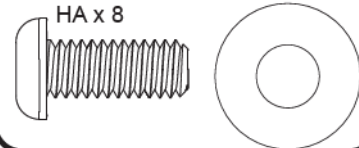

## WARNING




To prevent serious injuries from falls, do not step over or stand on the Railings. Stay on the Deck at all times while working in the Clubhouse.

8

Place the Roof Pole Caps (HJ) into the ends of the Roof Trusses.


Parts for this step are in box 1056199

HJ x 8

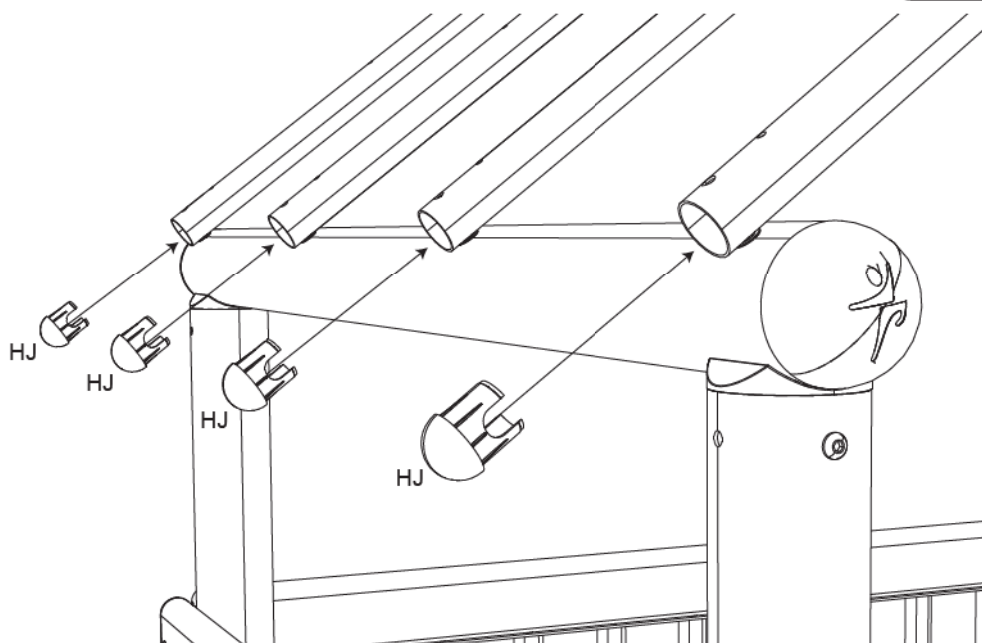


Attach the Roof Panels (C) to the Roof Trusses (B) and secure as shown. The notch at the top of the panel will line up with the top of the truss.

*To prevent the Screws from going through the plastic, do not overtighten. Use a #3 Phillips Screwdriver.*

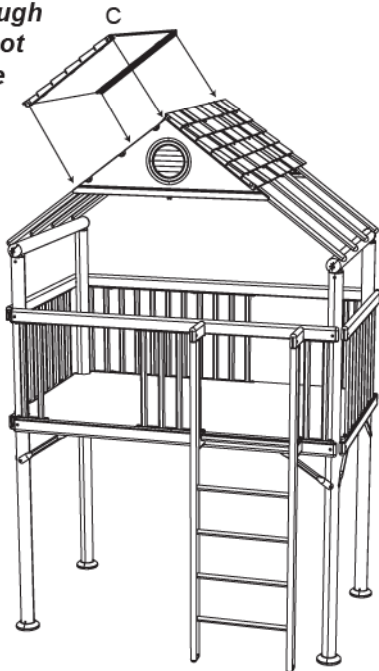


Parts for this step are in box 1056199

HE x 48



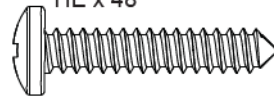


The Roof Panels (C) placed on top need to have a notch as shown.

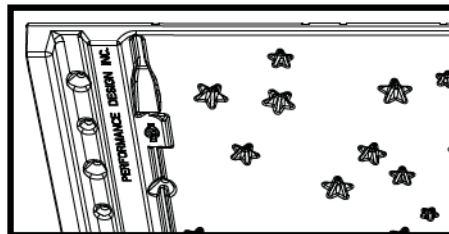

## CAUTION

Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.

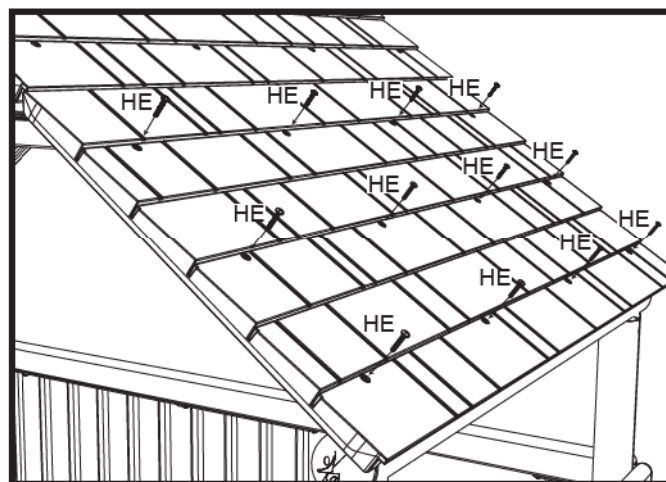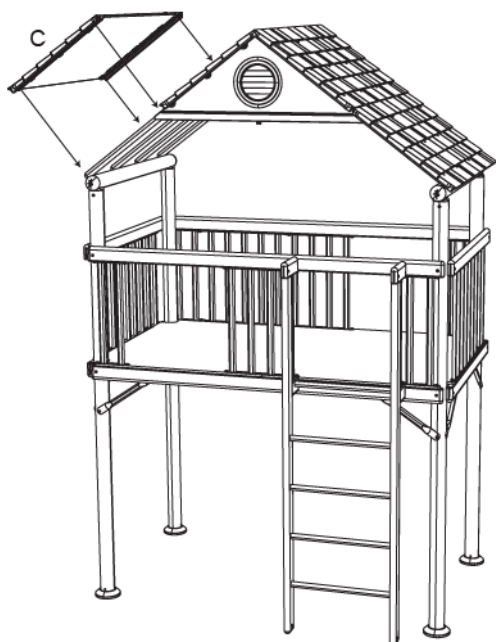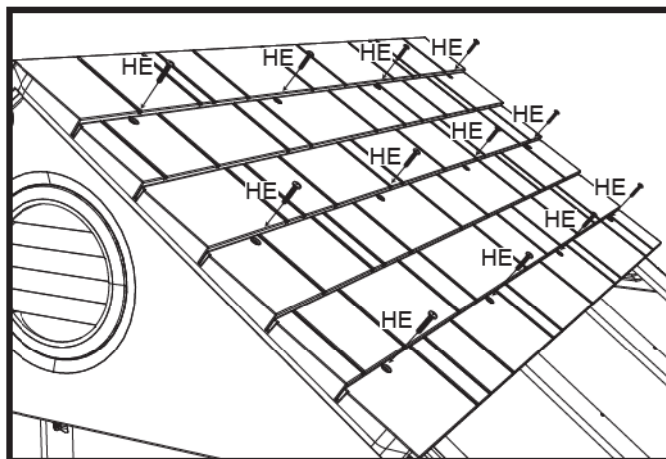

# SECTION 5


## Picnic Table Assembly

Earth Tones Box: 1056218

### Hardware List (All Hardware is located in Box 1056218 Part #8002042)




ID	Item Description	Qty	✓	Part #
HA	Screw, 1/4" x 1"	4	☐	8000668

There may be extra hardware in this bag.

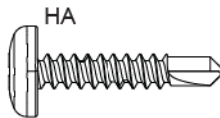

### Parts List (All Parts are located in Box 1056218)

ID	Item Description	Qty	✓	Part #				
A	Table Top	1	☐	8000271	C	Table Leg	2	☐ 1056220
B	Table Bench	2	☐	8000272	D	Support Tube	6	☐ 1056221

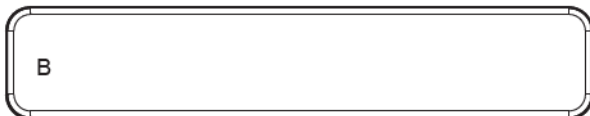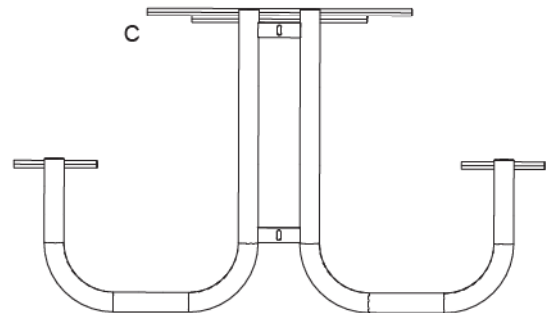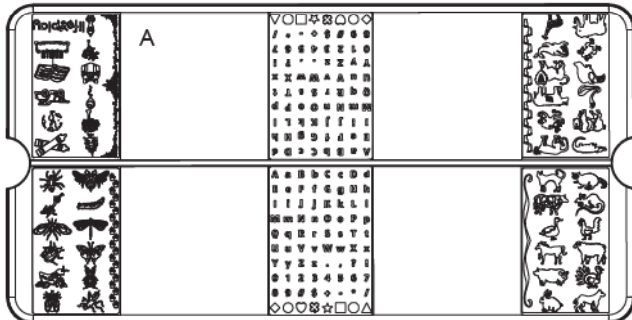

### WARNING





The Picnic Table is not intended to be a stand alone unit. Do not use until completely attached to the main unit as instructed.

1



Remove the hardware from one of the Support Tubes (D) in the Table Bench (B) and remove the Support Tube.

**Save the hardware that was removed. It will be re-installed with the Support Tube later in the assembly.**

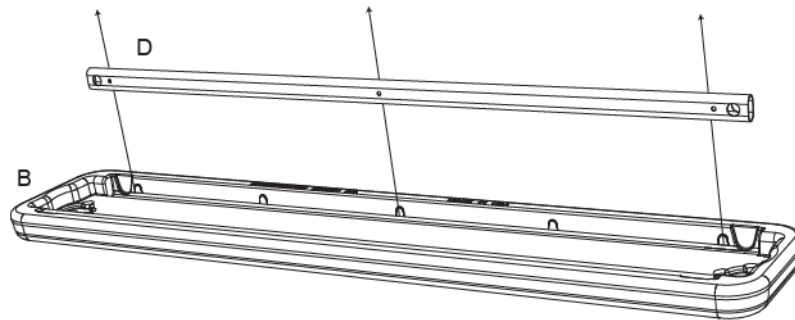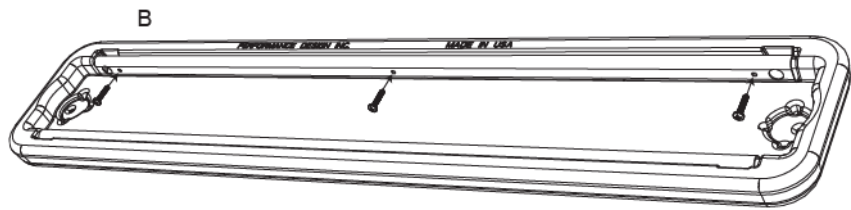

2


Insert the Table Legs (C) at an angle into the remaining Support Tube (D) of the Table Bench (B) as shown. Place the Support Tube (D) removed in step 1 from the Table Bench onto the Table Legs (C) as shown.

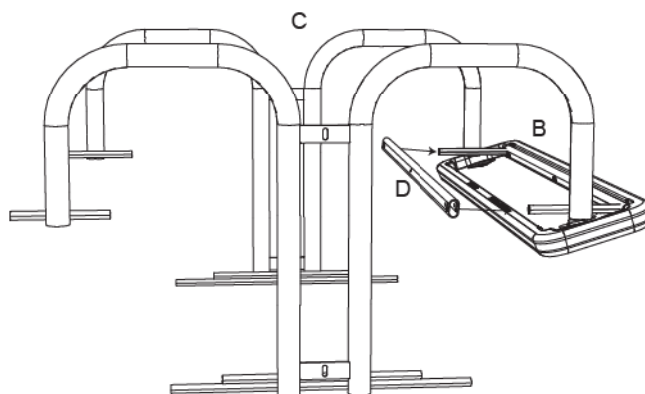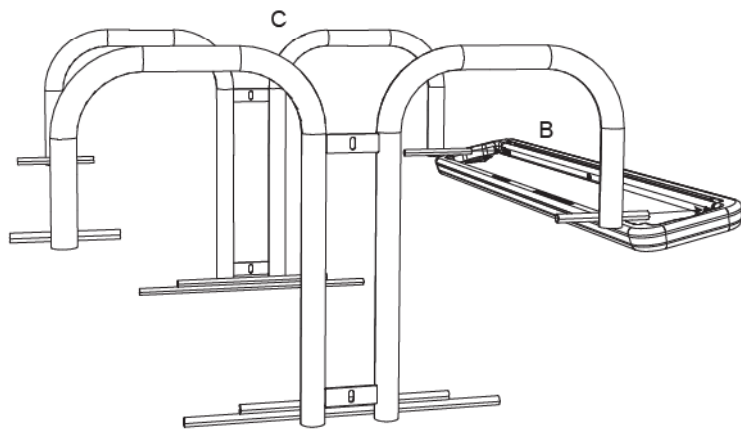

3

Lower the Table Legs (C) and Support Tube (D) back to the Table Bench (B). Reattach the Support Tube (D) to the Table Bench (B). Secure with the hardware removed in step 1.



**Repeat steps 1 through 3 to attach the other bench to the opposite side.**

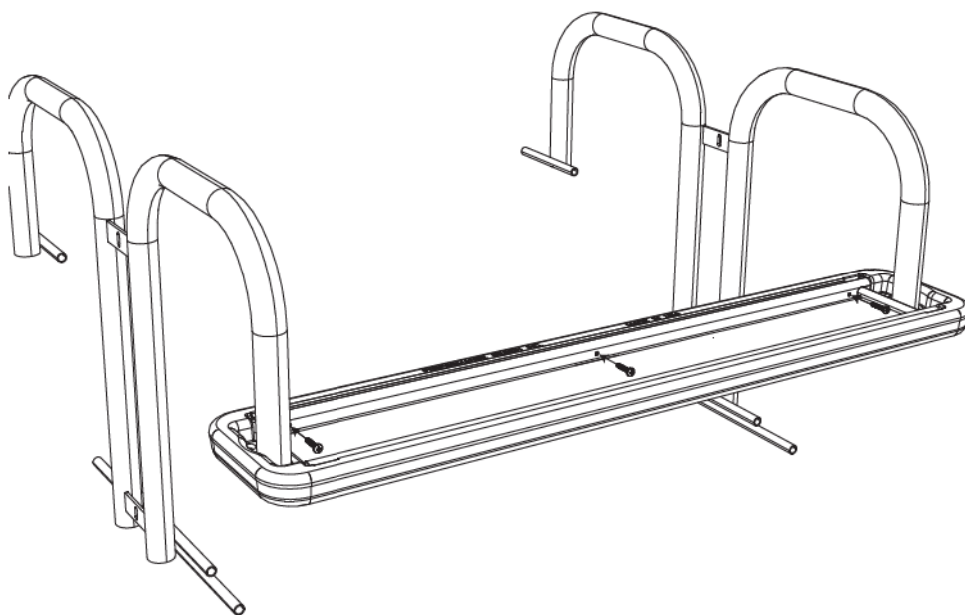

4


Remove the Hardware from one of the Support Tubes (D) in the Table Top (A) and remove the Support Tube.

**Save the hardware that was removed. It will be re-installed with the Support Tube later in the assembly.**

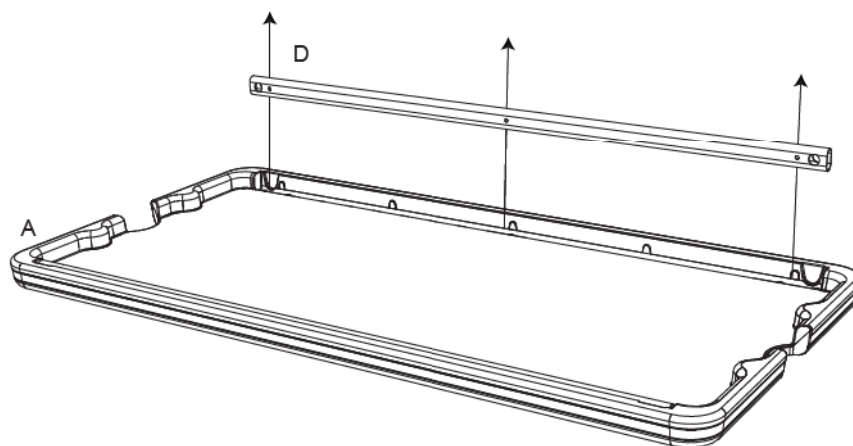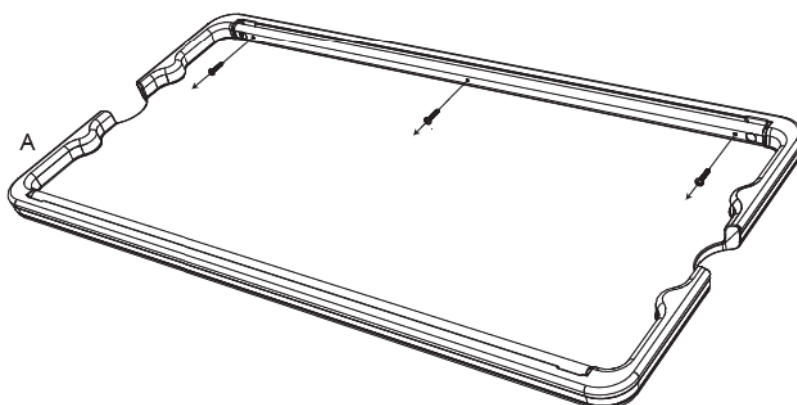


5

Place the Support Tube (D) removed in step 4 from the Table Top onto the Table Legs (C) as shown.

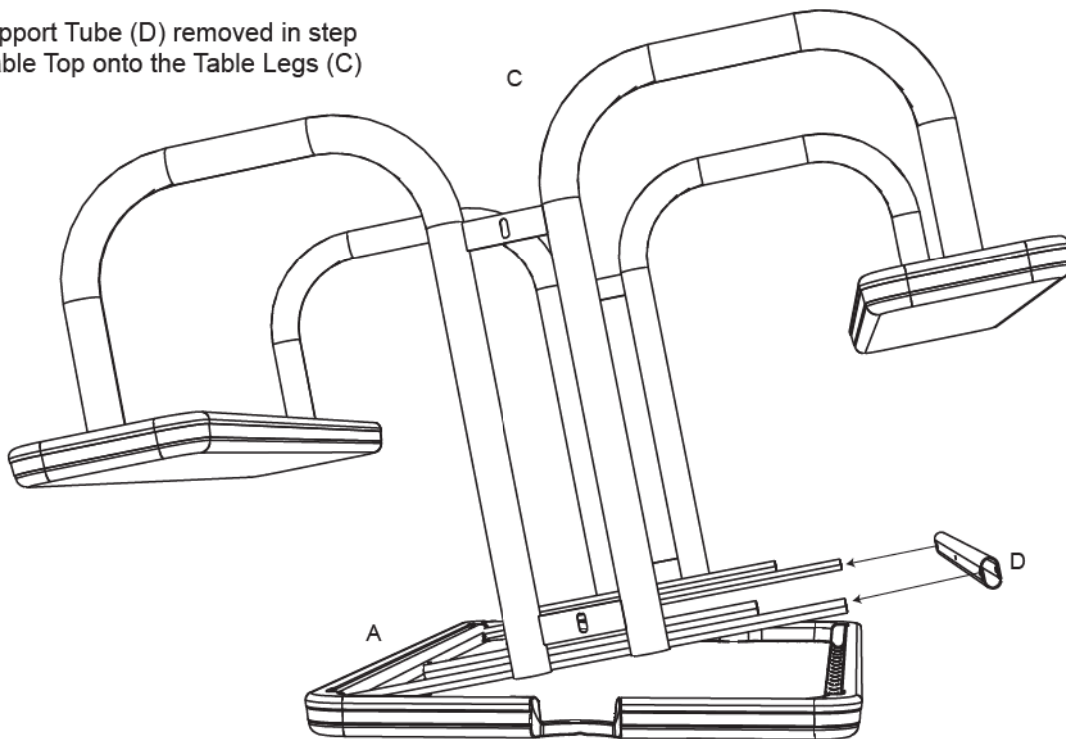

6

Lower the Table Legs (C) and Support Tube (D) back to the Table Top. Reattach the Support Tube (D) to the Table Top (A). Secure with the hardware removed in step 4.

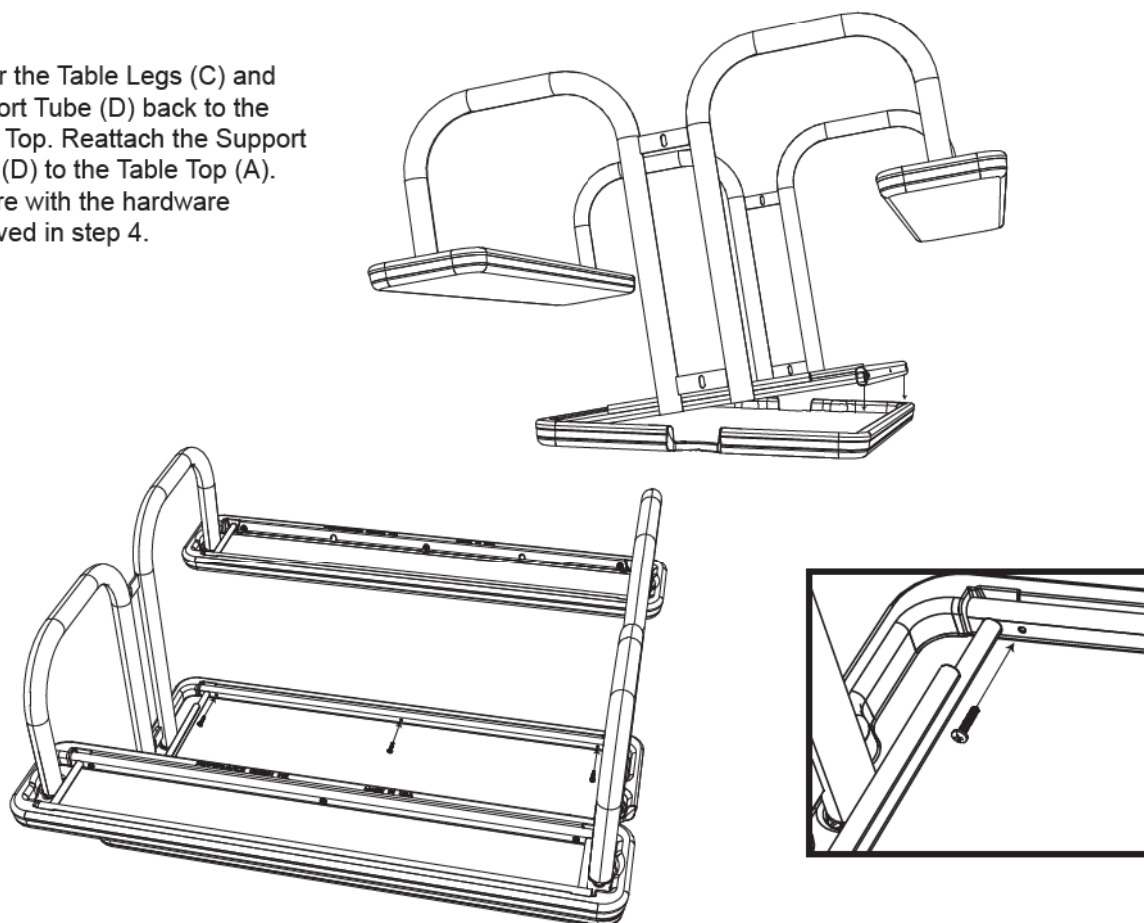




7

Place the Picnic Table between the Corner Poles of the Clubhouse by tilting the Picnic Table. Once one of the ends of the Table Bench is through, tilt the Table to get the other end of the Table Bench between the Corner Poles.

Be careful not to scrape the powder coating while installing the Picnic Table.

See page 63 for examples of correct and incorrect accessory placement.

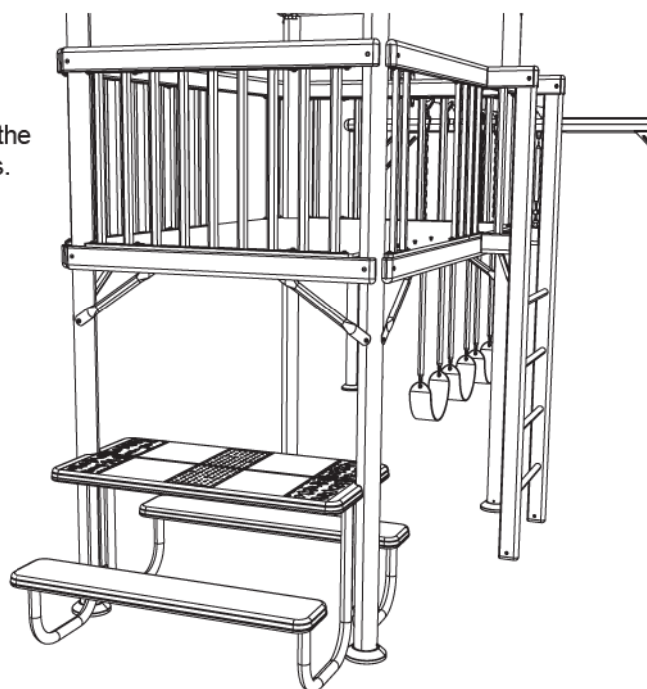



8



Attach the Table Legs (C) to the Corner Poles with the hardware shown.

Parts for this step are in box 1056218

HA x 4

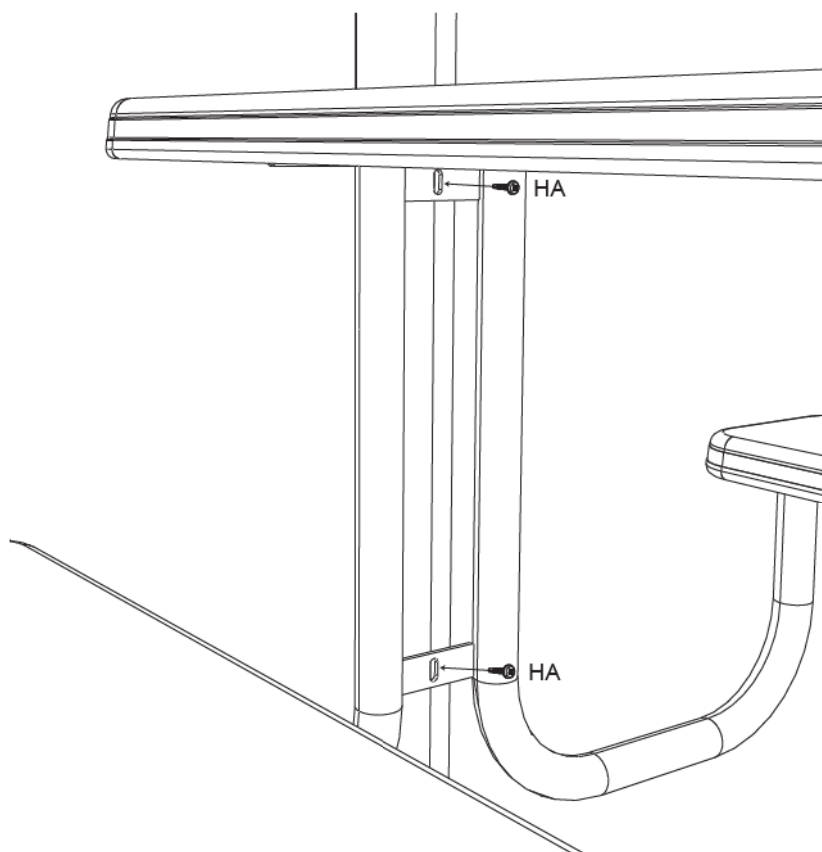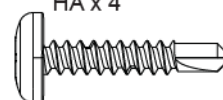

# SECTION 6


## Slide Assembly

Earth Tones Box: 452001

### Hardware List (All Hardware is located in Box 452001 Part #8000187)


ID	Item Description	Qty	✓	Part #				
HA	Bolt, 5/16" x 1 1/4"	3	☐	8000163	HB	Washer, 5/16" Bonded	6	☐ 8001161
					HC	Nut, 5/16" Acorn	3	☐ 8000165

There may be extra hardware in this bag.

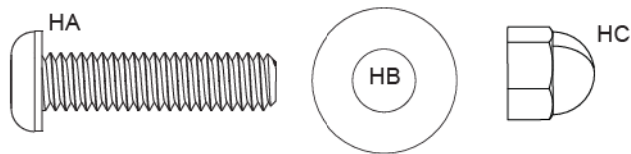


### Parts List (All Parts are located in Box 452001)

ID	Item Description	Qty	✓	Part #
A	Slide	1	☐	8000861

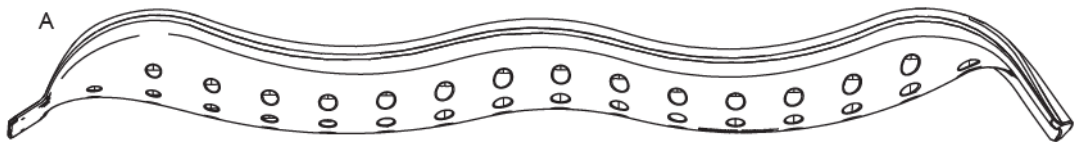

**Note:** Do not place any accessories such as the Binoculars or the Steering Wheel in the area shown below. Placing accessories too close to the slide can create overlapping play areas which could result in possible injuries.


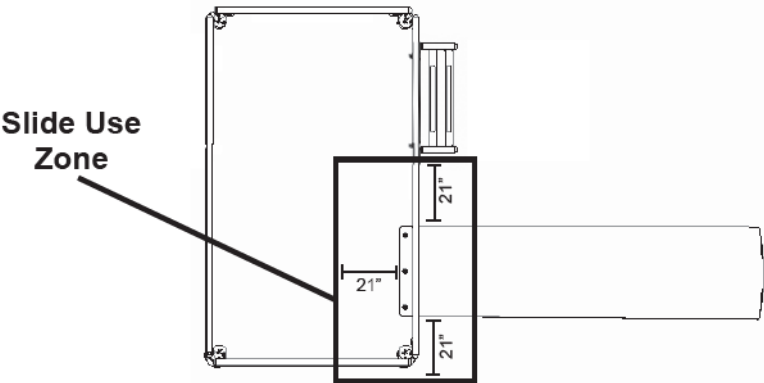


See page 63 for examples of correct and incorrect accessory placement.

1

Using a Power Drill, drill 3/8" holes through the holes in the top corners of the Slide (A) as shown.



Also drill 3/8" holes through the two outside holes on the underside of the Deck that are predrilled.

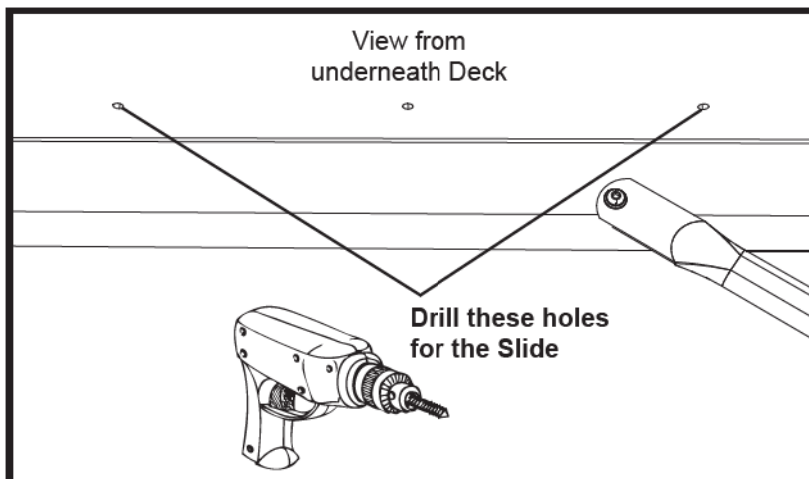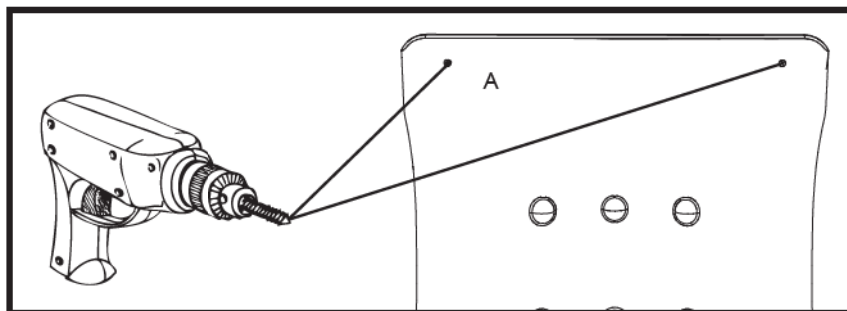

2




Place the Slide (A) in the location shown and attach it to the Deck of the Clubhouse in the location shown with the hardware shown.

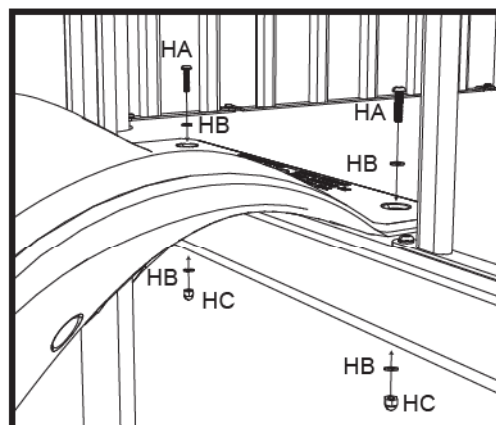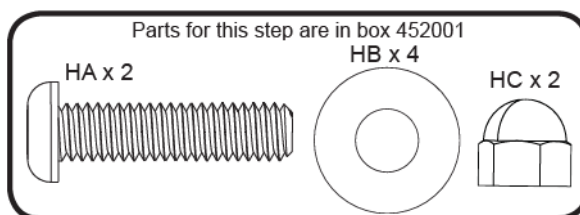

3

Using a Power Drill, drill a 3/8" hole through the remaining hole in the Slide, and drill into the Deck.

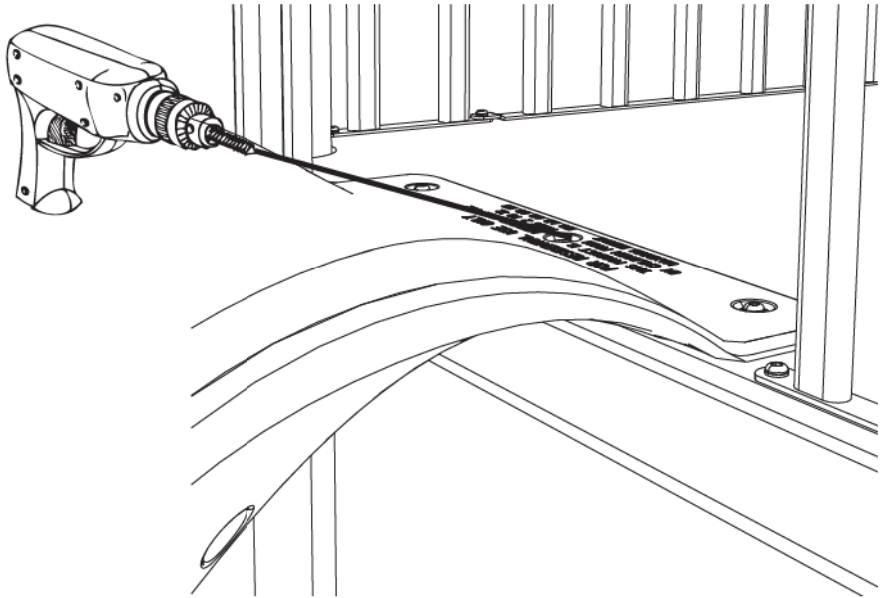

4



Finish attaching the Slide (A) to the Deck of the Clubhouse in the location shown with the hardware shown.

Parts for this step are in box 452001

HA x 1

HB x 2

HC x 1

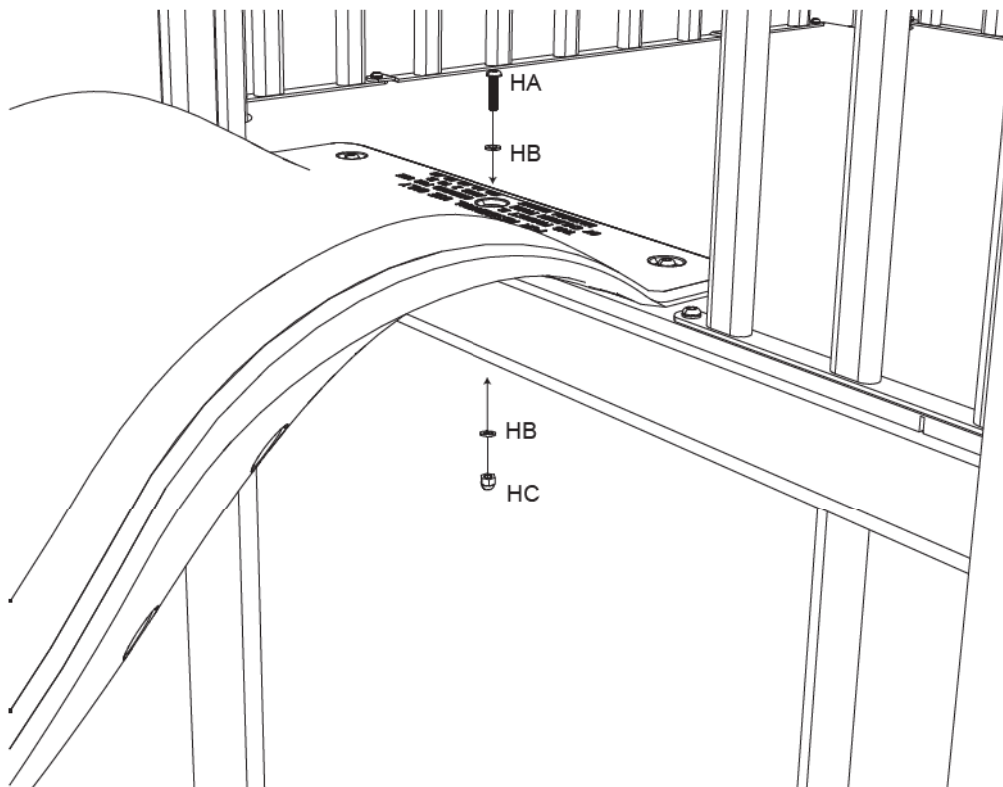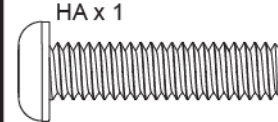

# SECTION 7





## Climbing Wall Assembly

Earth Tones Box: 1056240

### Hardware List (All Hardware is located in Box 1056240 Part #8002043)



ID	Item Description	Qty	✓	Part #				
HA	Bolt, 5/16" x 2"	4	□	8000307	HC	Washer, 5/16" Bonded	4	□ 8001161
HB	Screw, #14 x 3/4"	5	□	8000522	HD	Spacer, 5/8" x 3/8"	4	□ 8000322

There may be extra hardware in this bag.

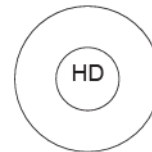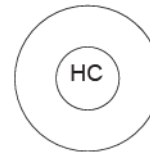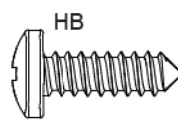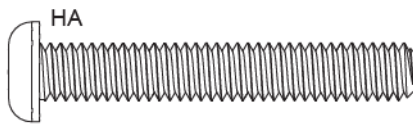

### Parts List (All Parts are located in Box 1056240)

ID	Item Description	Qty	✓	Part #				
A	Climbing Wall (2 Tubes)	1	□	1056236	B	Bracket	8	□ 1056239
C	Climbing Wall (1 Tube)	1	□	1056234				

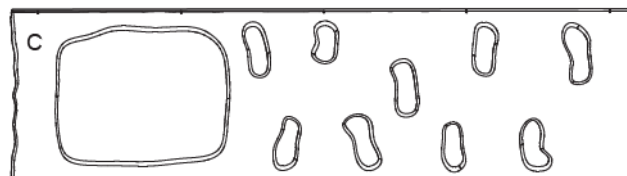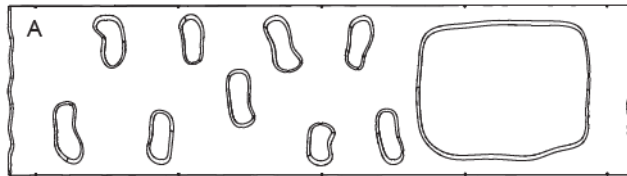

### WARNING



The Climbing Wall is not intended to be a stand alone unit. Do not use until completely attached to the main unit as instructed.


1

Place the two Climbing Walls (A & C) together as shown. The large openings in the Climbing Walls should be on opposite ends of each other. Line up the holes of the Climbing Wall with the Tubing already attached to the other Climbing Wall. Secure with the hardware shown.

*To prevent the Screws from going through the plastic, do not overtighten.*


Parts for this step are in box 1056240

HB x 5

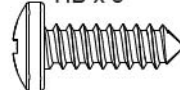

Large Opening

Large Opening

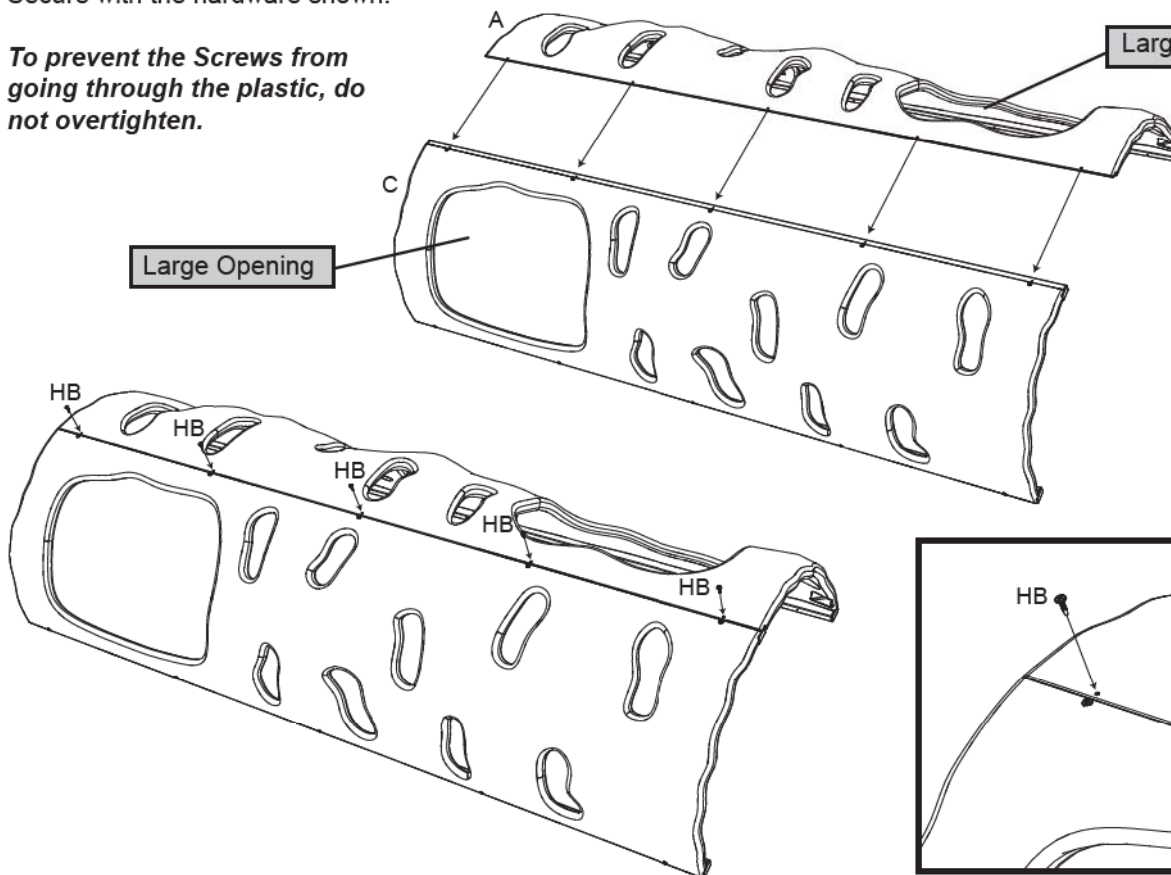


2


Attach the Brackets (B) to the Railings in the location desired for the Climbing Wall. Secure with the hardware shown. The Bolts will need to line up with the holes in the Climbing Wall Tubing.

Parts for this step are in box 1056240



HA x 4

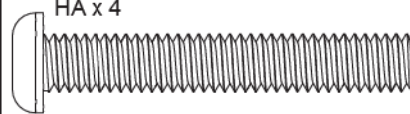

HC x 4

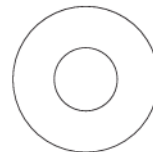

HD x 4

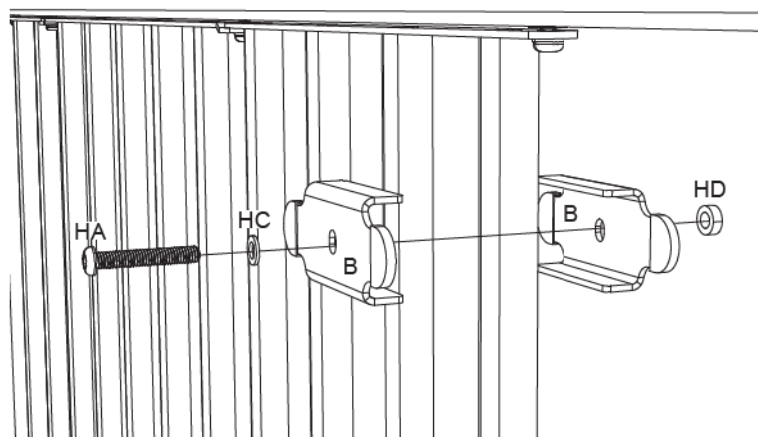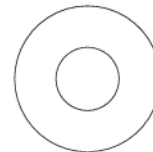

## CAUTION


Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.



3

Stand the assembled Climbing Wall next to the Clubhouse in its desired location. Attach the Climbing Wall to the Clubhouse by securing the hardware in step 2 to the Climbing Wall Tubing in the location shown.

***Make sure the Climbing Wall is touching the ground before tightening the Bolts securely.***

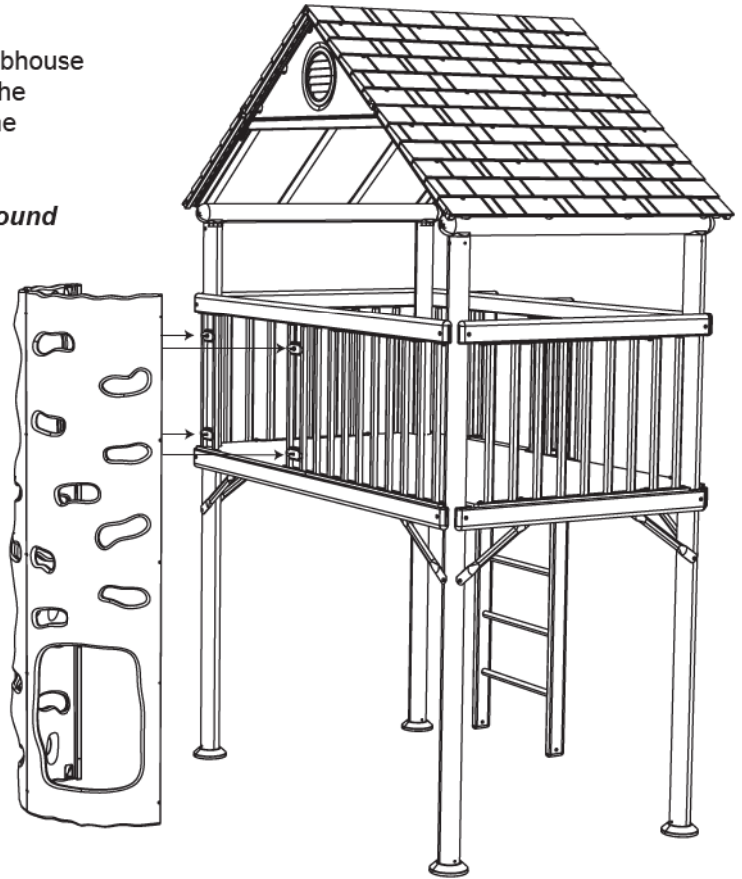

## WARNING



To prevent injury, do not install the Climbing Wall on either short end of the play set.

# SECTION 8


## Binocular Assembly

Earth Tones Box: 439000

### Hardware List (All Hardware is located in Box 439000 Part #8000184)


ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3/4"	1	☐	8000162	HD	Washer, 5/16" Bonded	7 ☐ 8001161
HB	Bolt, 5/16" x 2 1/2"	1	☐	8000534	HE	Nut, 5/16" Nylock	1 ☐ 8000209
HC	Bolt, 5/16" x 2"	2	☐	8000307	HF	Nut, 5/16" Acorn	3 ☐ 8000165
					HG	Cap, Universal Bracket	1 ☐ 8000282

There may be extra hardware in this bag.

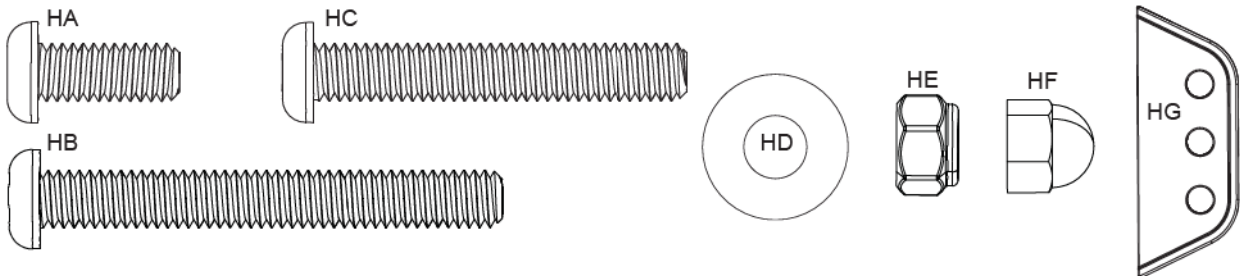

### Parts List (All Parts are located in Box 439000)

ID	Item Description	Qty	✓	Part #			
A	Binocular	1	☐	8000874	B	Mounting Bracket	1 ☐ 8000349
					C	Universal Bracket	1 ☐ 8000352

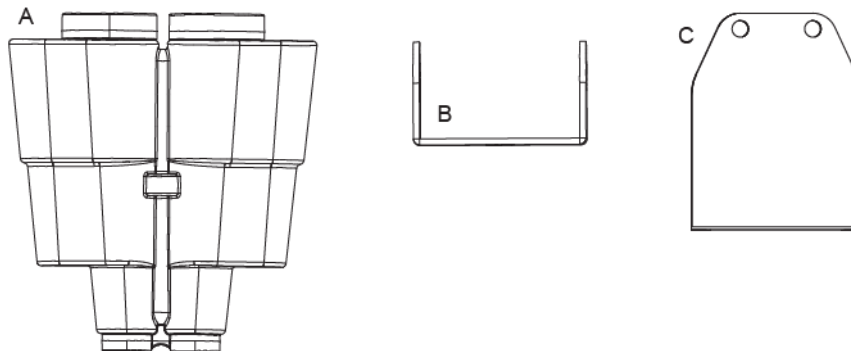

### WARNING





To prevent possible injury resulting from overlapping play areas, the Binoculars can not be installed within 21" of the Slide. See page 48.

1

Attach the Mounting Bracket (B) to the Universal Bracket Cap (HG) with the hardware shown.

**Do not overtighten the hardware. The Binoculars will not be able to rotate.**

Parts for this step are in box 439000


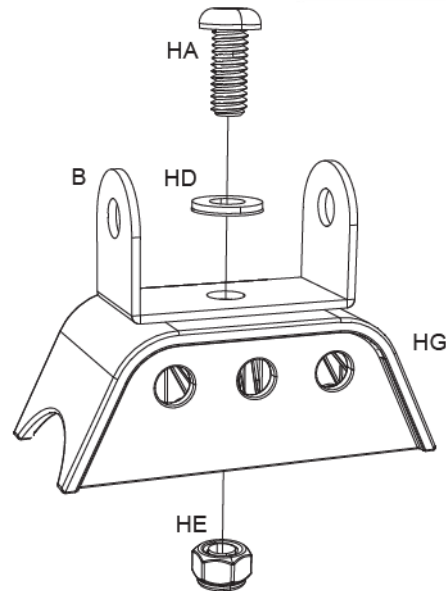
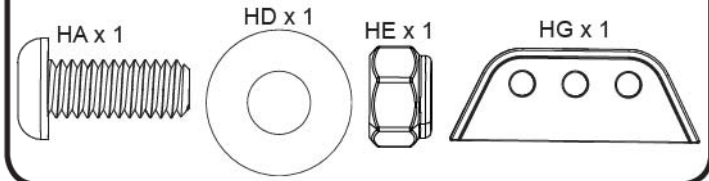


2

Attach the Mounting Bracket assembled in step 1 to the D-Tube in the desired location by securing it to the Universal Bracket (C) with the hardware shown. Twist the Universal Bracket (C) in order to get it between the Railings.

**The Universal Bracket may be mounted anywhere on the D-Tubes of the Clubhouse. To prevent overlapping play areas, place it in the middle of a 5 Piece Railing.**



Parts for this step are in box 439000

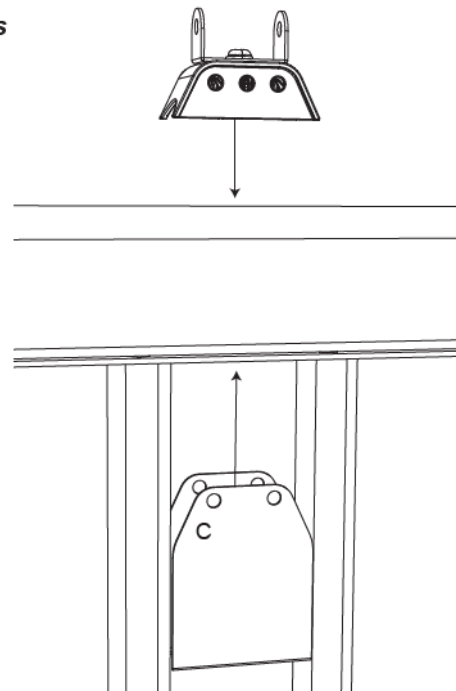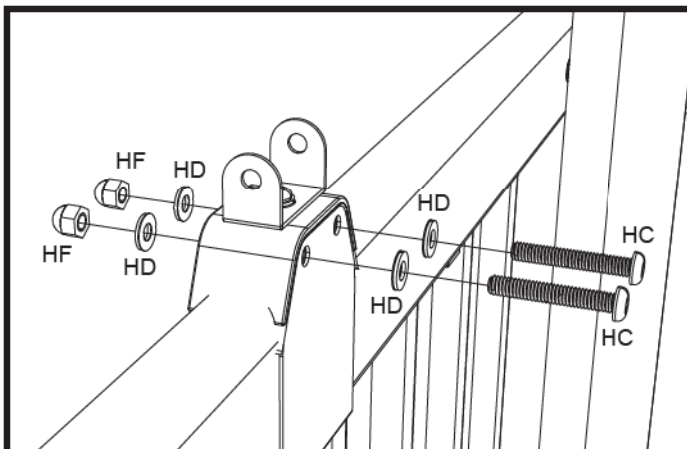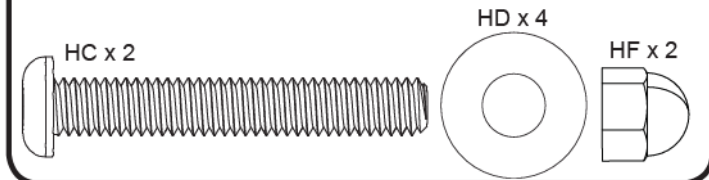

3

Once the Brackets have been attached to the desired D-Tube, attach the Binocular (A) to the Mounting Bracket (B) with the hardware shown.

Parts for this step are in box 439000

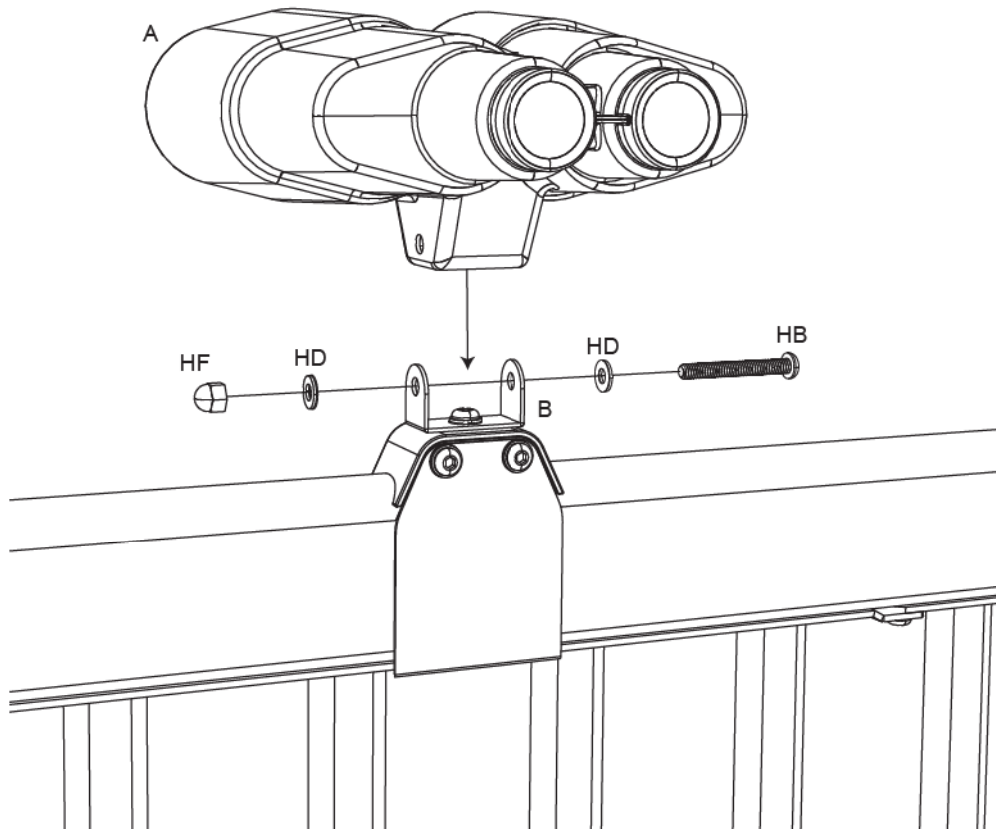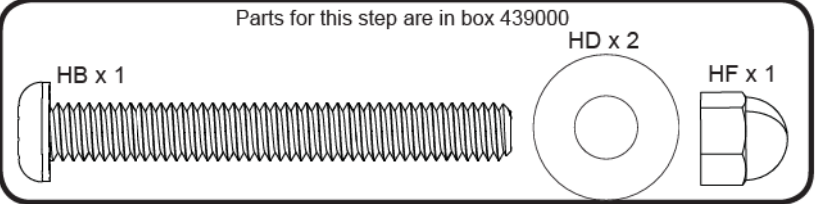

# SECTION 9

## Steering Wheel Assembly


### (Universal Bracket)

Earth Tones Box: 440000

#### Hardware List (All Hardware is located in Box 440000 Part #8000697)


ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16" x 3 1/4"	2	☐	8000366	HD	Washer, 5/16" Nylon	2 ☐ 8000164
HB	Bolt, 5/16" x 2" Hex	1	☐	8000693	HE	Washer, 5/16" Zinc	1 ☐ 8000368
HC	Nut, 5/16" Nylock	1	☐	8000694	HF	Nut, 5/16" Acorn	2 ☐ 8000165
					HG	Cap, Universal Bracket	1 ☐ 8000282

There may be extra hardware in this bag.

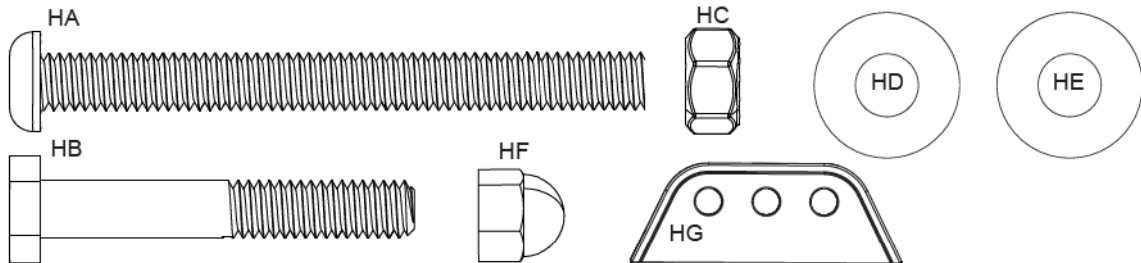

#### Parts List (All Parts are located in Box 440000)


ID	Item Description	Qty	✓	Part #			
A	Steering Wheel	1	☐	8000285	C	Wheel Clicker	1 ☐ 8000158
B	Wheel Cap	1	☐	8000157	D	Universal Bracket	1 ☐ 8000352

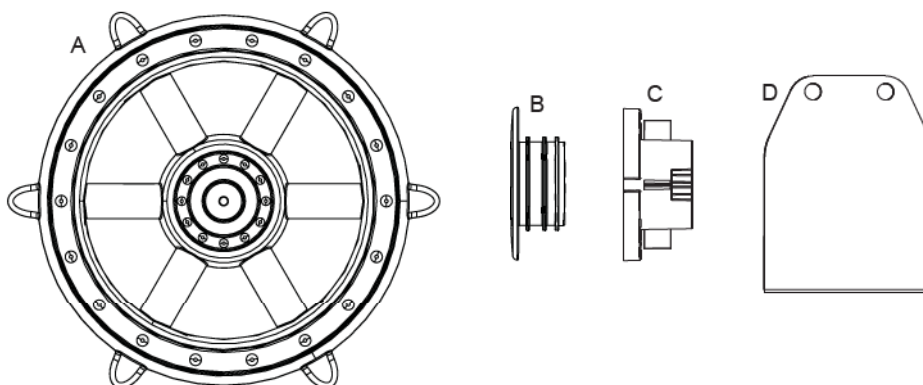


1

Place the Universal Bracket Cap (HG) and the Universal Bracket (D) on the D-Tube in the desired location. Twist the Universal Bracket (D) in order to get it between the Railings.

***The Universal Bracket may be mounted anywhere on the D-Tubes of the Clubhouse. To prevent overlapping play areas, place it in the middle of a 5 Piece Railing.***

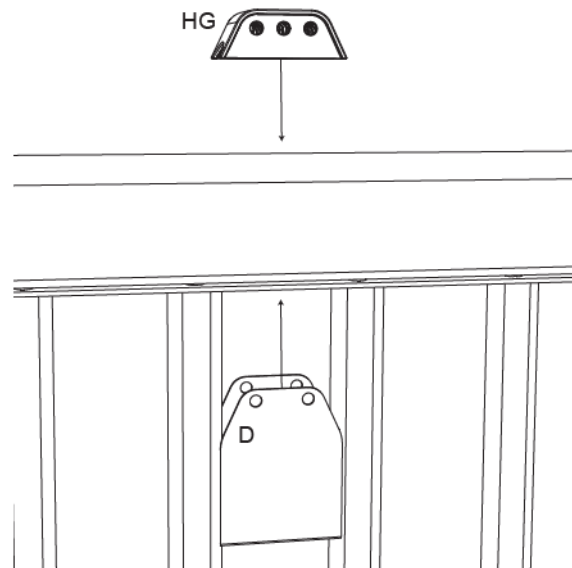


Parts for this step are in box 440000

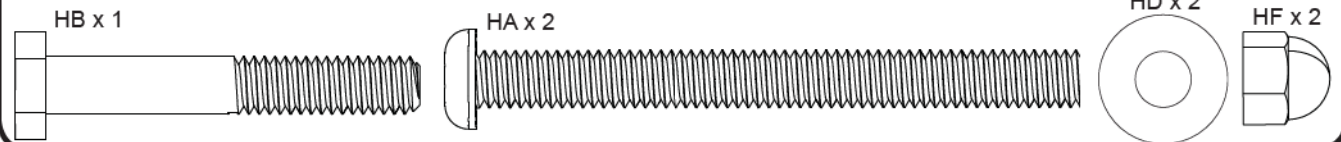


2

Slide the Hex Bolt (HB) into the center hole of the Wheel Clicker (C) in the direction shown.

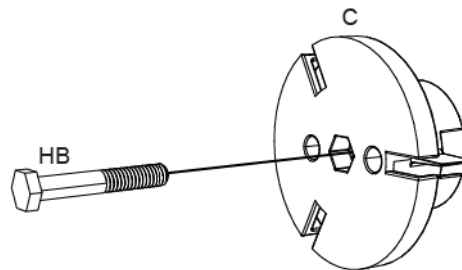

Attach the Wheel Clicker (C) to the D-Tube, and secure with the hardware shown.

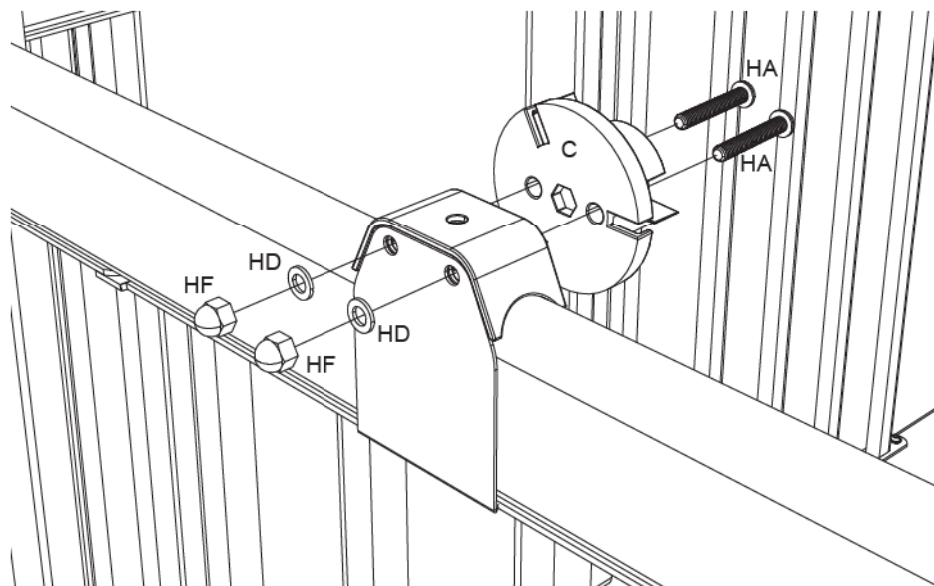



3

Place the Steering Wheel (A) over the Wheel Clicker (C). Secure the Steering Wheel (A) with the hardware shown. Insert the Wheel Cap (B) into the front of the Wheel.



***Do not overtighten the hardware. The Steering Wheel will not be able to rotate.***

Parts for this step are in box 440000

HC x 1



HE x 1

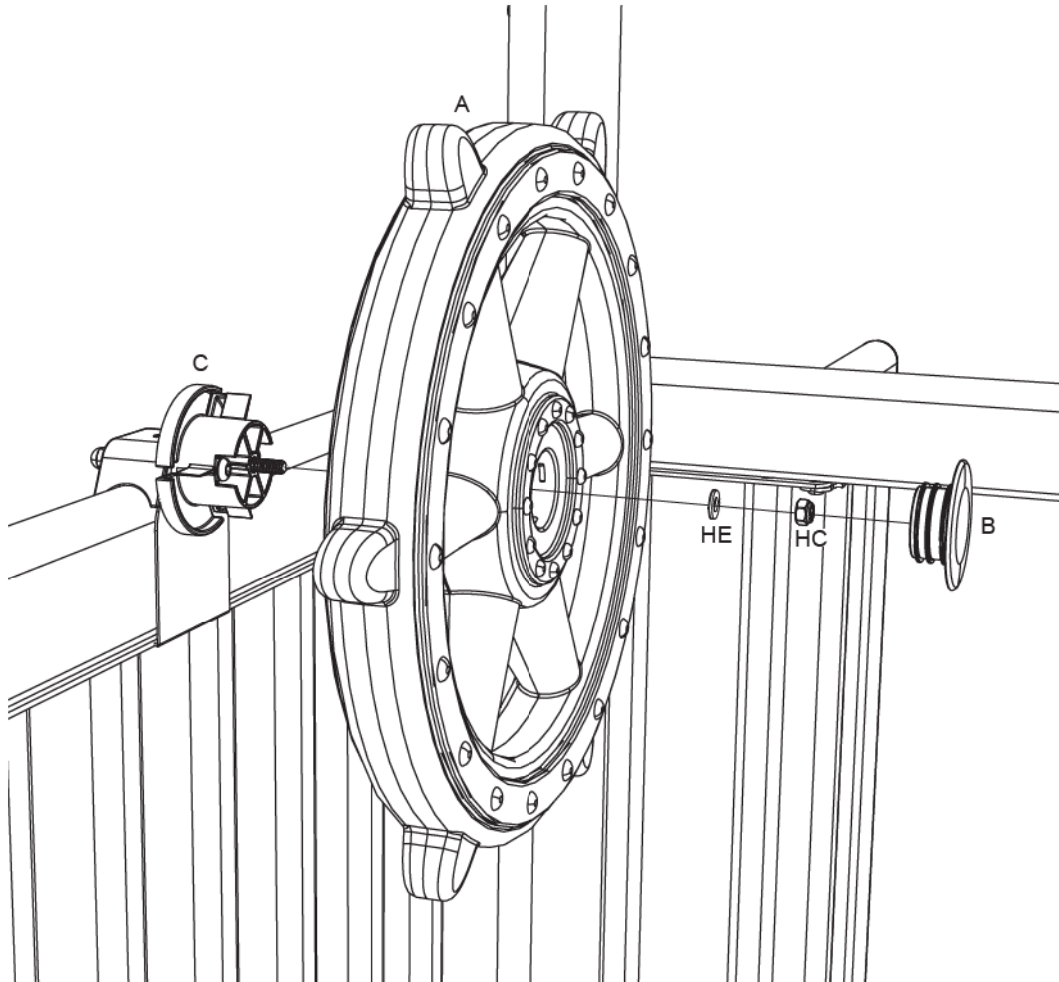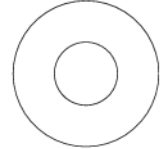

# Steering Wheel Assembly


## (Swing Bar Bracket)

Earth Tones Box: 440100

### Hardware List (All Hardware is located in Box 440100 Part #8003039)


ID	Item Description	Qty	✓	Part #			
HA	Bolt, 5/16 x 2"	2	☐	8000307	HC	Nut, Nylock	3 ☐ 8000209
HB	Bolt, 5/16 x 2" Hex	1	☐	8000693	HD	Washer 1/4"	2 ☐ 8001343
					HE	Washer 5/16"	1 ☐ 8002027

There may be extra hardware in this bag.

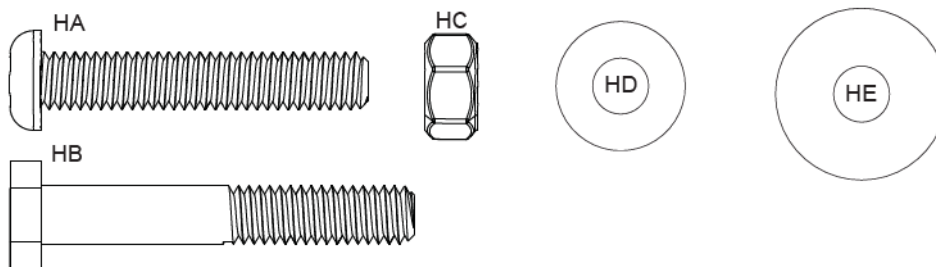


### Parts List (All Parts are located in Box 440100)

ID	Item Description	Qty	✓	Part #			
A	Steering Wheel	1	☐	8000857	B	Wheel Cap	1 ☐ 8000850
					C	Wheel Clicker	1 ☐ 8000158

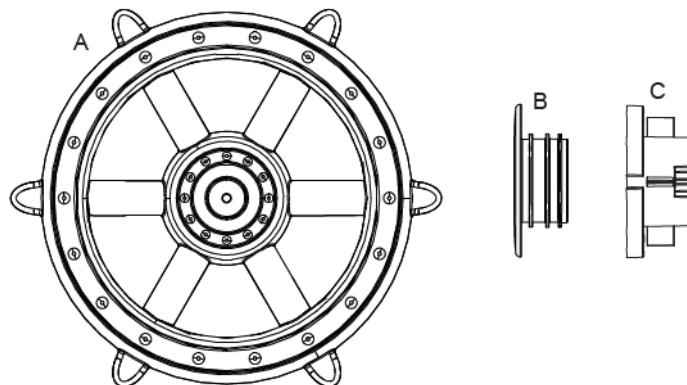


1

Remove the hardware from the top holes of the Swing Bracket and Plate.

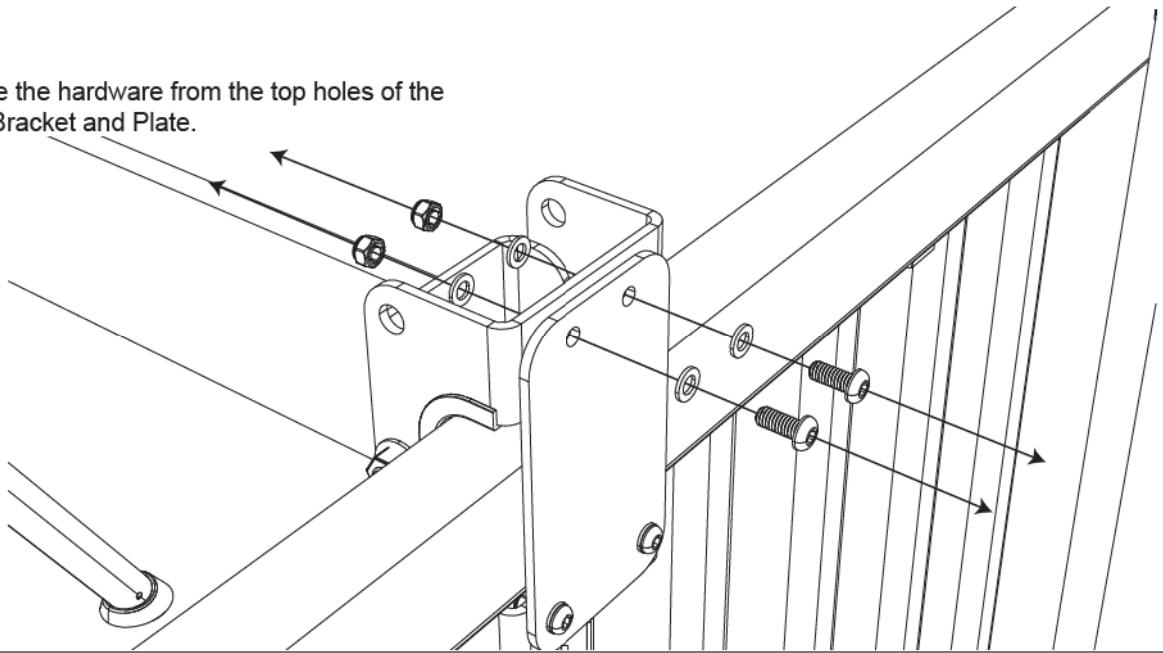


Parts for this step are in box 440100

HB x 1

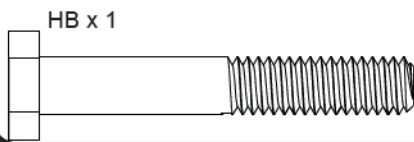

HA x 2

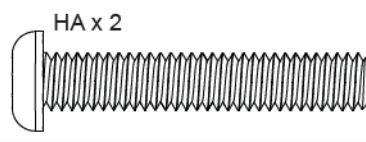

HC x 2




HD x 2





2

Slide the Hex Bolt (HB) into the center hole of the Wheel Clicker (C) in the direction shown.

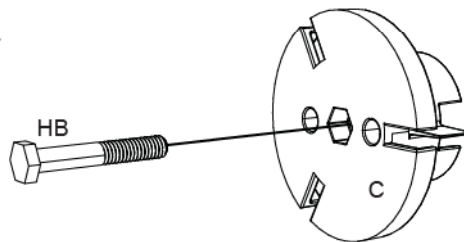

Attach the Wheel Clicker (C) to the D-Tube, and secure with the hardware shown.

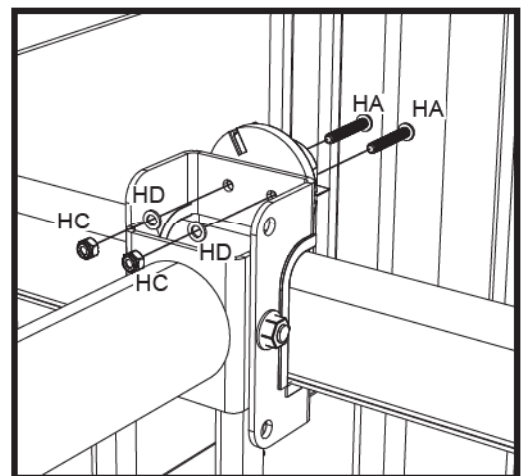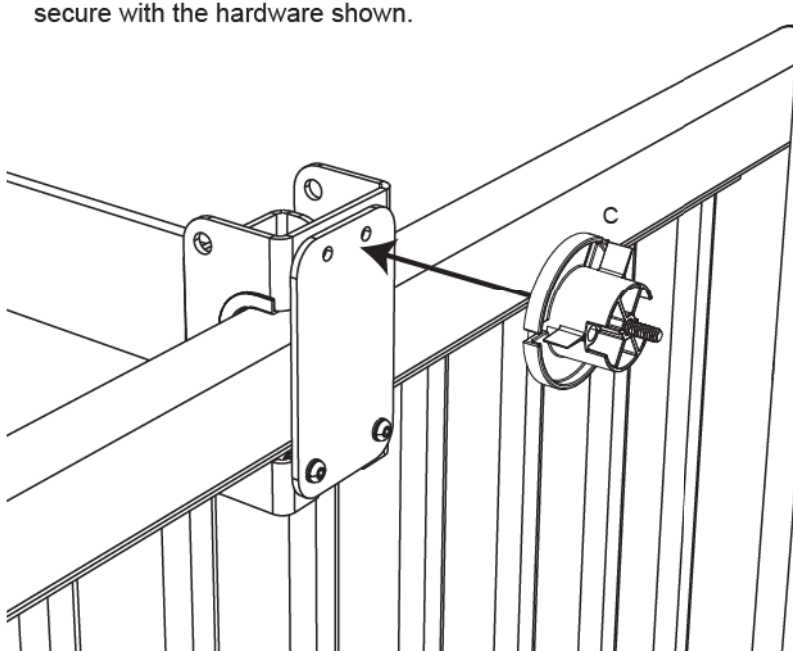

3

Place the Steering Wheel (A) over the Wheel Clicker (C).  
Secure the Steering Wheel (A) with the hardware shown.  
Insert the Wheel Cap (B) into the front of the Wheel.



***Do not overtighten the hardware. The Steering Wheel will not be able to rotate.***

Parts for this step are in box 440100

HC x 1



HE x 1


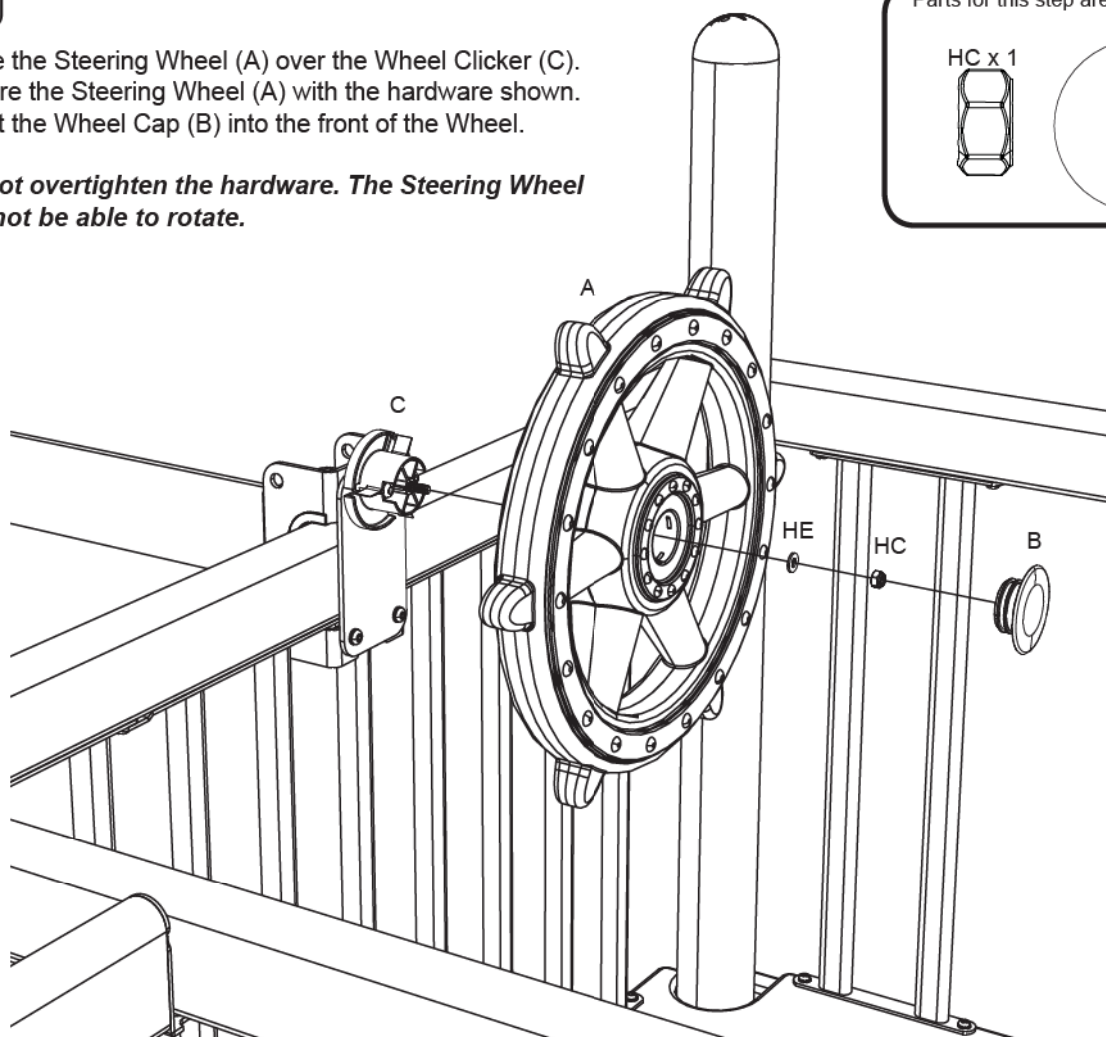
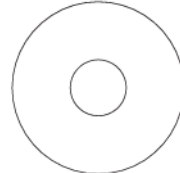




## WARNING



When attaching play components, make sure no play areas overlap. To prevent serious injury, no accessory should overlap into the swing area.

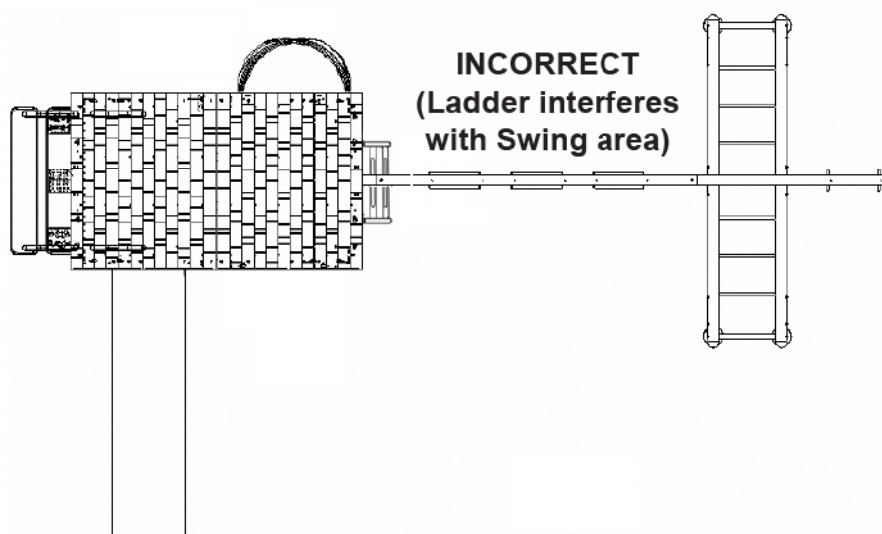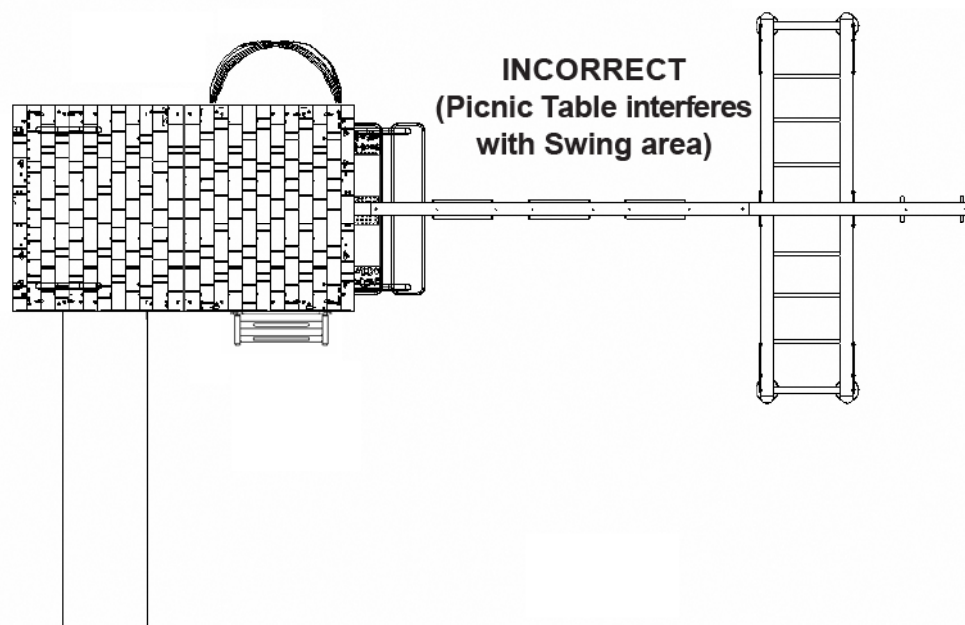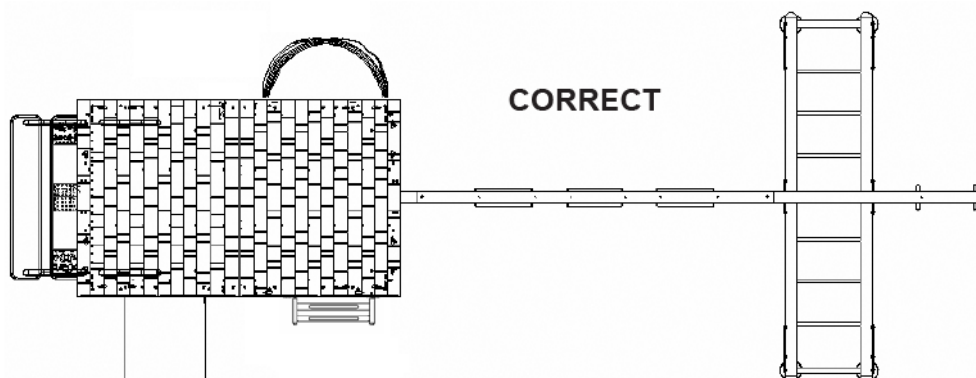



**If the warning sticker is illegible, destroyed or removed,  
contact Customer Service for a replacement.**



## WARNING



***This product is intended for use by children ages 3 to 12, and is for residential use only. Do not install over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.***

***Observing the following statements and warnings reduces the likelihood of serious or fatal injury:***

- On-site adult supervision should be provided for children of all ages.
- Children should not walk close to, in front of, behind, or between moving items.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children to avoid swinging empty seats.
- Teach children to sit in the center of the swings with their full weight on the seats. Never stand, sit or kneel on the swing seat.

- Instruct children not to use the equipment in a manner other than intended.
- Instruct children not to get off equipment while it is in motion.
- To prevent entanglement and strangulation, dress children appropriately using well-fitting shoes and avoiding ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using equipment.
- Instruct children not to climb when the equipment is wet.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Make sure guardrails are in place at all times.



## ADVERTENCIA



***Este producto es para niños de 3 a 12 años de edad. Este producto es para uso residencial únicamente. No lo instale sobre concreto, asfalto, tierra empaquetada o cualquier otra superficie dura. La caída sobre una superficie dura podría ocasionar serias lesiones.***

***Si se presta atención a los siguientes enunciados y avisos de advertencia se reduce la probabilidad de producirse lesiones serias o mortales:***

- Los niños de todas las edades deben estar bajo la supervisión de un adulto en el lugar.
- Los niños no deben caminar junto, en frente, detrás de o entre las piezas móviles.
- Indique a los niños no torcer las cadenas o sogas de los columpios ni pasarlas por encima de la barra de soporte superior, ya que puede reducirse la resistencia de las cadenas o sogas, según sea el caso.
- Indique a los niños que eviten impulsar columpios vacíos.
- Enseñe a los niños a sentarse en el centro de los columpios, con todo su peso en los asientos. Nunca deben pararse ni hincarse en el asiento del columpio.
- Indique a los niños no usar el equipo de ninguna forma diferente a la indicada.
- Indique a los niños no bajarse del equipo cuando esté en movimiento.
- Para evitar la posibilidad de que los niños se enreden y estrangulen, vístalos debidamente con zapatos debidamente ajustados y sin ponchos, bufandas, chamarras con cordones de apriete en el cuello, cascos con correas y otras ropas holgadas que puedan ser peligrosas al usar el equipo.
- Indique a los niños no subirse cuando esté húmedo el equipo.
- Indique a los niños no adherir al equipo de patio de juegos objetos no diseñados específicamente para éste, como cuerdas de saltar, cuerdas de tendedero de ropa, correas de mascotas, cables y cadenas, ya que podrían causar un peligro de estrangulación.
- Asegúrese de que los rieles protectores estén colocados en su lugar todo el tiempo.

Lifetime Products, Inc  
Clearfield, UT 84016



## AVERTISSEMENT



***Ce produit est conçu pour un usage par des enfants âgés de 3 à 12 ans. Ce produit est réservé à un usage personnel seulement. Ne pas installer sur du béton, de l'asphalte, de la terre compactée ou toute autre surface dure. Une chute sur une surface dure peut entraîner des blessures graves.***

***L'observation des déclarations et des avertissements suivants réduit les risques de blessures graves ou fatales:***

- La présence d'un adulte surveillant les enfants de tous âges doit être assurée.
- Veiller à ce que les enfants ne marchent pas près, devant, derrière ou entre les éléments en mouvement.
- Veiller à ce que les enfants ne tordent pas les chaînes ou cordes de la balançoire. De même, veiller à ce que les enfants ne bouclent pas les chaînes ou les cordes au-dessus de la barre de support supérieure, car cela pourrait en réduire leur solidité.
- Veiller à ce que les enfants ne balancent pas les sièges vides.
- Veiller à ce que les enfants s'assoient au centre des sièges de la balançoire, avec leur plein poids sur le siège. Veiller à ne jamais s'asseoir, s'agenouiller ou se tenir debout sur le siège.
- Veiller à ce que les enfants n'utilisent pas l'équipement à d'autres fins que pour l'usage prévu.
- Veiller à ce que les enfants ne descendent pas de l'équipement lorsqu'il est encore en mouvement.
- Pour éviter l'emmêlement des cordes et des chaînes et ainsi éviter tout risque d'étranglement, veiller à habiller les enfants correctement. Utiliser des souliers bien adaptés. Ne pas mettre des ponchos, foulards, blousons avec des cordons près du cou, casques avec des sangles et tout autre vêtement ample pouvant potentiellement s'avérer dangereux lors de l'utilisation de l'équipement.
- Veiller à ce que les enfants ne grimpent pas sur l'équipement quand celui-ci est mouillé.
- Veiller à ne pas attacher d'objets sur l'équipement de jeu non spécifiquement conçus pour cet équipement, tels que, mais sans s'y limiter, cordes à sauter, cordes à linge, laisses d'animaux, câbles et chaînes. Ceux-ci posent un risque d'étranglement.
- S'assurer que des garde-fous sont en place en tout temps.

[www.lifetime.com](http://www.lifetime.com)

1/05/2009

# 1049933