



OWNER'S MANUAL

WITH ASSEMBLY INSTRUCTIONS

REGISTER YOUR LIFETIME PRODUCT TODAY!

There are benefits to registering your Lifetime product. With our new online product registration form, it's fast and easy! Register with us at www.lifetime.com and enjoy these great benefits:

- Receive exclusive money-saving offers from BuyLifetime.com, our online store, as well as NEW product notifications and special closeout promotions!
- In the unlikely event of a product recall or safety modification, we will notify you immediately and directly.
- Registering your product guarantees you immediate warranty service. If you do not register your product, your warranty rights will not be diminished. But you will need to provide a sales receipt to verify your product purchase date before warranty service will be provided.


Lifetime's Promise to You:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

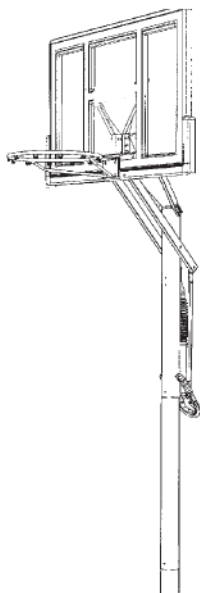

POWER LIFT® BASKETBALL SYSTEM MODEL #71282



WARNING



To ensure your safety, do not attempt to assemble this system without reading and following all instructions carefully. Identify and inventory the parts using the Parts List. Failure to comply with any of the warnings in these instructions may result in serious personal injuries such as cuts, broken bones, nerve damage, paralysis, brain injury, or death. Failure to comply may also result in property damage. Please heed all warnings and cautions.

****U.S. and Canada customers ONLY****

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!!!

CALL OUR CUSTOMER SERVICE DEPARTMENT at 1 (800) 225-3865

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday, (Mountain Standard Time)

****Call, or visit our Web site for Saturday hours****

****For customers outside the U.S. or Canada, please contact the store for assistance.****

POLE SECTION IDENTIFICATION

Identify the pole sections before beginning assembly. Failure to assemble the pole sections correctly may result in severe personal injury or property damage as described on Page Two.

ONCE THE POLE SECTIONS HAVE BEEN SEATED, THEY CANNOT BE SEPARATED.



Top Pole:

Four holes at the top of the pole, four holes in the middle, two holes near the bottom and two small holes at the bottom.

TP



Middle Pole:

One slot at the top of the pole and two small holes at the bottom. Warning Sticker.

MP



Bottom Pole:

Two slots at the top of the pole, and a bent edge at the bottom.

BP



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.


- If using a ladder during assembly, use extreme caution.
- Two capable adults are recommended for this operation.
- Before digging, contact utility company to locate underground power cables, gas, and water lines. Ensure that there are no overhead power lines within 20 ft. (7m) radius of pole location.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play or transport.
- Minimum operational height is 7'6" (2.23m) to the rim.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this system.

PARTS LIST


ID	Part #	Description	Qty	✓
TP	1018602	Top Pole	1	<input type="checkbox"/>
MP	1018603	Middle Pole	1	<input type="checkbox"/>
BP	1018866	Bottom Pole	1	<input type="checkbox"/>
RB	1018718	Right Backboard Bracket	1	<input type="checkbox"/>
LB	1018717	Left Backboard Bracket	1	<input type="checkbox"/>
AA	502027H	Adjustment Handle	1	<input type="checkbox"/>
AB	502049G	Trigger	1	<input type="checkbox"/>
AC	700506	Wood Block	1	<input type="checkbox"/>
AF	HA00800	Gas Spring	1	<input type="checkbox"/>
AG	1018869	Short Extension Arm	2	<input type="checkbox"/>
AO	1018836	Long Extension Arm	2	<input type="checkbox"/>
AH	1018837	Rear Lifter Arm	2	<input type="checkbox"/>
AI	E51020	Gas Spring Cover	1	<input type="checkbox"/>
AJ	1018599	Backboard	1	<input type="checkbox"/>
AK	ZA76007	Rim	1	<input type="checkbox"/>
WS	FS16500	Warning Sticker (one Applied)	2	<input type="checkbox"/>
AM	FO28008	Height Sticker	1	<input type="checkbox"/>
FL	CB08999	Corner Frame Pad	2	<input type="checkbox"/>
FM	1000841	Middle Frame Pad	1	<input type="checkbox"/>
Pole Hardware (1018684)				
PA	500096	Pole Cap	1	<input type="checkbox"/>
PB	500081	Grease Packet	1	<input type="checkbox"/>
PD	300187	1/2" x 6 1/2" Hex Bolt	1	<input type="checkbox"/>
PE	302007	3/8" x 6 1/2" Hex Bolt	2	<input type="checkbox"/>
PF	301008	1/2" Centerlock Nut	6	<input type="checkbox"/>
PG	300029	1/2" x 7 1/8" Hex Bolt	5	<input type="checkbox"/>
PH	300101	Release Pin	1	<input type="checkbox"/>
PI	B020010	5/16" x 2 1/2" Hex Bolt	1	<input type="checkbox"/>
PJ	300097	5/16" Nylock Nut	1	<input type="checkbox"/>
PK	800331	3/4" x 3 1/4" Spacer	1	<input type="checkbox"/>
PL	500015	3/8" x 1/2" Spacer	2	<input type="checkbox"/>
PM	500032	1/2" x 1/8" Spacer	4	<input type="checkbox"/>
PO	BS02000	1/4" x 3/4" Screw	2	<input type="checkbox"/>
PP	302008	3/8" Centerlock Nut	4	<input type="checkbox"/>
PQ	800239	1/2" x 3 7/16" Spacer	2	<input type="checkbox"/>
PR	302053	3/8" x 4" Hex Bolt	2	<input type="checkbox"/>
PS	300031	3/8" Flat Washer	2	<input type="checkbox"/>
PT	1018876	Spring Bracket	1	<input type="checkbox"/>
PV	1004620	Self-Tapping Screw	2	<input type="checkbox"/>
Frame Pad Hardware (HH00700)				
FA	BS00100	#10 x 3/4" Screw	10	<input type="checkbox"/>

PD

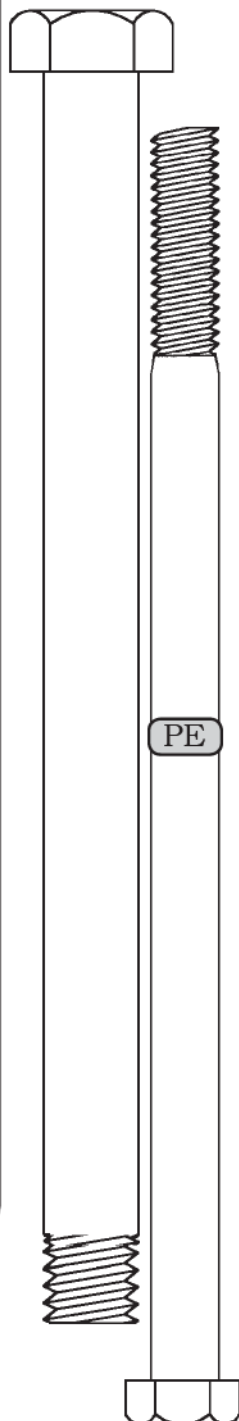


PG **HARDWARE IS ACTUAL SIZE**

(Unless otherwise indicated)

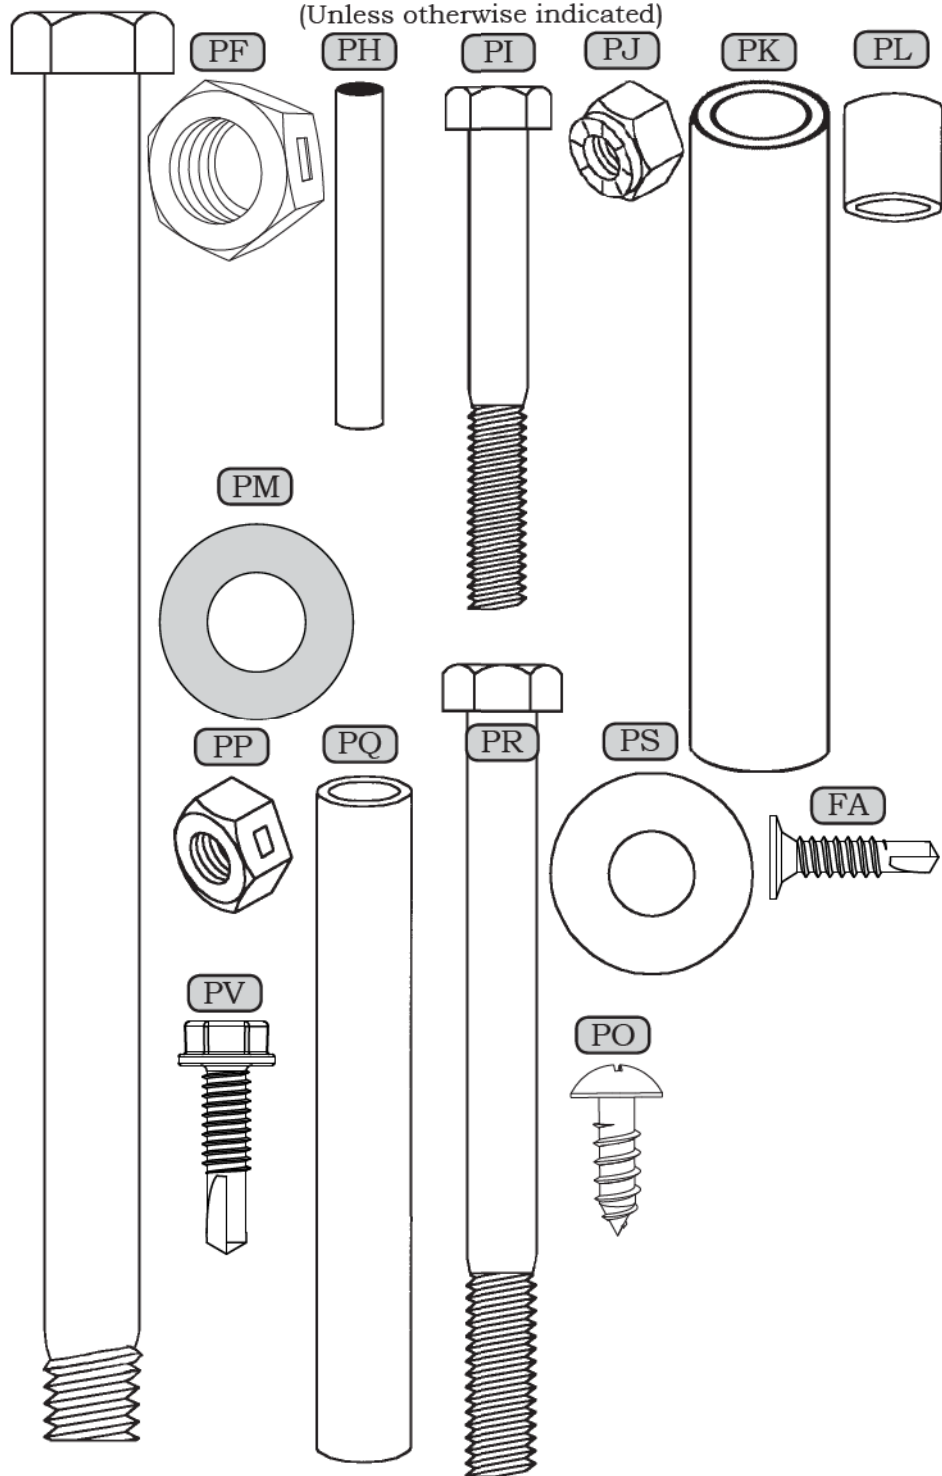

PARTS LIST

ID	Part #	Description	Qty	✓
Backboard Hardware (1039831)				
MB	302090	5/16" Nylock Flange Nut	2	<input type="checkbox"/>
MC	302011	5/16" x 1 1/4" Carriage Bolt	2	<input type="checkbox"/>
MD	300110	1/4" X 2 3/4" Hex Bolt	2	<input type="checkbox"/>
ME	500013	9/16" x .592" Spacer	4	<input type="checkbox"/>
MF	300022	1/4" Centerlock Nut	2	<input type="checkbox"/>
MG	800324	1/2" x 2 5/16" Spacer	2	<input type="checkbox"/>
MH	1028047	.38" x 1" Steel Spacer	2	<input type="checkbox"/>
Elite Rim Hardware (HP19900)				
PS	300031	3/8" Flat Washer	2	<input type="checkbox"/>
RA	300128	5/16" Jam Nut	2	<input type="checkbox"/>
UB	302081	5 1/2" U-Bolt	1	<input type="checkbox"/>
MB	302090	5/16" Nylock Flange Nut	4	<input type="checkbox"/>
RC	502060	Compression Spring	2	<input type="checkbox"/>
RD	300066	5/16" Hex T-Nut	2	<input type="checkbox"/>
RE	302060	5/16" x 2 1/2" Tap Bolt	2	<input type="checkbox"/>
BD	302014	5/16" Flat Washer	2	<input type="checkbox"/>
RF	302056	7/16" Rubber Washer	2	<input type="checkbox"/>
RG	DD00800	Net	1	<input type="checkbox"/>
RH	DD01000	Net Cord	1	<input type="checkbox"/>
RI	CH11299	Black Spring Cover	1	<input type="checkbox"/>
RJ	CH11186	Silver Spring Cover	1	<input type="checkbox"/>
RK	ZA27310	Spring Retainer Plate	1	<input type="checkbox"/>
RL	502056	Plastic Guard	1	<input type="checkbox"/>

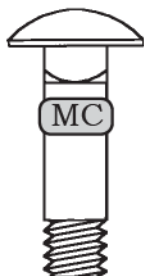

STOP!

Before Beginning Assembly

STOP!

- Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.
- Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or mallet.

HARDWARE IS ACTUAL SIZE

(Unless otherwise indicated)

 
MF




MG



MD



BD

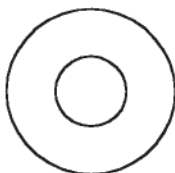


RA




RD



RF

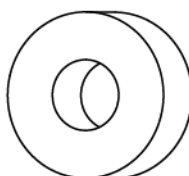

RE

 

****A MINIMUM OF TWO ADULTS
ARE REQUIRED FOR ASSEMBLY****


Tools and Materials Required for Assembly (Not Included)

- | | |
|-----------------------|---------------------------------|
| 1. Adjustable Wrench | 8. 6 - 80 lb Concrete Bags |
| 2. 7/16" Wrenches (2) | 9. Funnel |
| 3. 1/2" Wrenches (2) | 10. Punch/Dowel or similar tool |
| 4. 9/16" Wrenches (2) | 11. Scrap Wood/Cardboard |
| 5. 3/4" Wrenches (2) | 12. Phillips Screwdriver |
| 6. Hammer or Mallet | 13. Electric Drill |
| 7. 1/2" x 3' Rebar | |

For a nonpermanent installation of your basketball system, a Ground Sleeve provides an alternative to cementing the pole into the ground.

Call Customer Service for more information.

- 1A** Dig a round hole 24" deep and 18" in diameter. The edge of the hole should be flush with the edge of the playing surface.

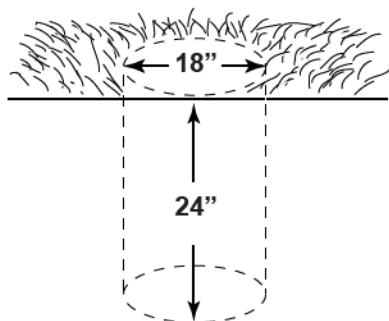


- 1B** Make a mark 14.5" up from the bent end of the Bottom Pole (BP) (do not scratch the powder coating).




- 2** Mix 5 1/2 bags of concrete, following the directions on the concrete bags. Keep in mind that a thicker mix of concrete will dry stronger. **Save a 1/2 bag of concrete mix to use later in the assembly.**

Fill the hole to the top with concrete.

Insert the dimpled end of the Bottom Pole into the cement up to the 14.5" mark and 4" away from the playing surface.

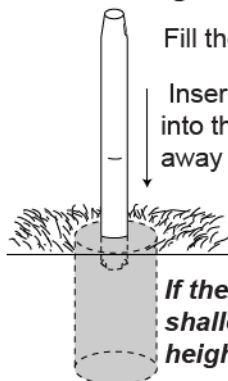


If the pole is buried too deep or too shallow, the Rim will not be at the correct height.

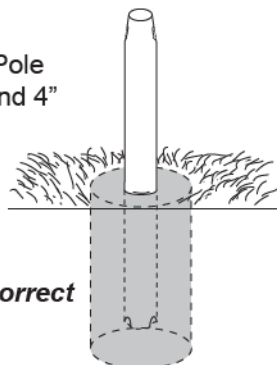


- 3** The slots in the Bottom Pole must be parallel to the playing surface. If necessary, insert a straight object (a ruler, wire, etc.) through the slots in the Bottom Pole. Rotate the pole until the straight object is parallel to the playing surface.

Form the cement into a downward slope away from the pole to allow water runoff. **Failure to do so may result in premature rusting of the pole.**

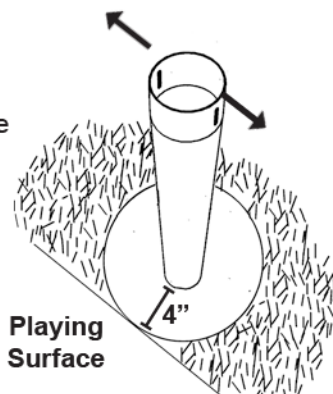

- 4** Place the 1/2" x 3' rebar (not included) inside the Bottom Pole (BP).

Check the pole several times within the first hour to make sure that all sides are vertical and that the pole does not sink into the concrete. The 14.5" mark must remain level with the playing surface.

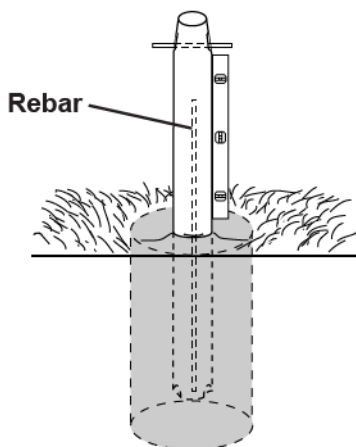

Allow 1-4 hours for the concrete to set.

Do not continue until the concrete has set for 1-4 hours.


- 5** Remove the straight object from the top of the pole.

Mix the remaining 1/2 bag of concrete and pour the concrete into the Bottom Pole until it is just below the slots in the top of the pole.

Do not overfill the pole, or you may not be able to assemble the rest of the pole sections.

Tamp the concrete down in the Bottom Pole with a broom handle to remove any air pockets.

Clean all excess concrete off the outside surface of the pole.

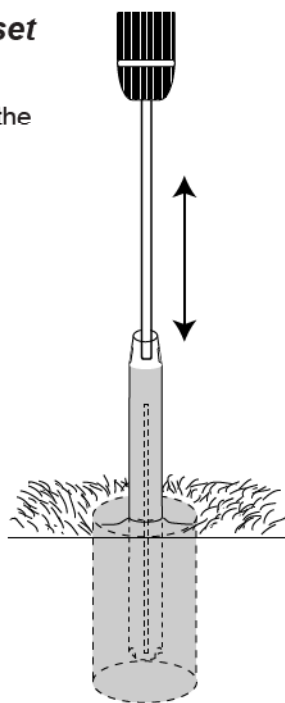


STOP!

The concrete must cure for at least **72 hours (3 days)** before installing the rest of the system. In humid climates or wet weather, allow additional time for the concrete to cure. Do not proceed until the curing process is complete.

**Required For
This Page:**
9/16" Wrenches
Screwdriver

1018684

 
PO
(1)



PP
(2)




PS (2)

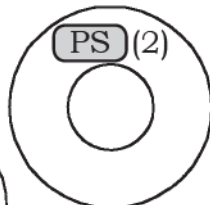



PQ (2)



PR (2)

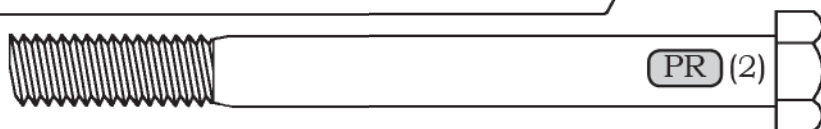


6

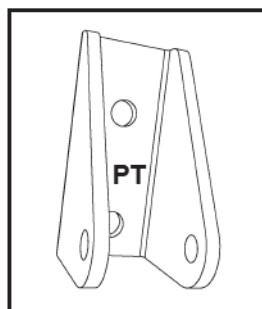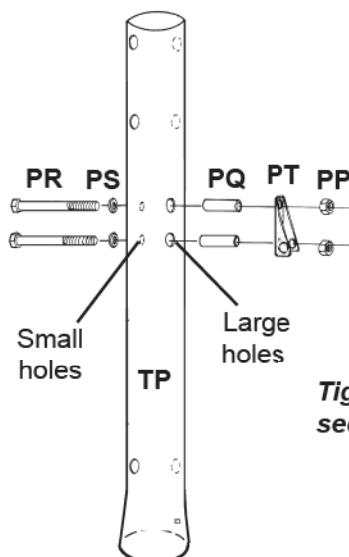

**Tighten all hardware
securely.**

 7




Align the hole in the **Top Pole (TP)** with the slot in the **Middle Pole (PQ)** and slide the **Top Pole** over the **Middle Pole**.

Do not jam the poles together until instructed.

Insert a **1/4" x 3/4" Screw (PO)** through the small hole in the **Top Pole** and into the **Middle Pole**.

Note: There are two screw holes at the bottom of the pole. The correct hole will be slightly larger and slightly higher up on the pole.

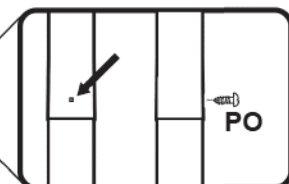


The **Screw** spins freely once installed.

Required For This Page:

Screwdriver

 
Electric Drill 1018684

PV
(1)**This step cannot be reversed.****8**

Strike each end of the pole firmly 5 to 6 times on a piece of scrap wood or cardboard.

If the **Top Pole** does not completely cover the slot on the **Middle Pole** after seating, **DO NOT COMPLETE ASSEMBLY**. Call our Customer Service Department.


Do not hit your feet with the pole sections, as serious injury could occur.

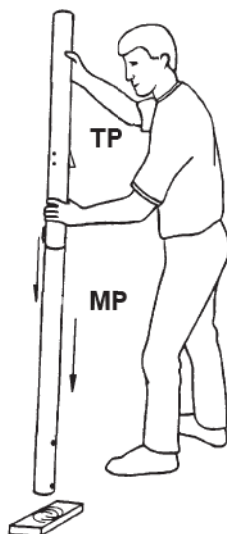**WARNING**


The poles must be seated together!! Even if the poles cover the slots before seating, you must strike them on the wood five to six times!! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage as listed on Page Two.

9

Insert the **Self-tapping screw (PV)** directly into the chuck of an Electric Drill. Screw it into the location shown.



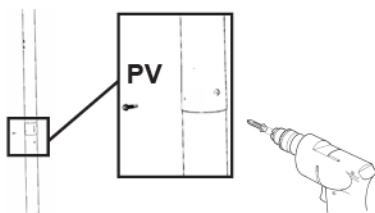
**10**

Slide the small notched end of the **Gas Spring Cover (AI)** over the top of the **Gas Spring (AF)**.

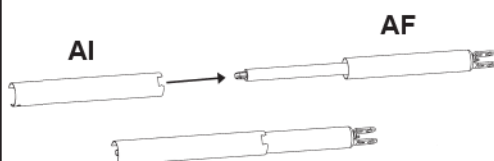


Required For This Page:

3/4" Wrenches 1018684

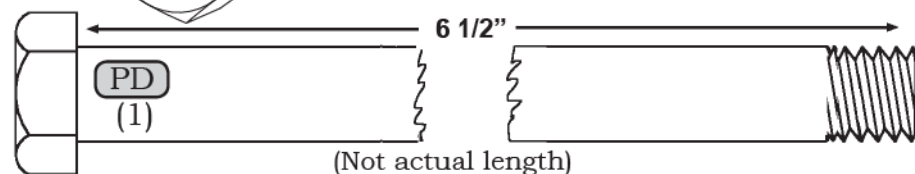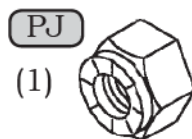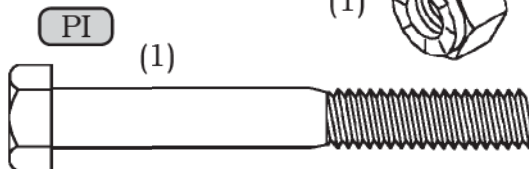


- 11** Align the holes in the **Gas Spring Cover (AI)** and the **Gas Spring (AF)** with the **Bracket (PT)** on the **Top Pole (TP)**.

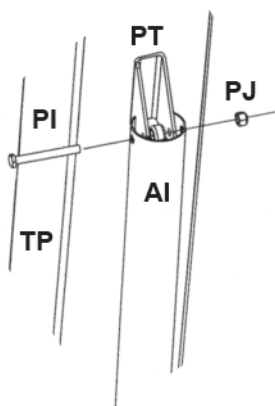

Tighten the Nut until it is flush with the Bolt.

- 12** Line up the **Rear Lifter Arms (AH)** with the **Gas Spring (AF)**.

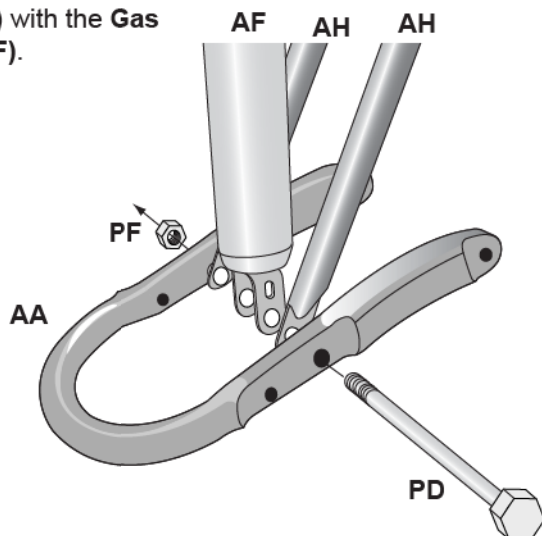

Required For This Page:

9/16" Wrenches



1018684

PH (1)


PP

(2)




PL

(2)

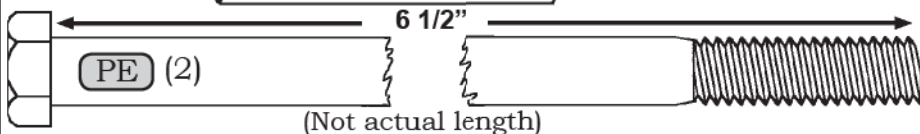


13

Tighten the Nut until it is flush with the Bolt.

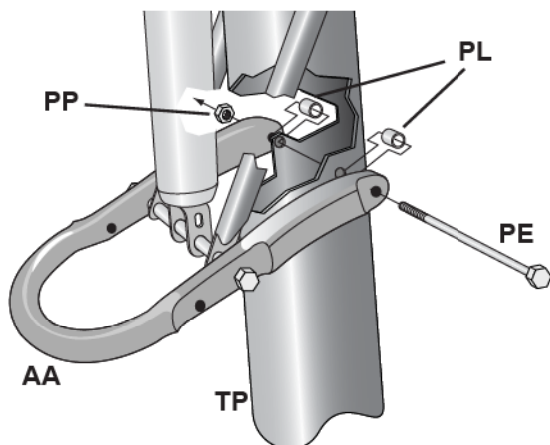


14

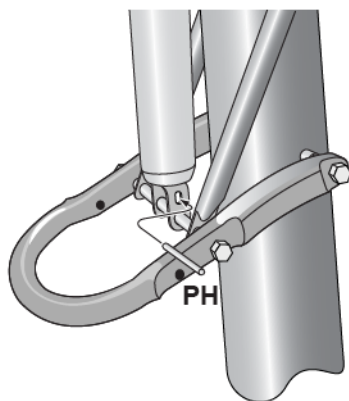


15

The Release Pin (PH) should fit into the channels in the Trigger (AB).

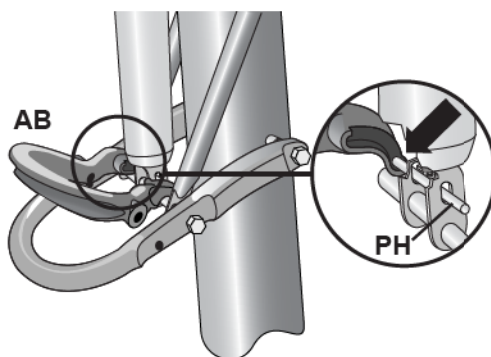

16

Tighten the Nut until it is flush with the Bolt.

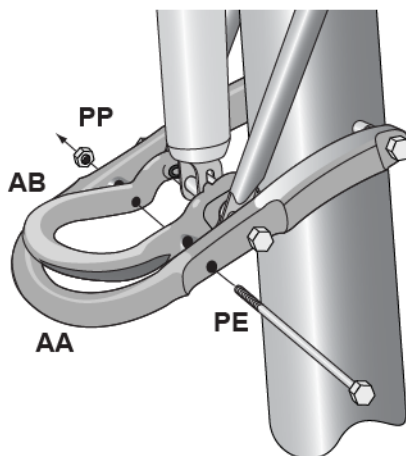

Required For This Page:

7/16" Wrenches

1/2" Wrenches

1039831

(MF)
(2)



(MG)
(2)




(RD)
(2)




(BD)
(2)



(RF)
(2)

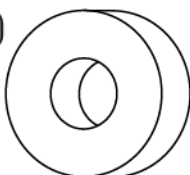


(RE)
(2)

 


HP19900

- 17** Hold the **Backboard Brackets (LB & RB)** together.

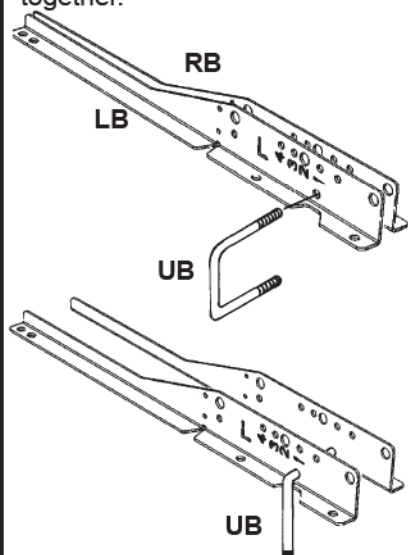


- 18** Make sure the **U-Bolt (UB)** is in the notches.

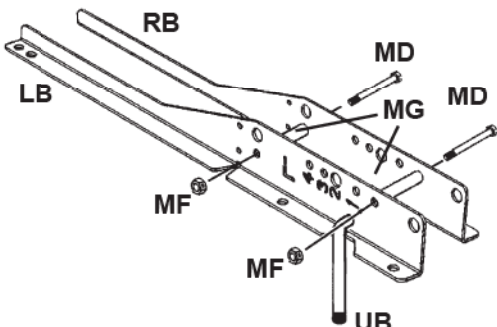


Completely tighten the Nuts (MF).



- 19**

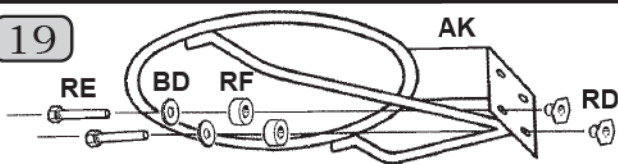

The **Tap Bolts (RE)** should be at the outer edge of the holes.

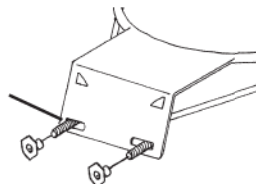

Tighten the T-Nuts (RD) only until the Rubber Washers (RF) begin to bulge.

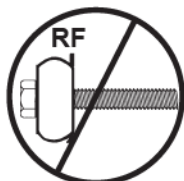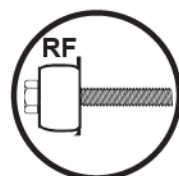


Required For This Page:

1/2" Wrenches



MB (4)


 
RA (2)





MH (2)

HP19900
1039831


- 20** Lay the **Backboard (AJ)** on a table or bench. Slide the **U-Bolt (UB)** through the two openings in the Backboard as shown.

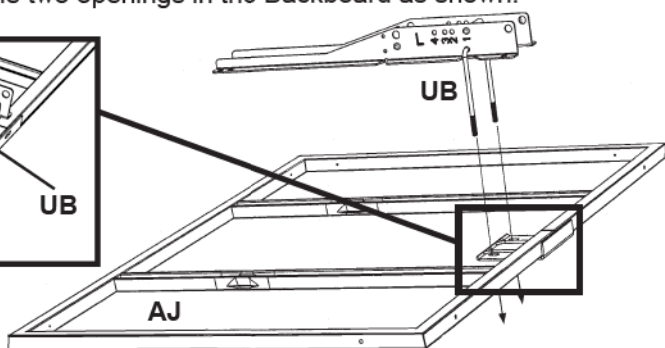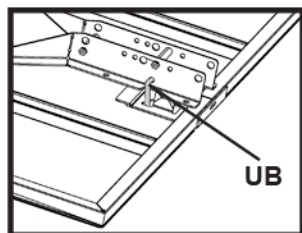

- 21** Slide a **Spacer (MH)** over each **Tap Bolt (RE)** between the **Backboard** and the **Backboard Brackets**.

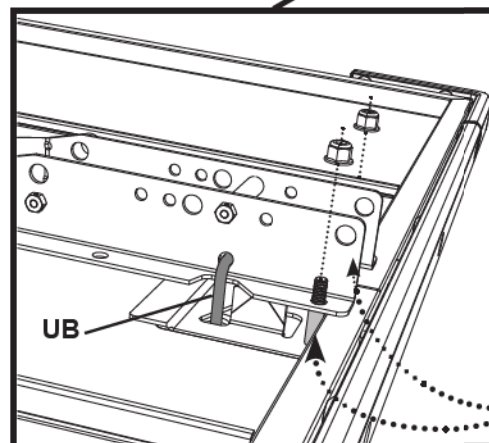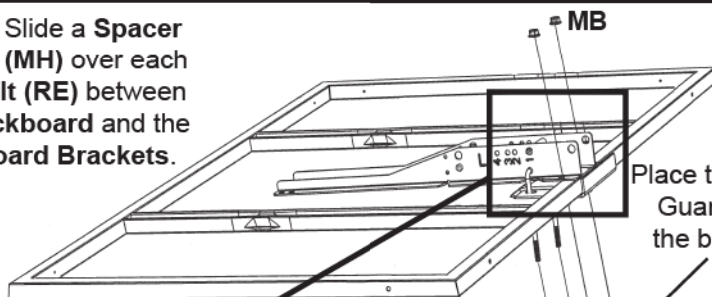

MH

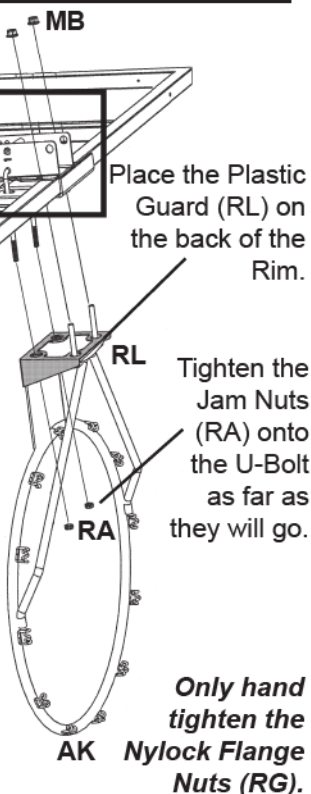

Place the Plastic Guard (RL) on the back of the Rim.

Tighten the Jam Nuts (RA) onto the U-Bolt as far as they will go.

Only hand tighten the Nylock Flange Nuts (RG).

Required For This Page:


1/2" Wrenches



MB (2)




MC (2)

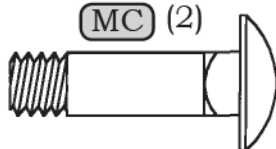

PS


(2)

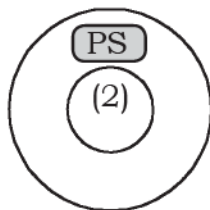


HP19900
1039831

22

Only hand tighten the Nylock Flange Nuts (MB).

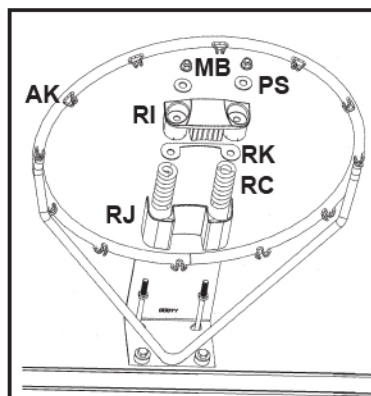



The Silver Spring Cover (RJ) fits into the Rim slots.

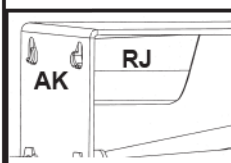

Tighten the Nuts (MB) later to adjust the Rim tension.

23

Slide a Carriage Bolt (MC) into the crimped slot of each Backboard Channel.

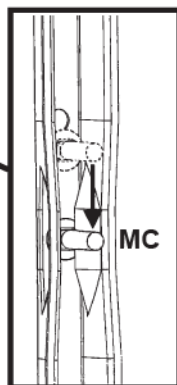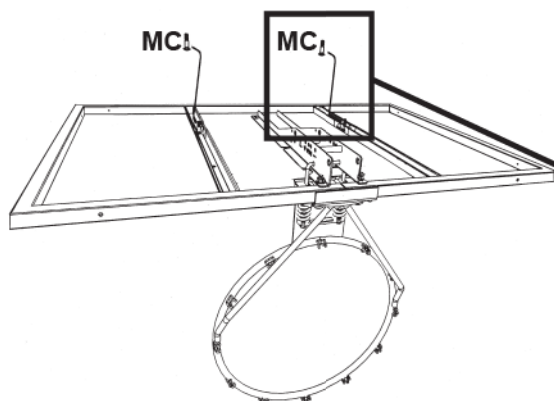

Required For This Page:

1/2" Wrenches



Electric Drill


1039831



MB
(2)


HH00700

 FA (10)



24


Bend the **Backboard Brackets (LB & RB)** outward.

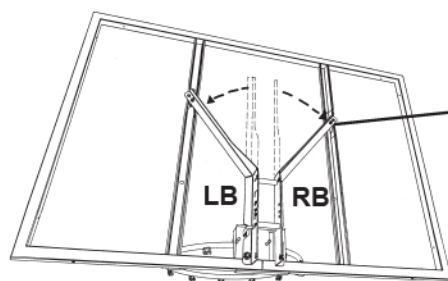

The lower holes should go over the **Carriage Bolts**.

Do not overtighten the Nuts (MB).



Completely tighten all Rim hardware.

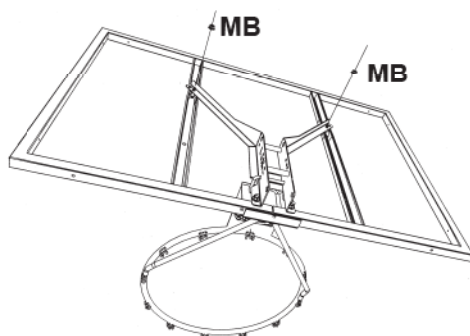

25

The lip of the **Frame Pad** overlaps the front of the **Backboard**.

Use an electric drill to insert the **Screws**.

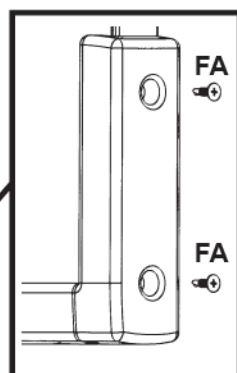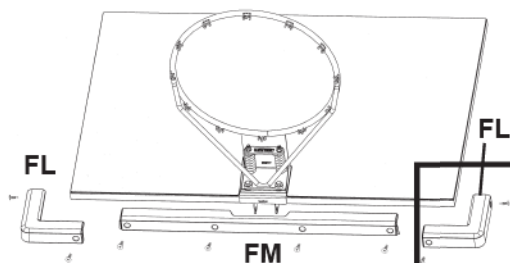

Required For This Page:


3/4" Wrenches



1018684

PF



(2)

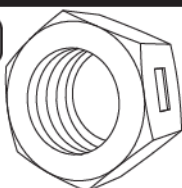


1039831

ME

(4)

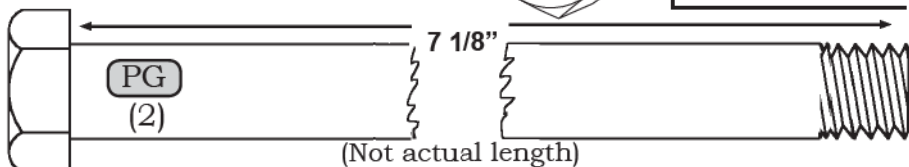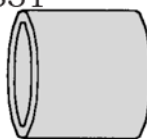


26

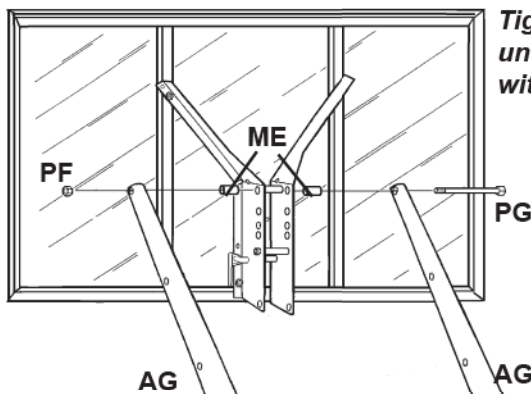

Tighten the Nut until it is flush with the Bolt.



27

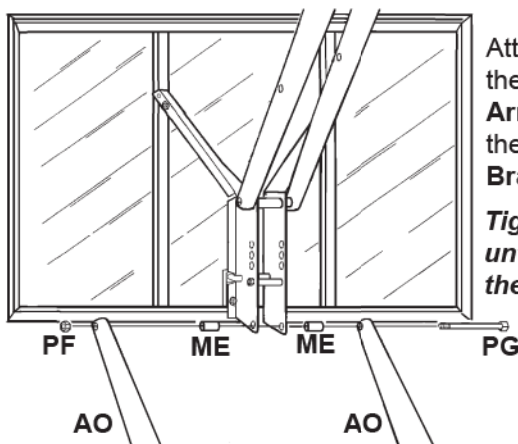


Attach this end of the Long Extension Arms (AO) to the Backboard Brackets.

Tighten the Nut until it is flush with the Bolt.



28


The **Backboard and Rim** must rest on cardboard to prevent scratching.

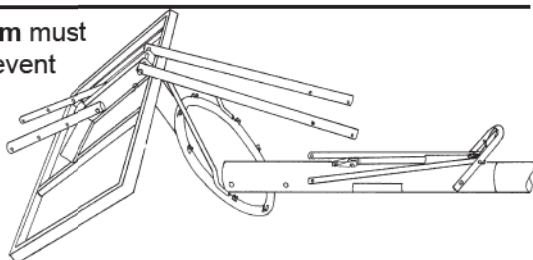



3/4" Wrenches



PF
(2)


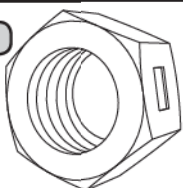


PM
(2)

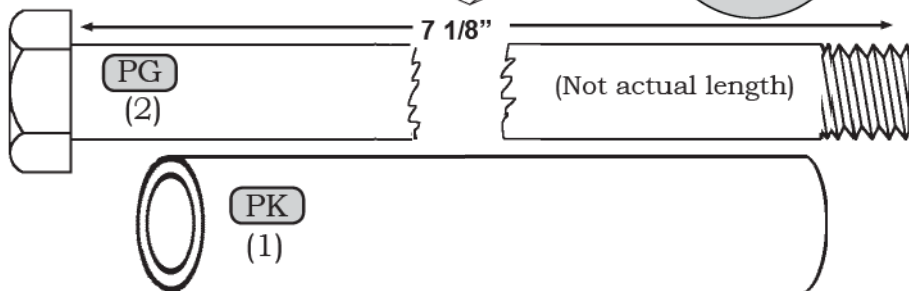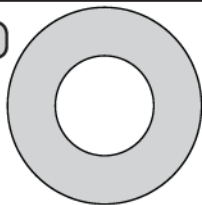


29

The Rear Lifter Arms must be on the *inside* of the **Extension Arms**.

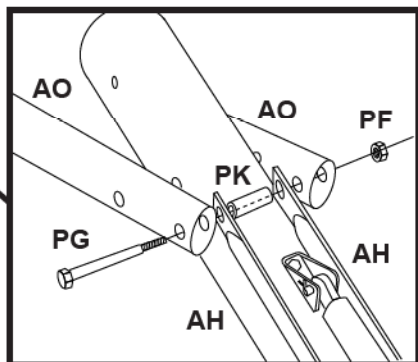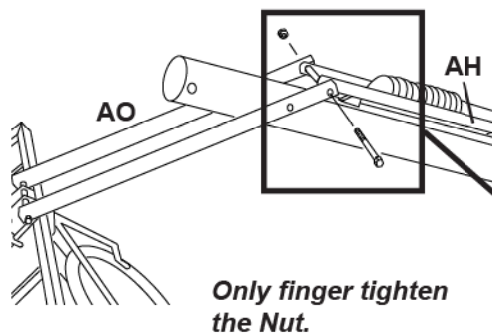

30

Only finger tighten the Nut.

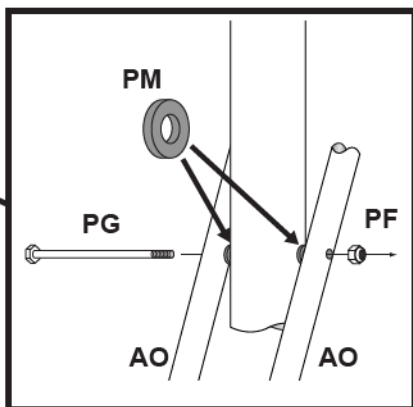


Required For This Page:

3/4" Wrenches





1018684

PF
(1)


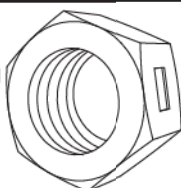


PM
(2)

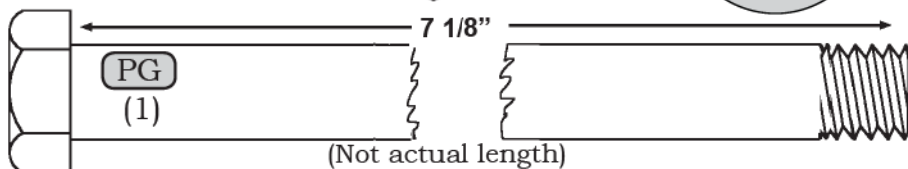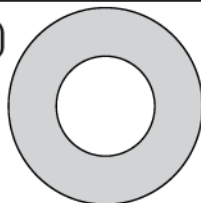

31


There must be a 1/2" x 1/8" **Spacer (PM)** between each **Short Extension Arm (AG)** and the Pole.

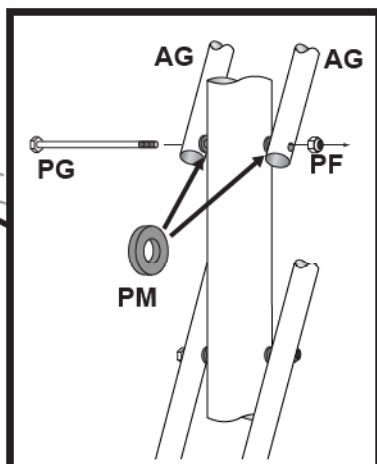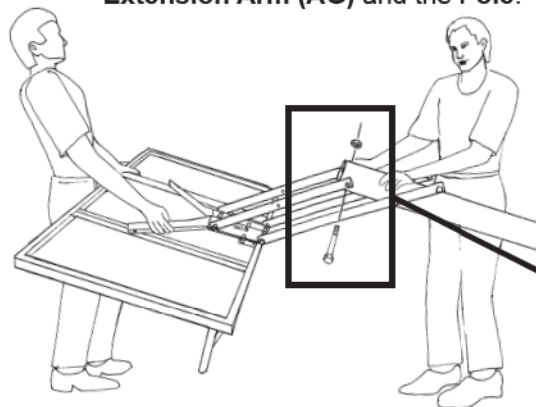

Completely tighten the Nuts from steps 29 through 31.

32

Insert **Net (RG)** between metal loops of **Nethooks**.

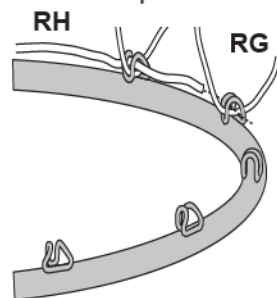


Thread Cord (RH) through **Nethook** and **Net**. After threading **Cord** around **Rim**, tie ends of **Cord** together with a secure knot.

Please call our Customer Service Department at the number on Page Two to obtain replacement Nets. Our Nets are shorter than average to reduce the risk of entanglement.

33

Apply **Grease (PB)** to these areas.

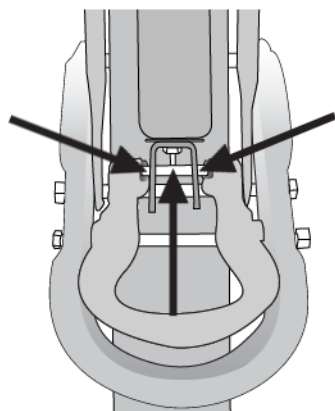

Required For This Page:

 
Screwdriver
Hammer/Mallet

1018684




PO

(1)



PV

 (1)



AT LEAST 2 ADULTS REQUIRED FOR THIS STEP

34

Make sure the Backboard faces the playing surface and align the small hole in the Middle Pole (MP) with the correct slot in the Bottom Pole (BP). Slide the Middle Pole over the Bottom Pole.

Insert the remaining 1/4" x 3/4" Screw (PA) through the small hole in the Middle Pole and into the Bottom Pole.

The Screw will spin freely once installed.

TP


Note: There are two screw holes at the bottom of the pole. The correct hole will be slightly larger and slightly higher up on the pole.

Place the **Wood Block (AC)** on top of the **Pole** and strike with a hammer six or seven times.


If the **Middle Pole** does not completely cover the slot on the **Bottom Pole** after seating, **DO NOT COMPLETE ASSEMBLY**. Call our Customer Service Department.

MP

BP

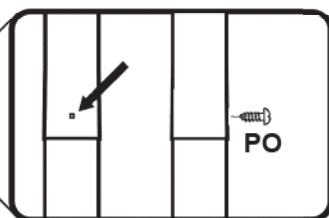


Insert the **Pole Cap (PA)** into the Pole.

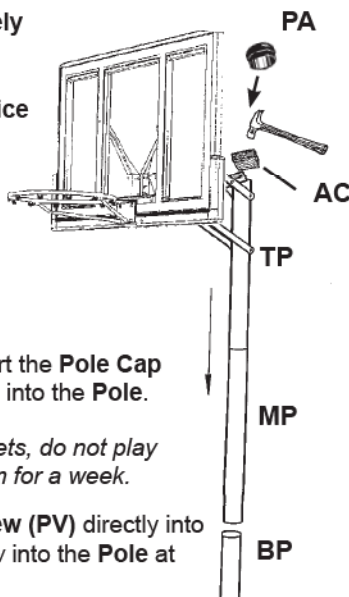

Important: To ensure concrete fully sets, do not play aggressively on your basketball system for a week.

Insert the remaining **Self-tapping Screw (PV)** directly into the chuck of the Electric Drill and screw into the Pole at the location shown.

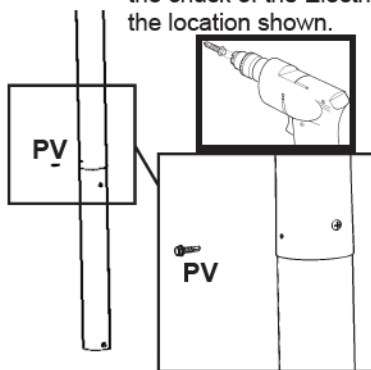

WARNING




The poles must be seated together!! Even if the pole covers the slot before seating, you must strike them on the wood five to six times!! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage as listed on Page Two.

35

Raise the **Backboard** until the **Rim** is at 10 feet, 1 inch above the playing surface

Remove about an inch of backing from the top of the **Height Sticker (AM)**. Squeeze the **Gas Spring Cover (AI)** to allow room for the **Sticker** and apply the **Height Sticker** to the back of the **Gas Spring (AF)**, lining up the 10' 1" line with the height indicators as shown. Press the **Sticker** into place while slowly removing the rest of the backing to prevent wrinkles in the **Sticker**.

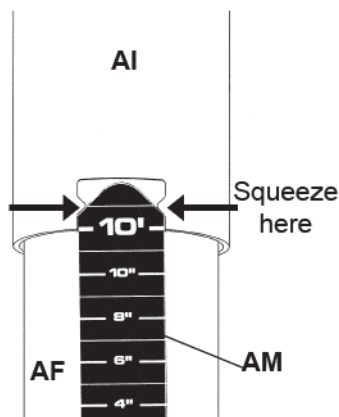

WARNING



Use extreme caution when standing on ladders to perform assembly steps. Follow all warnings and cautions on the ladder carefully. Failure to follow all of these instructions and warnings could lead to serious injuries or property damage as listed on Page Two.

Operation of the height adjustment system

The adjustable system may be adjusted from 7 1/2 feet to 10 feet.

Hold the Handle tightly and squeeze the Trigger to engage the Gas Spring. Raise the Handle to lower the Backboard, or lower the Handle to raise the Backboard.

**WHILE TRANSPORTING THE PORTABLE SYSTEM,
USE CAUTION TO PREVENT THE MECHANISM
FROM ADJUSTING.**

***Only clean the Backboard with the approved
cleaning materials listed below:***

Windex¹

Joy²

PK. Clean²

Fantastik³

Formula 409⁴

The use of other chemicals will void the warranty.

¹Registered Trademark of the Drackett Products Company.

²Registered Trademarks of Procter & Gamble.

³Registered Trademark of Texize, Division of Norton Norwich Products Inc.

⁴Registered Trademark of the Clorox Company.



WARNING



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE.

Owners must ensure that all players know and follow these rules for safe operation of the system.

- Only hang from the rim briefly to regain balance or avoid injuring others. Release the rim as soon as safely possible.
- During play, especially when performing dunk type activities, keep player's face away from the backboard, rim, and net. Serious injury could occur if teeth/face come in contact with the backboard, rim, or net. Player should wear a mouth guard during play.
- Do not slide, climb, or play on pole.
- When adjusting height or moving system, keep hands and fingers away from moving parts.
- Do not allow children to move or adjust system.
- Do not wear jewelry (rings, watches, necklaces, etc.) during play. Objects may entangle in net.

- Keep organic material away from pole base. Grass, litter, etc. could cause corrosion and/or deterioration.
- Once a month check pole and all metal parts for signs of corrosion (rust, pitting, chipping). Completely remove rust and repaint with exterior enamel. If rust has penetrated any steel part, replace that part immediately.
- Check system before each use for loose hardware, excessive wear, instability, and signs of corrosion and repair before use.
- Never play on damaged equipment.
- Do not use the system to lift or hoist anything. The mechanism is designed to lift only the weight of the backboard and rim. Do not hang anything from the handle, rim backboard, or lifter arms as this will damage the system and void the warranty.



ADVERTENCIA



AVERTISSEMENT



SI NO SE OBEDECEN ESTAS ADVERTENCIAS PUEDEN PRODUCIRSE GRAVES LESIONES Y/O DAÑOS A LA PROPIEDAD.

El propietario del sistema debe asegurarse de que todos los jugadores conozcan y respeten estas reglas para que el sistema se use en forma segura.

- Cuélguese del aro sólo en forma breve, para recuperar el equilibrio o evitar lesionar a otros jugadores. Suéltese del aro lo más pronto que pueda hacerlo con seguridad.
- Durante el juego, especialmente al embocar violentamente de alto, la cara de los jugadores debe mantenerse alejada del tablero, el aro y la red. Pueden producirse lesiones graves si los dientes o la cara entran en contacto con el tablero, el aro o la red. Los jugadores deben usar un protector bucal durante el juego.
- No se deslice, no trepe ni juegue sobre el poste.
- Mantenga las manos y los dedos alejados de las piezas móviles cuando regule la altura del sistema.
- No deje que los niños regulen el sistema.
- No use joyas (anillos, relojes, collares o gargantillas, etc.) durante el juego. Estos objetos pueden engancharse en la red.
- No permita que la base del poste entre en contacto con materiales orgánicos. El pasto, los desechos animales, etc., pueden causar corrosión y/o deterioros.
- Controle el poste y todas las piezas metálicas una vez al mes en busca de signos visibles de corrosión (oxidación, picaduras, escamado). Elimine todo rastro de óxido y vuelva a pintar con esmalte para exteriores. Si el óxido ha penetrado cualquier pieza de acero, reemplace esa pieza de inmediato.
- Inspeccione el sistema antes de cada uso para verificar que los elementos de fijación no estén flojos, que no haya desgaste excesivo, inestabilidad ni signos de corrosión. Si encuentra irregularidades, repárelas antes de usar el sistema.
- Nunca juegue con un equipo dañado.
- No use el sistema para levantar ningún objeto. El mecanismo está diseñado para elevar solamente el peso del tablero con el aro. No cuelgue nada de la agarradera, el aro, el tablero ni los brazos de elevación, ya que esto puede dañar el sistema y anular la garantía.

FAUTE DE NE PAS SUIVRE CES AVERTISSEMENTS, VOUS RISQUEZ DE CAUSER DES BLESSURES GRAVES ET/OU DES DOMMAGES À L'ÉQUIPEMENT.

Le propriétaire doit s'assurer que tous les joueurs connaissent et appliquent les règles suivantes afin d'utiliser l'équipement en toute sécurité.

- Ne vous suspendez pas à l'anneau plus que nécessaire pour retrouver votre équilibre ou éviter de blesser les autres joueurs. Relâchez l'anneau aussitôt que possible.
- Lors d'un match, particulièrement dans le cas des smashes, le visage du joueur ne doit pas faire face au panneau, à l'anneau, ni au filet. Le joueur risque de graves blessures si ses dents ou son visage entrent en contact avec le panneau, l'anneau, ou le filet. Les joueurs doivent toujours porter un protège-dents lorsqu'ils jouent.
- Ne glissez pas, ne grimpez pas, et ne jouez pas sur la base ou le poteau.
- Lorsque vous ajustez la hauteur ou l'équipement, gardez vos mains et doigts loin des pièces mobiles.
- N'autorisez pas les enfants à ajuster l'équipement.
- Ne portez pas de bijoux (bagues, montres, colliers, etc.) lorsque vous jouez. Ces objets pourraient s'accrocher au filet.
- Gardez la base du poteau libre de toute matière organique. L'herbe, les déchets, etc. peuvent la corroder et la détériorer.
- Une fois par mois, vérifiez que le poteau et toutes les pièces en métal ne montrent pas de signes de corrosion (rouille, piqûres, écaillage). Enlevez toute la rouille et repeignez complètement avec une peinture pour extérieur. Si la rouille a pénétré une des pièces en acier, vous devrez remplacer immédiatement la pièce en question.
- A chaque fois que vous allez utiliser l'équipement, vérifiez d'abord l'équilibre, la possibilité de pièces desserrées ou usées, la stabilité de l'équipement et tout signe de corrosion ou réparation nécessaire avant utilisation.
- Ne jouez jamais avec un équipement endommagé.
- N'utilisez pas l'équipement pour lever ou soulever quoique ce soit. Son mécanisme a été conçu uniquement pour soutenir le poids du panneau et de l'anneau. N'accrochez rien au manche, à l'anneau, au panneau ni aux leviers sous peine d'endommager l'équipement et d'annuler la garantie.

#FS16500 10/12/2004

www.lifetime.com

LIFETIME BASKETBALL EQUIPMENT

6-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of six years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.

2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective basketball equipment. If the equipment is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.

3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the net or rim will void this warranty.

4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.

5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.

6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or
call (800) 225-3865 M-F 7 a.m. to 5 p.m. MST.

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our Web site at www.lifetime.com



www.lifetime.com

©2004 Lifetime Products, Inc.

PO Box 160010 • Freeport Center, Bldg. D-11 Clearfield, Utah 84016-0010

T: 800-225-3865 • F: 801-728-1907