 


92103 POWER LIFT™



1-800-225-3865
customercare@lifetime.com
csinternational@lifetime.com

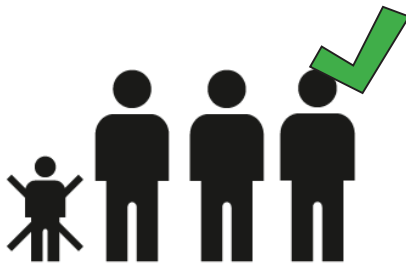

 
Save these instructions in the event the manufacturer must be contacted for replacement parts.

TOOLS NOT INCLUDED

1/2" (≈13 mm), 7/16" (≈11 mm),
9/16" (≈14 mm), 3/4" (≈19 mm)



(x2)



(x1)



(x1)



(x1)



 
(x3)



(x1)



(x1)

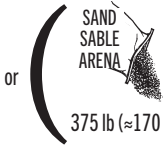

375 lb (≈170 kg)



(x1)



(x1)



(x1)



(x1)



(x1)



(x1)



(x1)



Product ID:



English

NBA:

The NBA and individual NBA member team identifications reproduced on this product are trademarks and copyrighted designs, and/or other forms of intellectual property, that are the exclusive property of NBA Properties, Inc. and the respective NBA member teams and may not be used, in whole or in part, without the prior written consent of NBA Properties, Inc. © 2025 NBA Properties, Inc. All rights reserved.

WNBA:

The WNBA and individual WNBA member team identifications reproduced on this product are trademarks and copyrighted designs, and/or other forms of intellectual property, that are the exclusive property of WNBA Enterprises, LLC and the respective WNBA member teams and may not be used, in whole or in part, without the prior written consent of WNBA Enterprises, LLC. © 2025 WNBA Enterprises, LLC. All rights reserved.



ICON LEGEND

92103



- Indicates special heed should be taken when reading.



- Indicates the parts (or no parts) required for a section.



- Indicates the hardware (no new hardware) required for a specific page or section.



- Indicates the tools (or no tools) to be used for a section.



 
- Indicates to use/not use an electric drill for a specific step.



- Indicates the number of adults required to perform a specific step, e.g., 2, 3, 4, etc. **You may be able to do certain steps by yourself but, for safety reasons, it's best to have two or more adults. And...it's always easier with one or two helpers.**



- Indicates to repeat a step or an action.

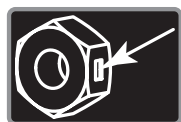

- Indicates the use of a centerlock nut. A nut with this marking will require some effort to tighten. This hardware was designed with this feature in order to prevent loosening later.



- Indicates a specific step is harder to perform.



- Indicates that one should only hand-tighten the hardware until instructed otherwise.



WARNINGS & NOTICES

92103



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this product without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this product is not installed, maintained, and operated properly.

- If using a ladder during assembly, use extreme caution.
- Three capable adults are recommended for this operation.
- Check base daily for leakage. Leaks will cause system to fall.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play or transport.
- Minimum operational height is 6 ft 6 in (1.98m) to the bottom of the backboard.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

 


HARDWARE BAGS


92103

1:1


1

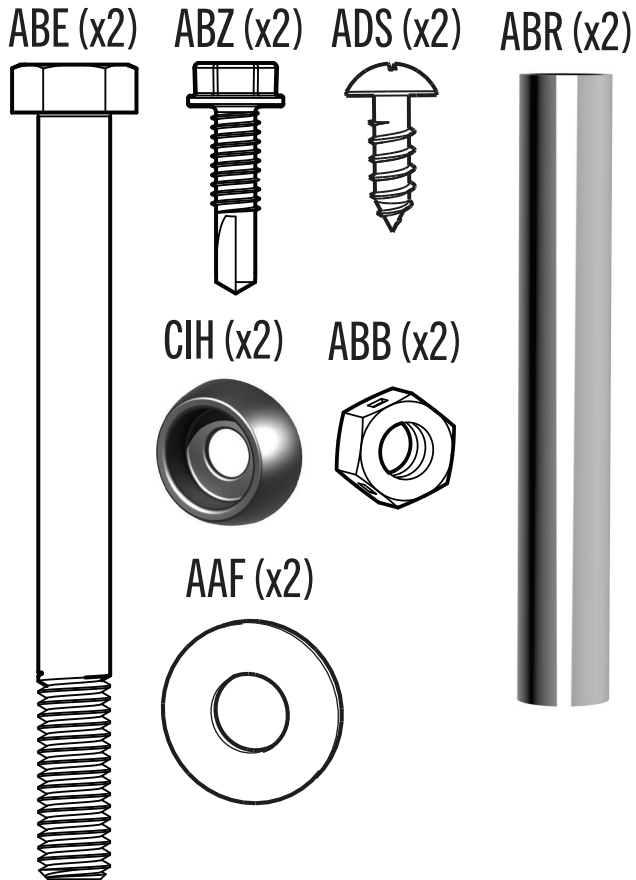

2

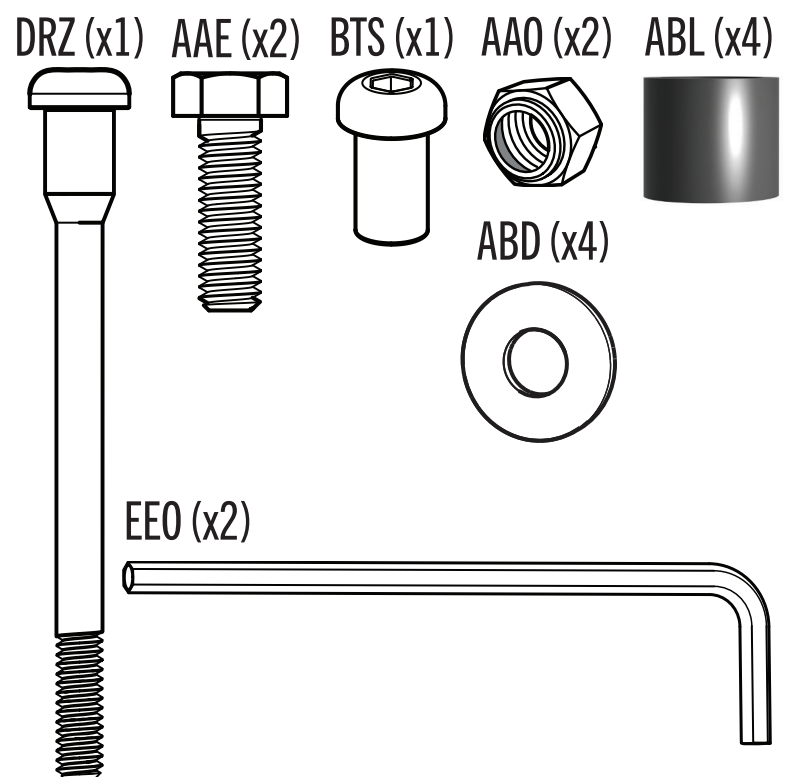 

3

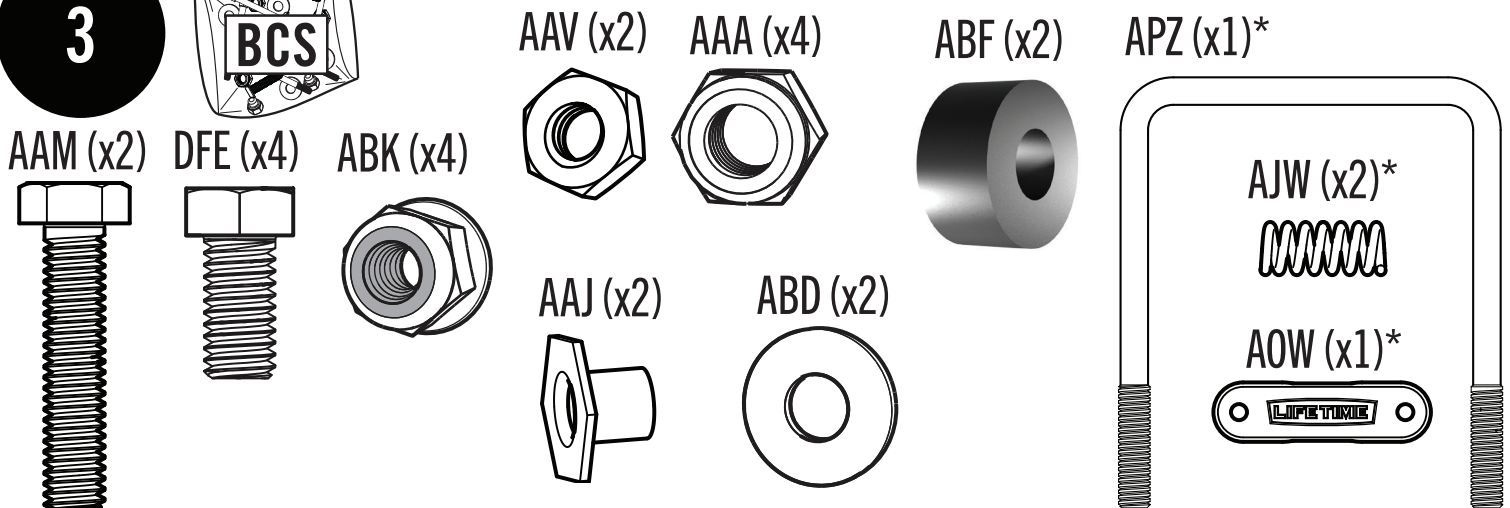 



HARDWARE BAGS

90228

1:1

 
4



HMP (x2)



AAX (x4)

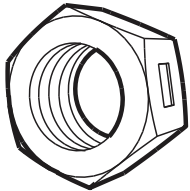

ABN (x8)



GBU (x2)



AAD (x2)



5



 
AAD (x1)



AAW (x1)




AKH (x1)*



ABA (x2)



 BSF (x1)



HNX (x1)



ABM (x2)



AQE (x1)



AAX (x2)


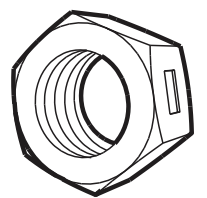 


ABB (x2)

 

BSG (x1)

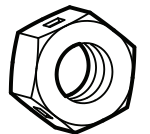

AAO (x1)



(Not used)



HARDWARE BAG

 
92103

1:1

6



ADP (x10)



METAL PARTS

ALH (x1)



ALF (x1)



 
ALE (x1)



ALI (x2)



ALX (x1)

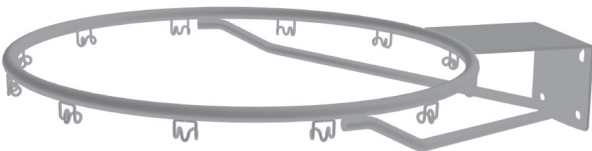

AMY (x2)



DFD (x1)



AKC (x2)



AKF (x1)



APZ (x1)



AKB (x2)



ALS (x2)



AOW (x1)



AJW (x2)



AJC (x1)



 
HJX (x1)



ALL (x1)



AJI (x1)

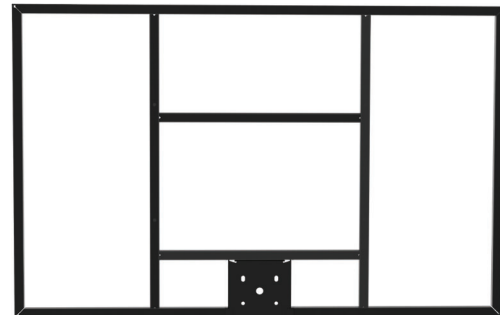



PLASTIC PARTS

92103

AJM (x1)



AMU (x2)



FIQ (x1)



 
FIR (x1)



AJQ (x1)



AKP (x1)




BAA (x1)



BAB (x1)



 AKZ (x1)

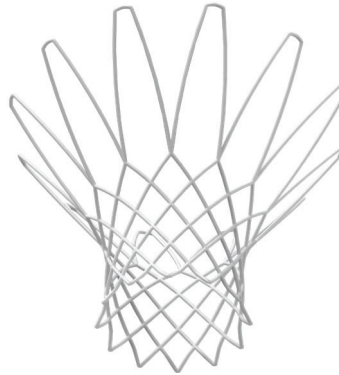

ALM (x1)



ALD (x1)



AEF (x2)



AKG (x1)



AKI (x1)



AMN (x1)



 


POLE ASSEMBLY

92103




ABE (x2)

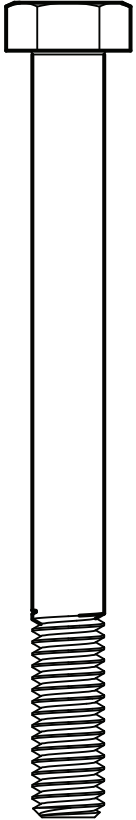


ABR (x2)



 
ABB (x2)

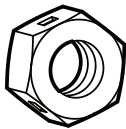


AAF (x2)

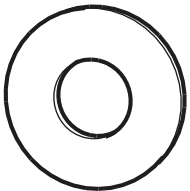 

 
1.1

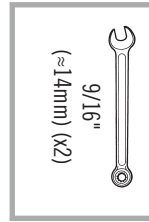

9/16"
(≈14mm) (x2)

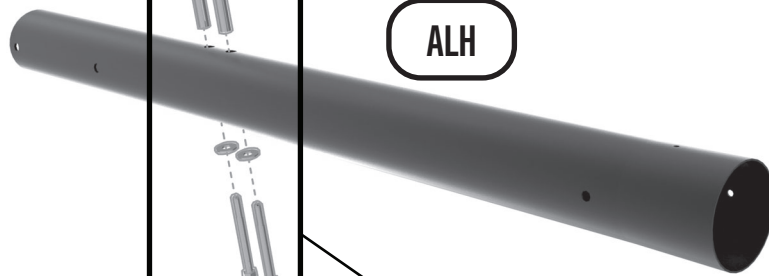 

ALH

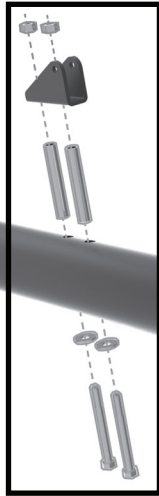 


Large holes



Small holes



 ABB (x2)

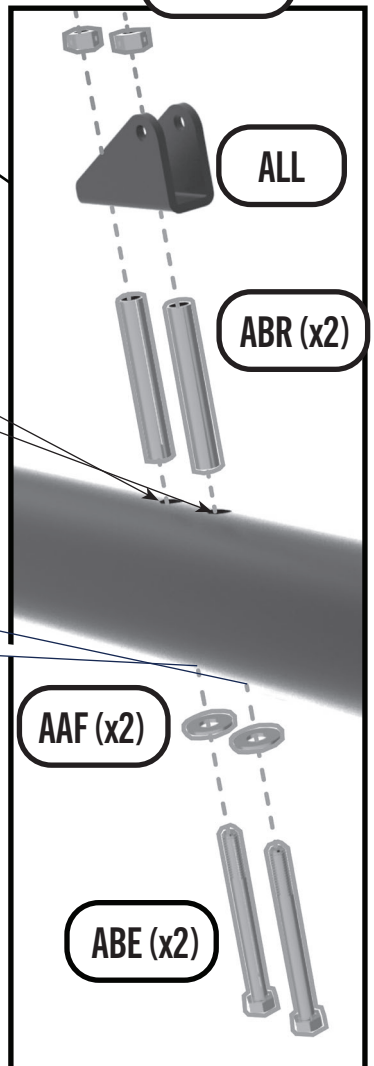

ALL

 
 
ABR (x2)

AAF (x2)


ABE (x2)

1.2

- Align the hole in **top pole (ALH)** with the slit in the **middle pole (ALF)**. Carefully slide the middle pole into the top pole, keeping the slit in the middle pole aligned with the hole in the top pole.

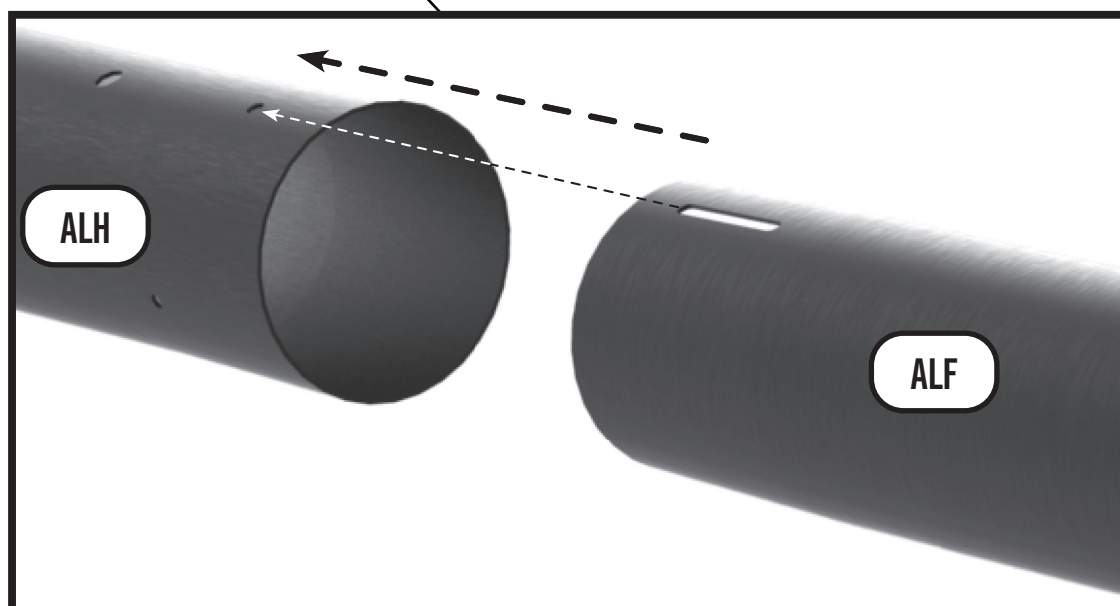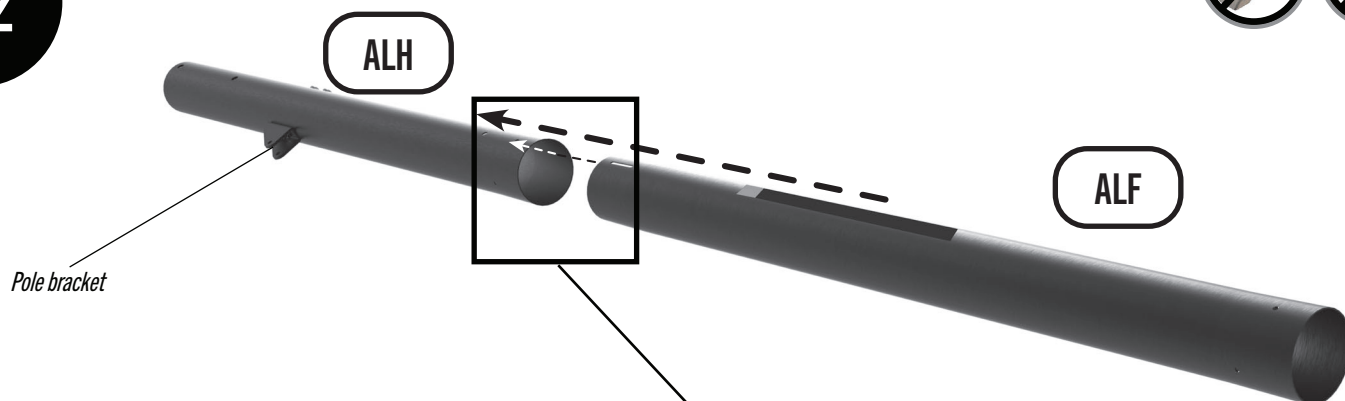


- Lowest, small hole aligned with slit

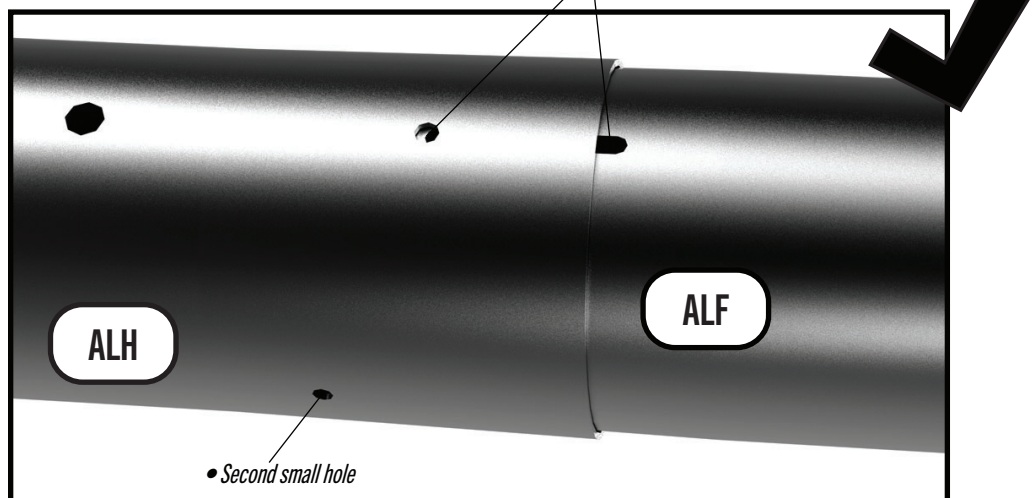 






92103

 
ADS (x1) CIH (x1)



   1.3

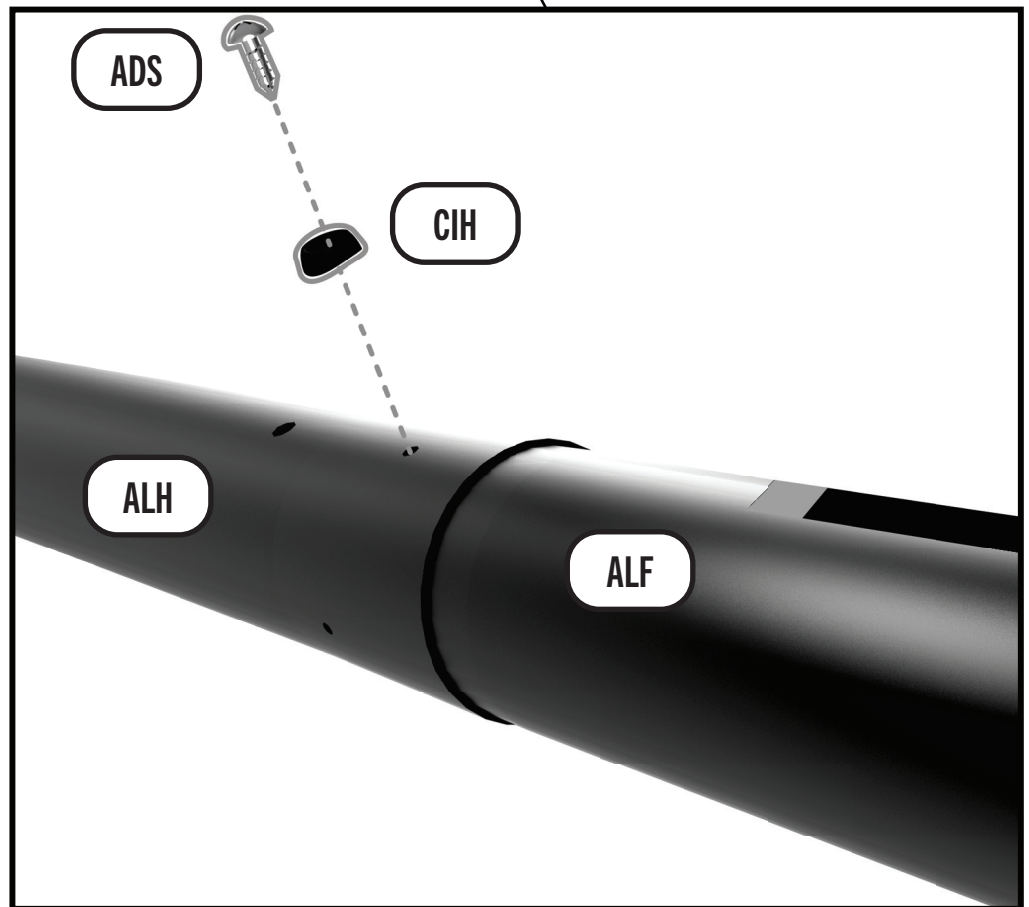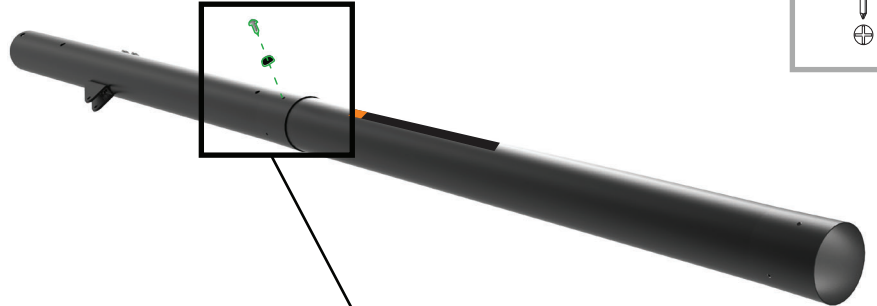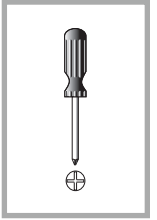


 **This screw simply keeps all holes aligned. It spins freely.*




1.4

 - Align the hole in **middle pole (ALF)** with the slit in the **bottom pole (ALE)**. Carefully slide the bottom pole into the middle pole, keeping the slit in the bottom pole aligned with the hole in the middle pole.

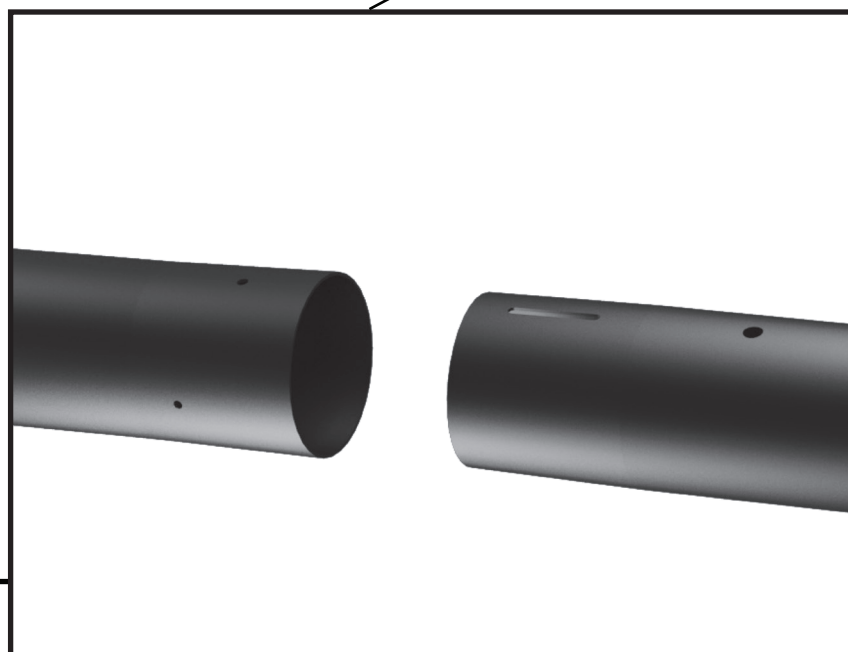

- Lowest, small hole aligned with slit

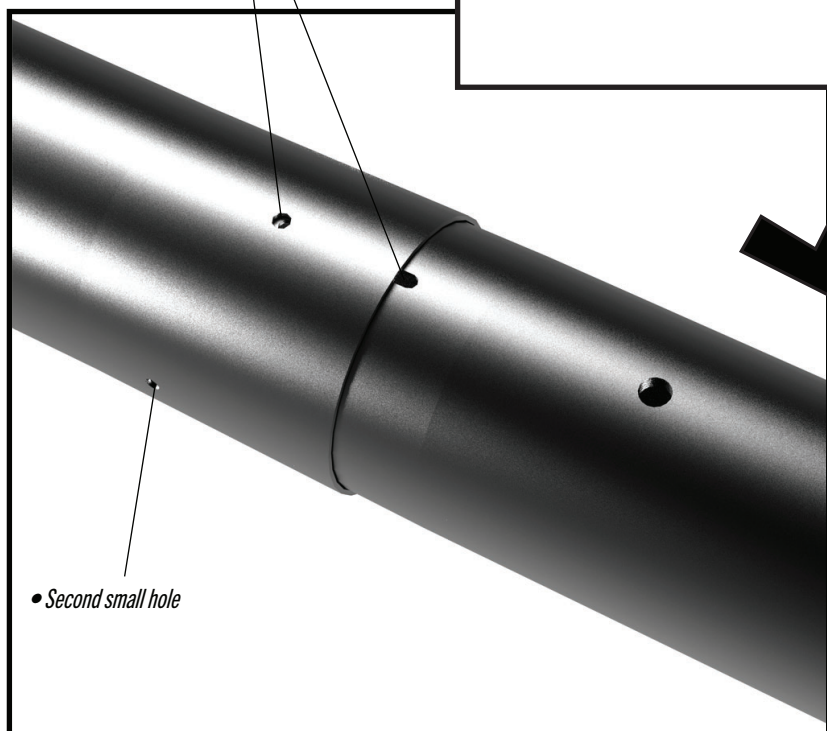 


- Second small hole



92103

 
ADS (x1) CIH (x1)



1.5




 
**This screw simply keeps all holes aligned. It spins freely.*

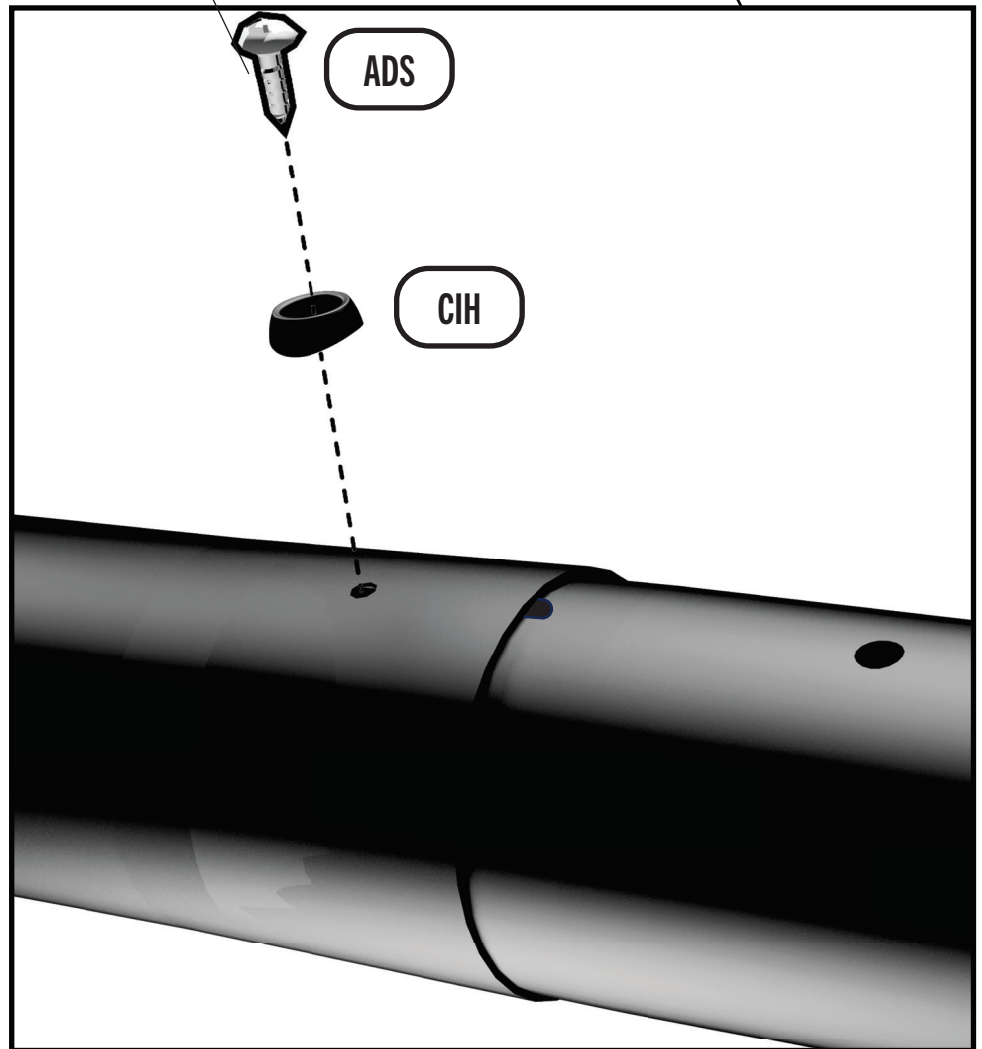

1.6

THIS STEP CANNOT BE REVERSED!

  - This step must be done! Ensure steps 1.1–1.5 have been done correctly before performing this step.
Strike hard 5–6 times on wood.

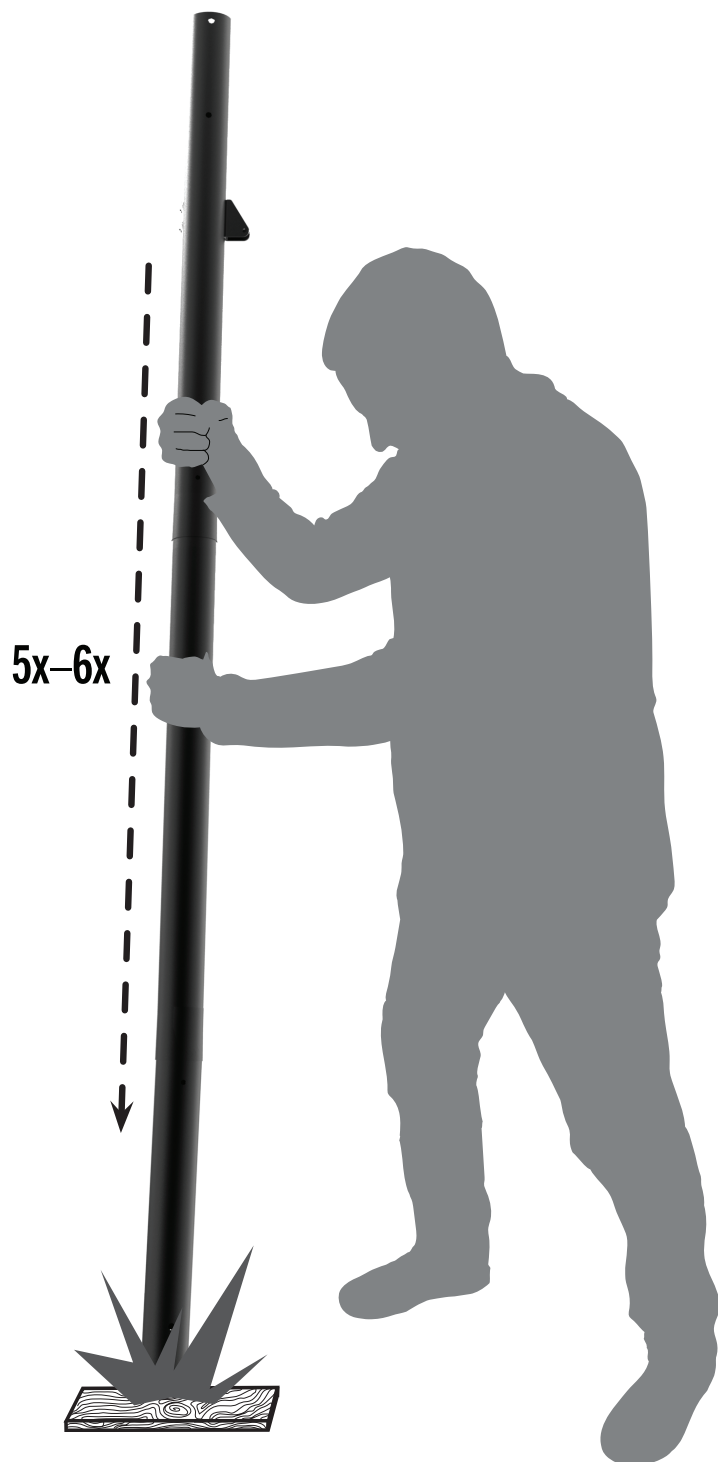
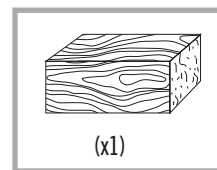


1.7

- Ensure the slit is covered.

WARNING

  The poles must be seated together! Even if the poles cover the slots before seating, they must be struck on a hard surface five to six times! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage.

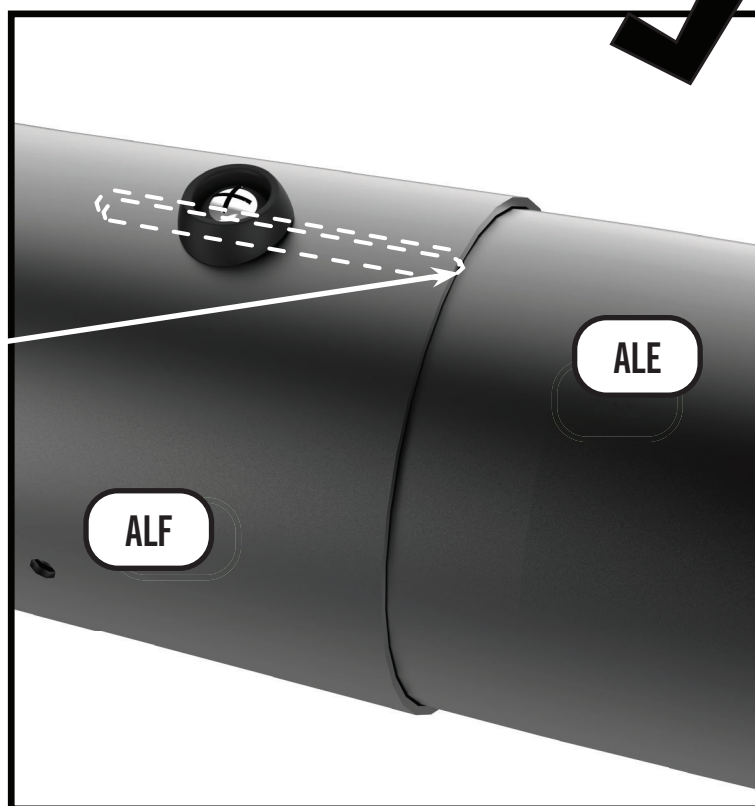
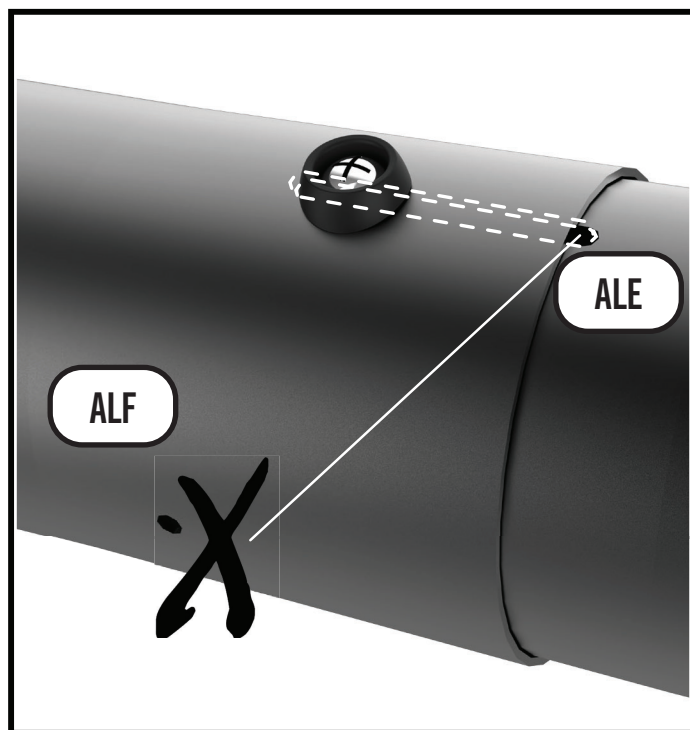


- This slit must be covered.

1.8

THIS STEP CANNOT BE REVERSED!

  1. Flip pole over.
2. This step must be done! Strike hard 5–6 times on wood.

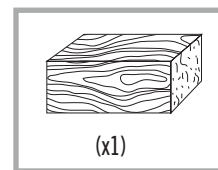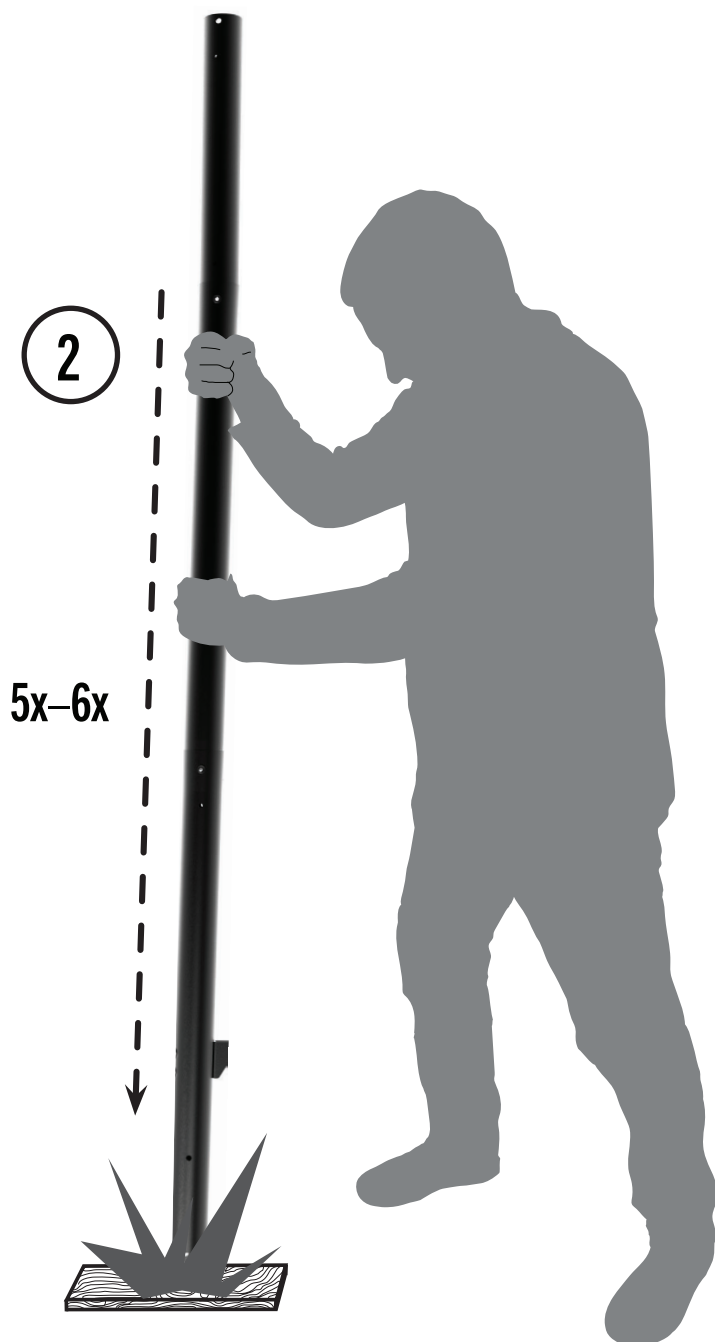

1.9

 
 
- Ensure the slit is covered.



WARNING




The poles must be seated together! Even if the poles cover the slots before seating, they must be struck on a hard surface five to six times! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage.

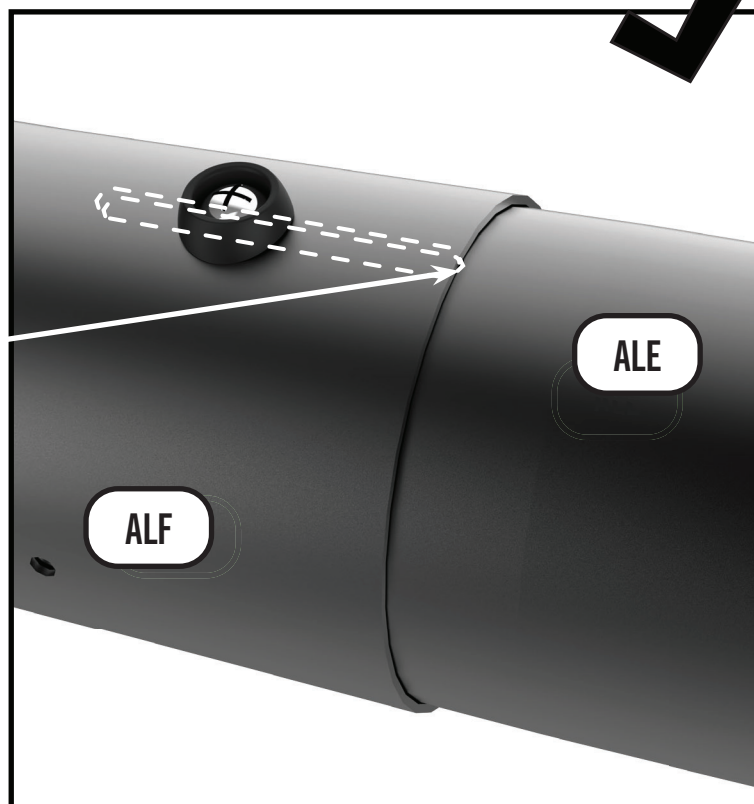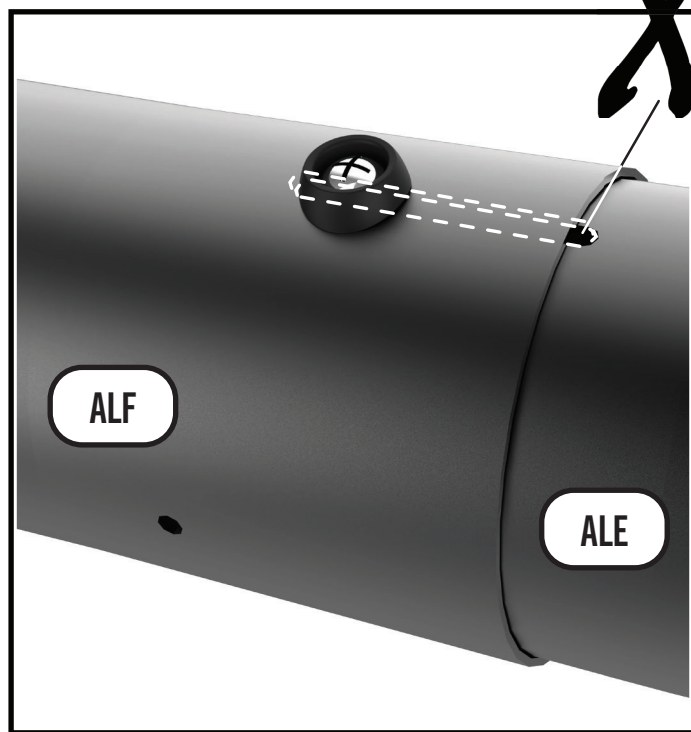

This slit must be covered.





 ABZ (x2)



1.10

  - These **screws (ABZ)** lock the poles in place with the holes aligned.

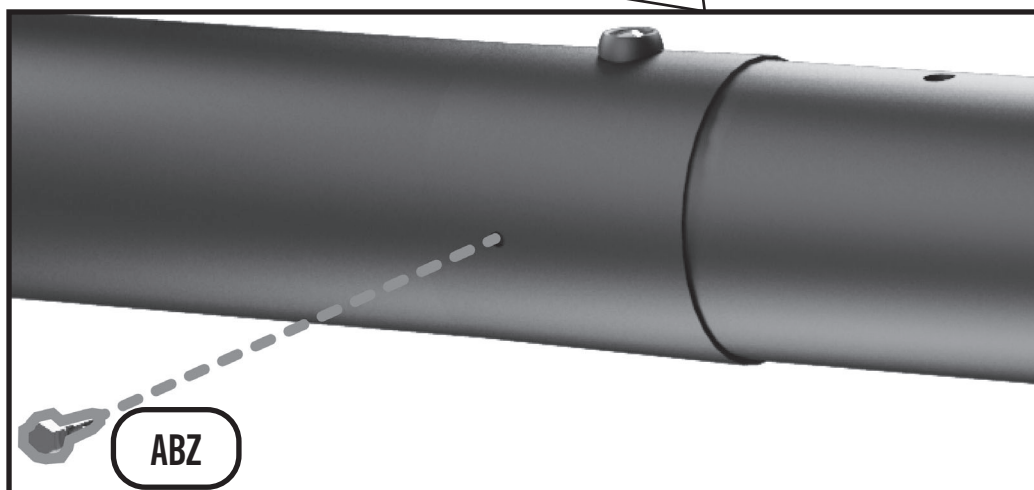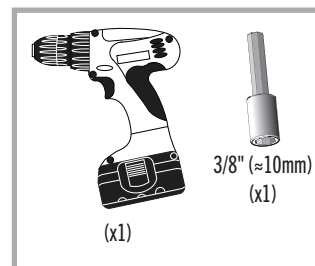



POLE-TO-BASE ASSEMBLY

92103



ABL (x4)

 
 


2.1

- Insert the long axle (AJC) through the spacers (ABL), wheels (AMU) and bottom pole as shown.





- The pole bracket should be on top.

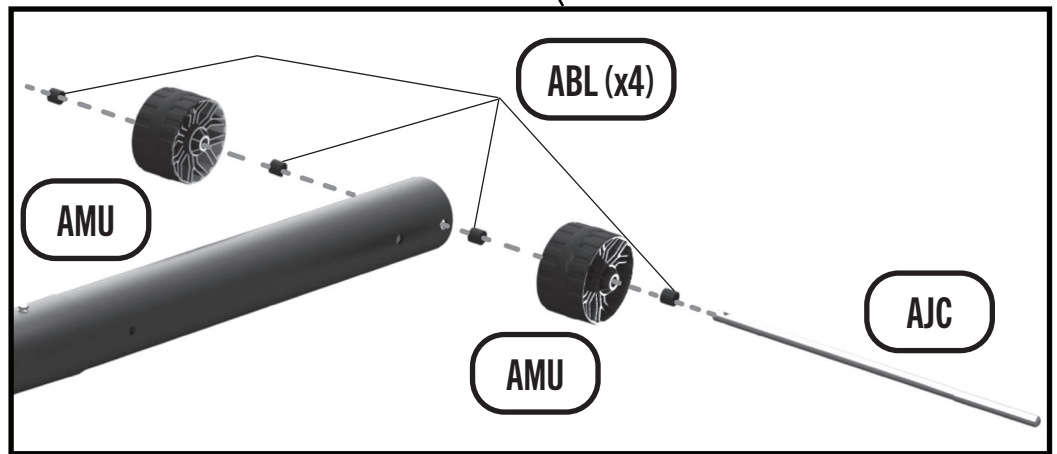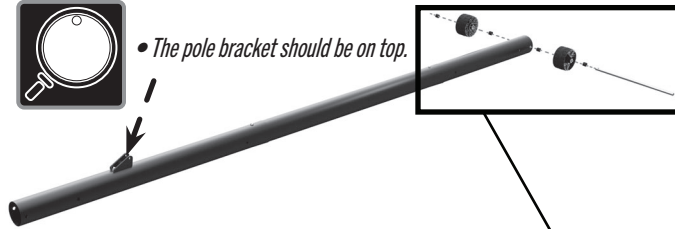


2.2

  - The pole bracket should be on top.

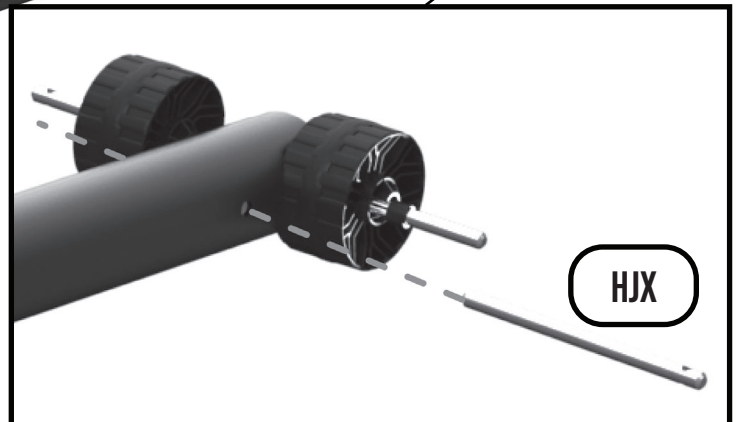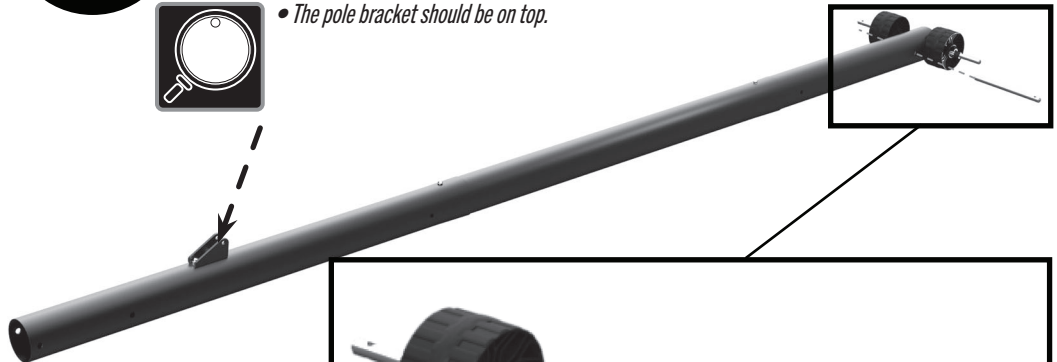


2.3

 - Lightly step on the **base (AJM)** to set the long axle in the grooves running along the bottom.

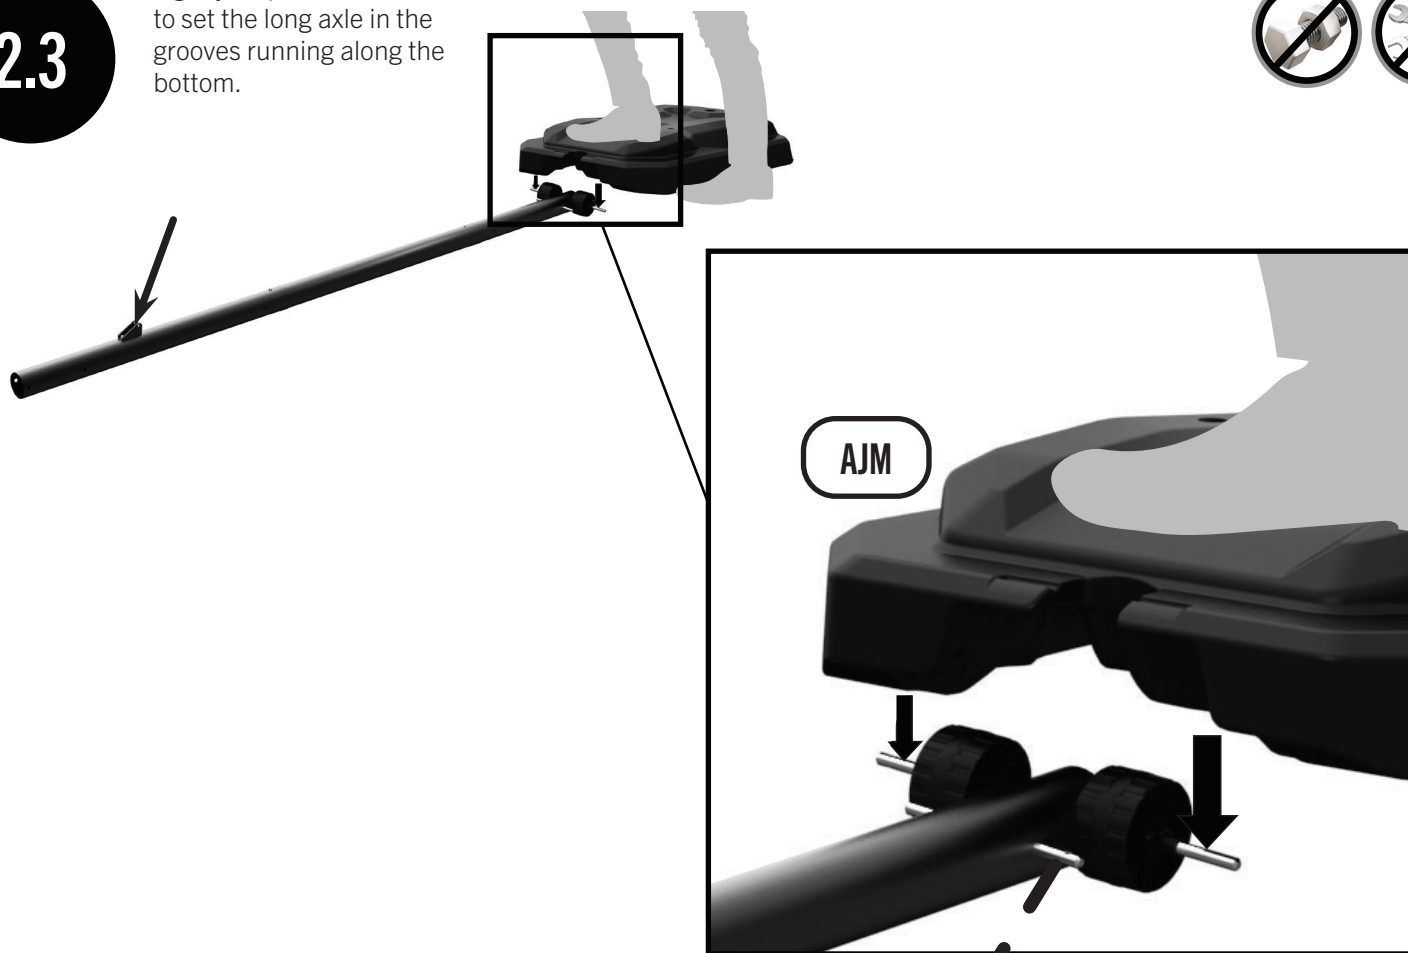

2.4

 - Rotate the pole upward until the short axle rolls over the lip of the base.

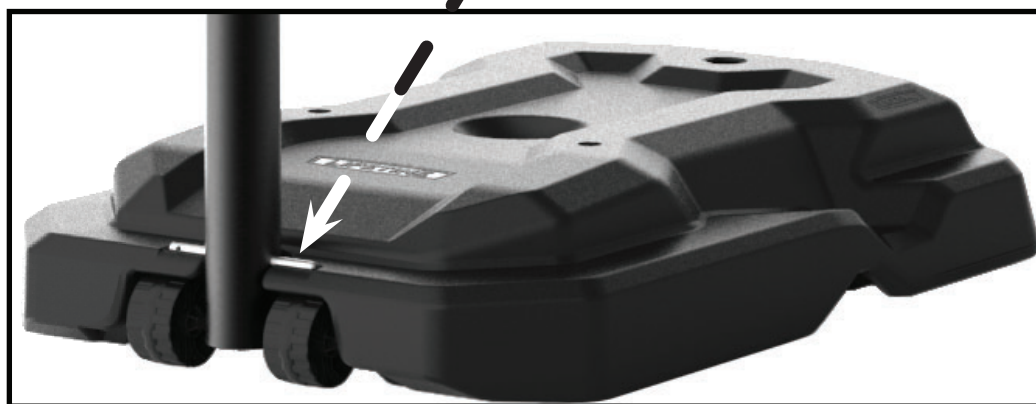





92103

AAE (x2)

 AAO (x2)



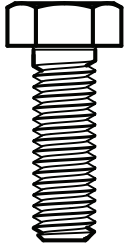


ABD (x4)

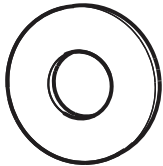 

2.5

   
- The nut (AAO) is a Nylock nut. A wrench is needed but only **lightly tighten** the nuts (AAO) for now. Repeat for the second pole brace on the other side.

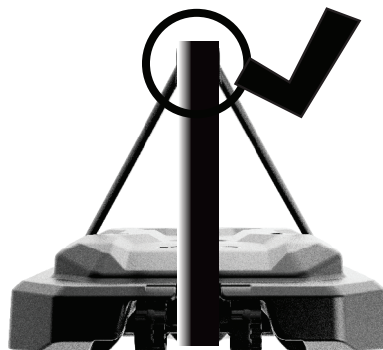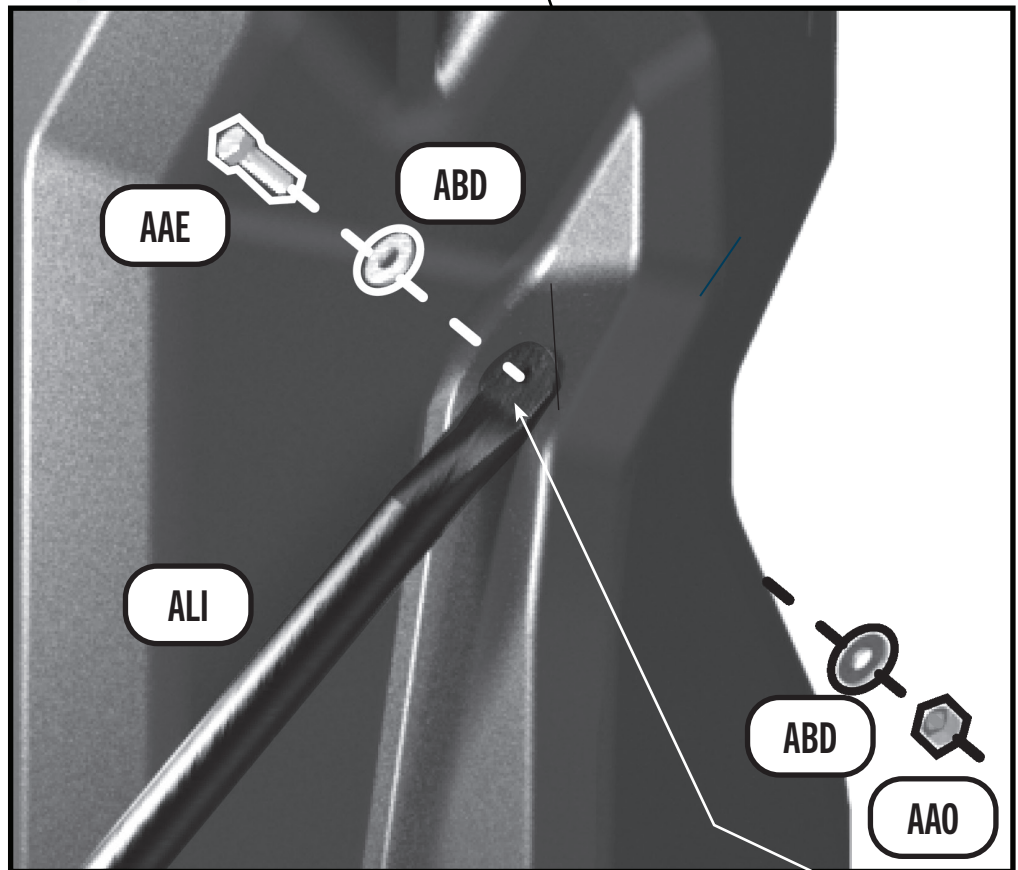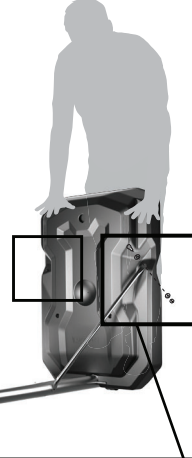

ALI (x1)



 DRZ (x1) BTS (x1)



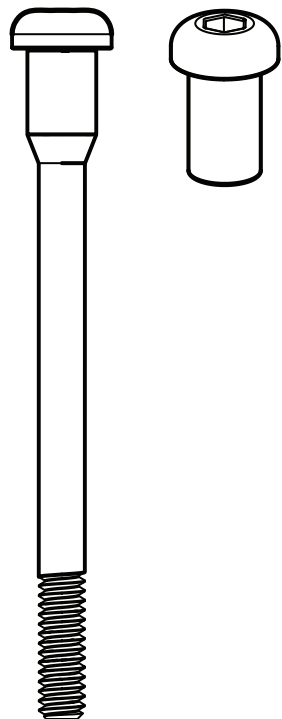


2.6

BTS



   DRZ

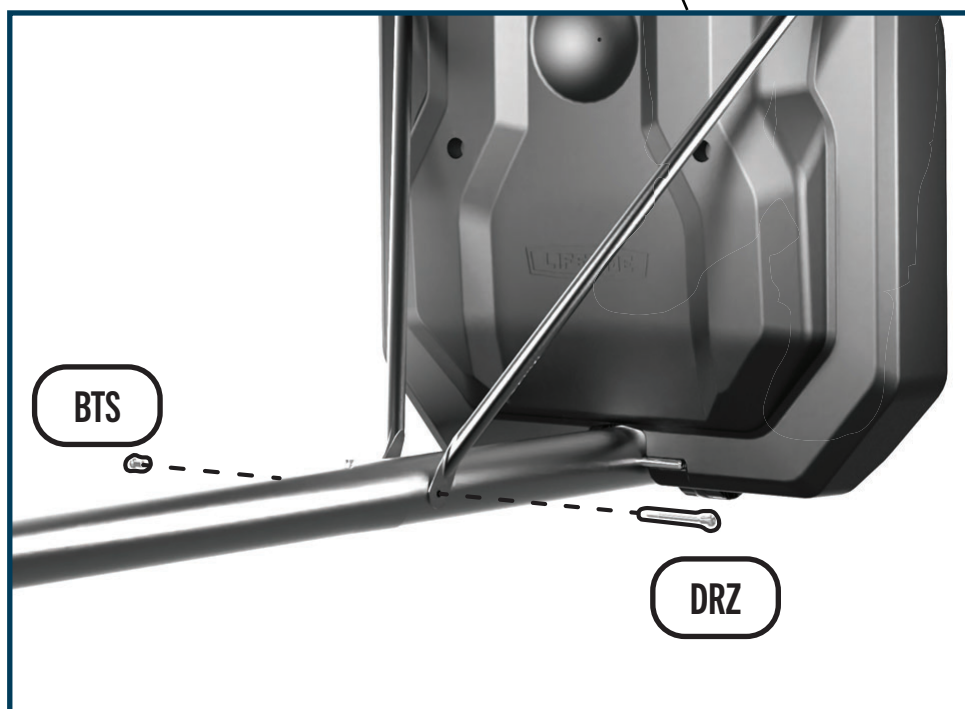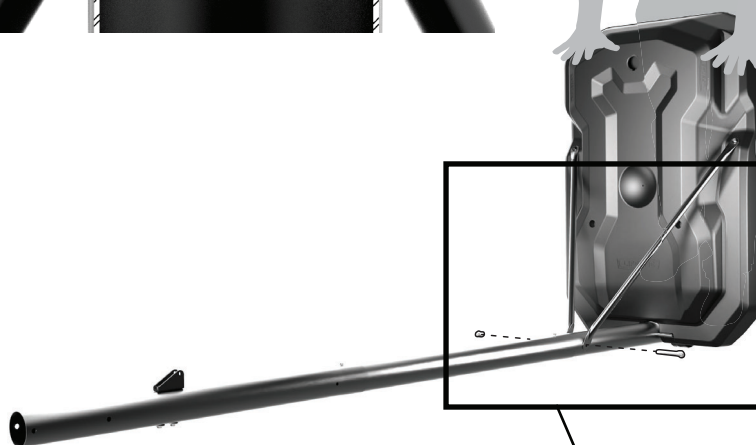
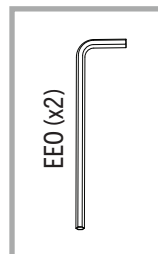


2.7

- Tighten the hardware from step 2.5.



  1/2" (≈13mm) (x2)

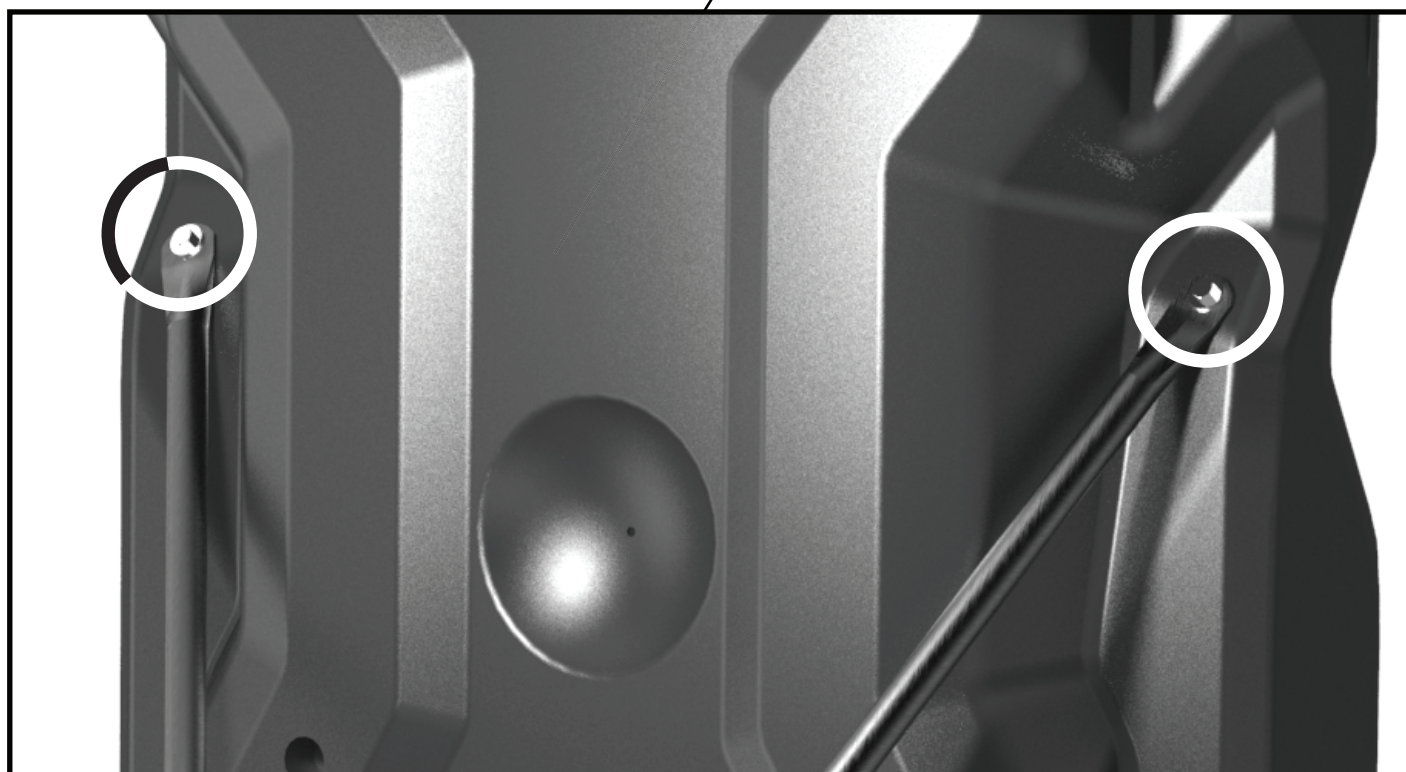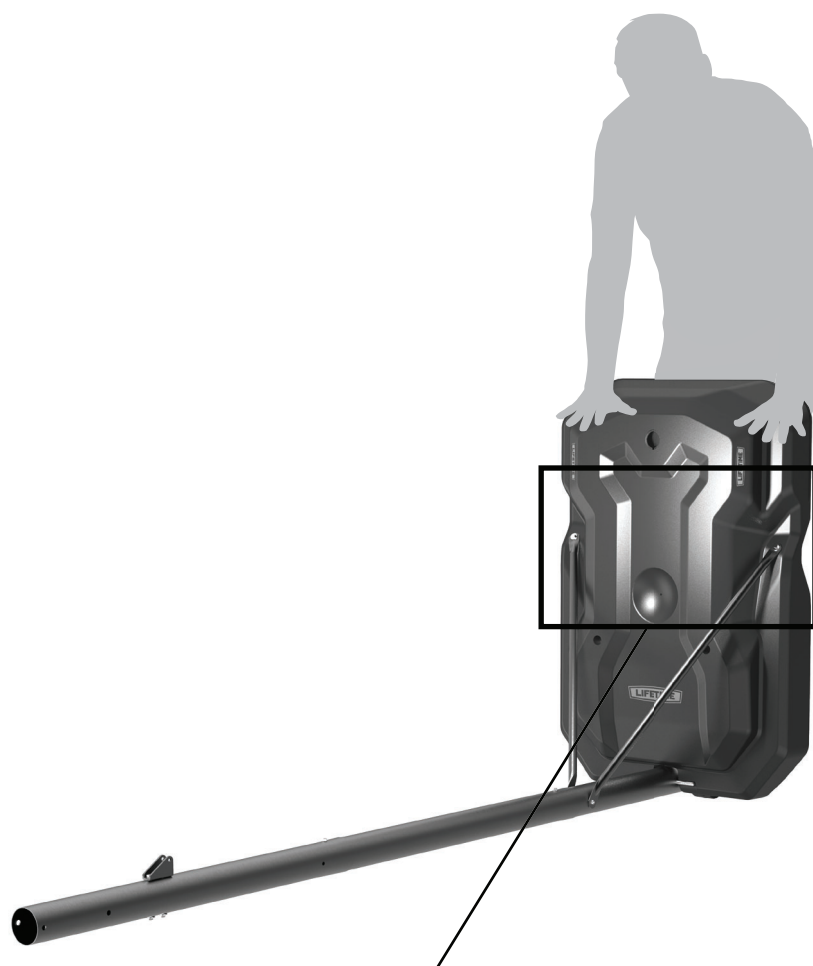




RIM-TO-BACKBOARD ASSEMBLY


92103



 
AAM (x2) ABD (x2)

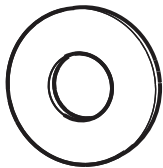

AAJ (x2)


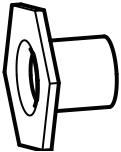 


ABF (x2)




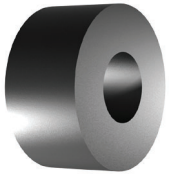 


3.1

  - Insert a bolt (AAM) through a washer (ABD) and a rubber spacer (ABF). Repeat.

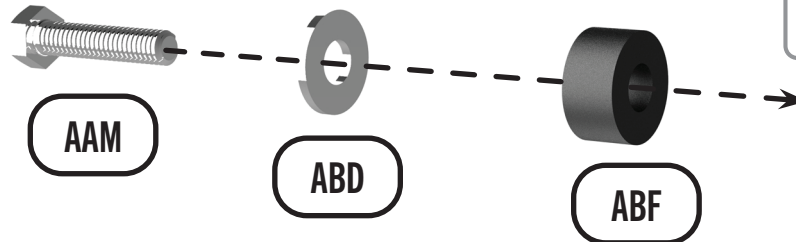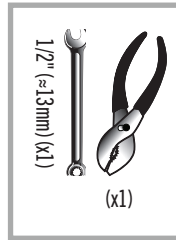

    - Insert the bolts through the elongated holes in the rim. Spread the bolts as faraway from each other as possible before tightening. **Important:** See images and text below.

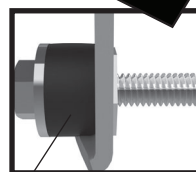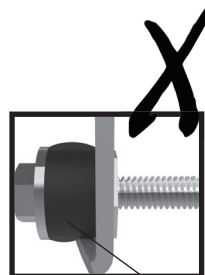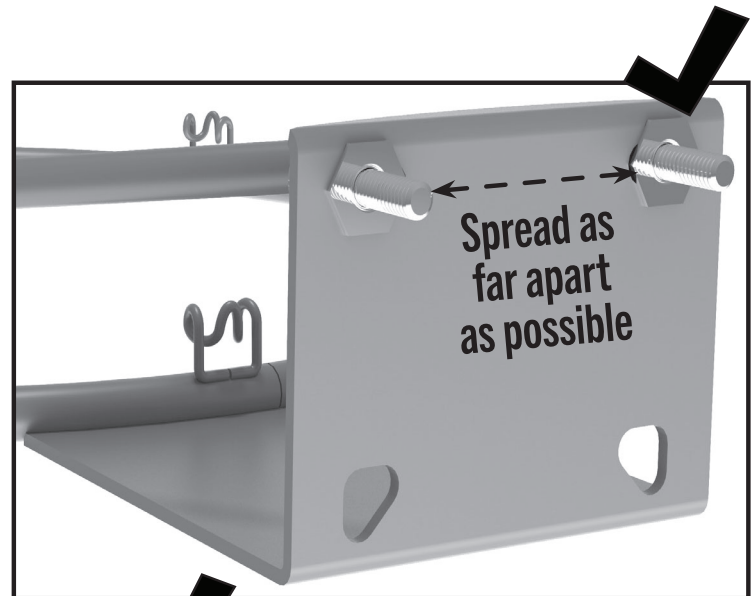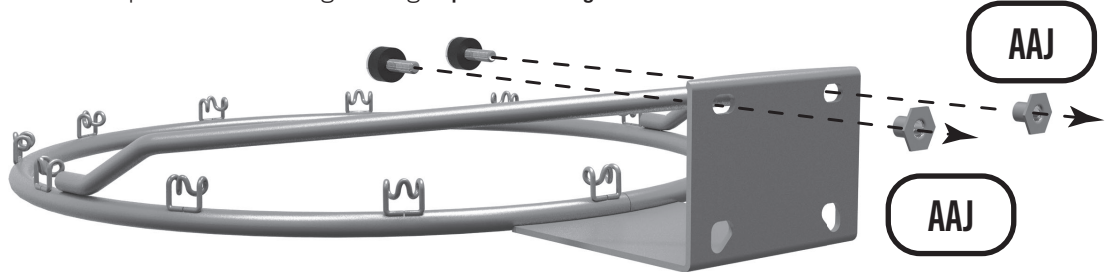

- **IMPORTANT:** This hardware should be tightened just so the black, rubber spacer begins to bulge.



 
 
ABK (x2)



92103

3.2


- Tighten securely until the rim doesn't wobble. If you have one, use a socket wrench with an open-face wrench.

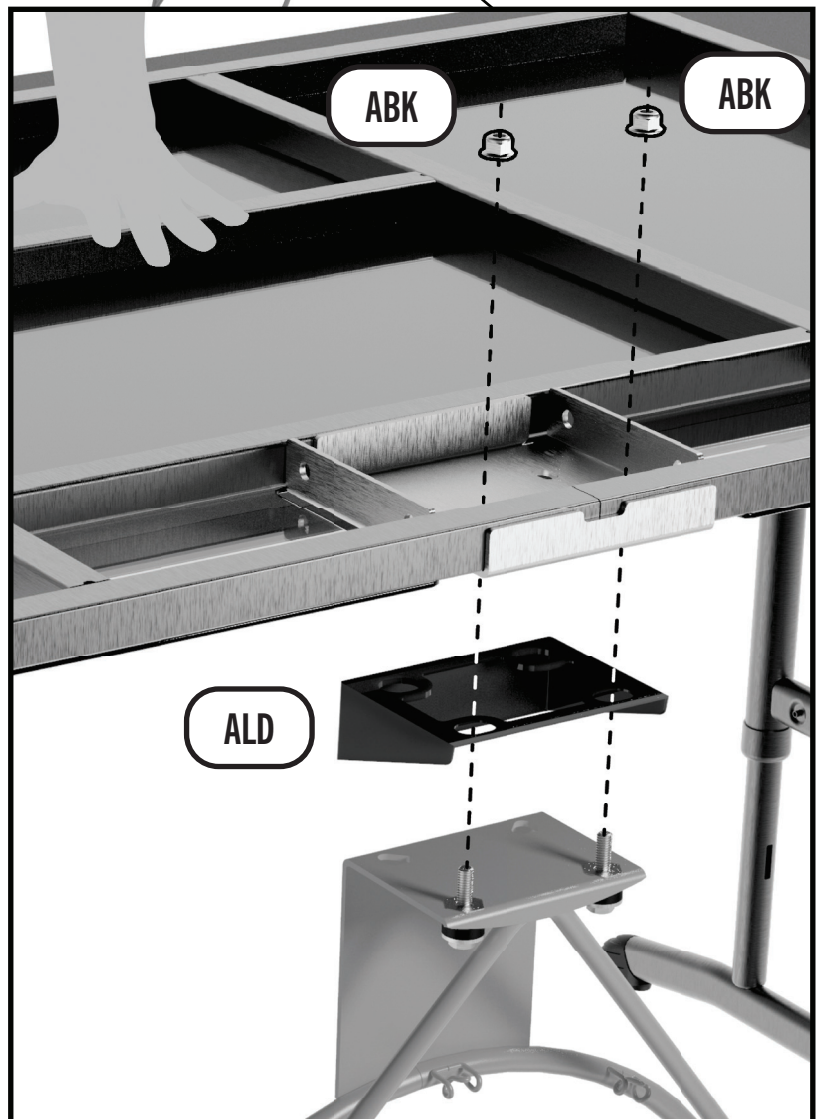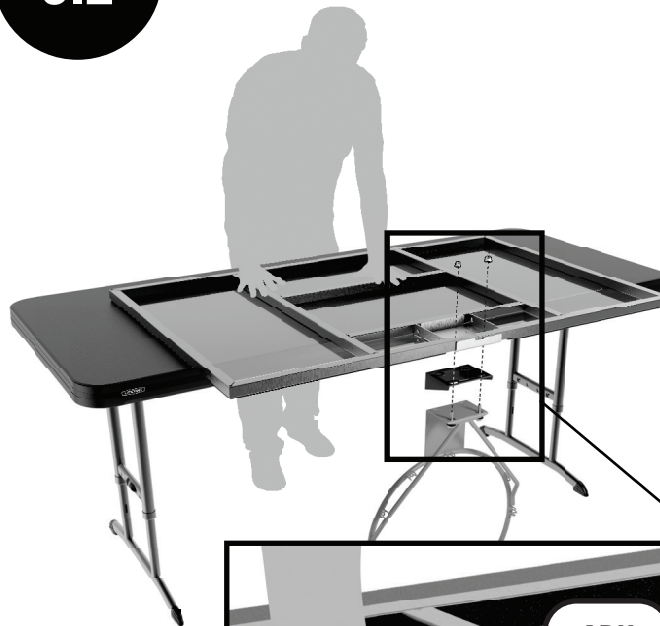




92103

 APZ (x1)*



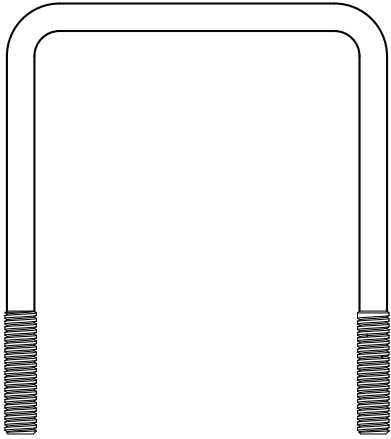


AAV (x2)

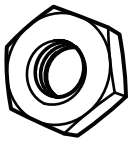 

3.3

   
- Thread nuts (AAV) up the U-bolt (APZ) as far as they will go.

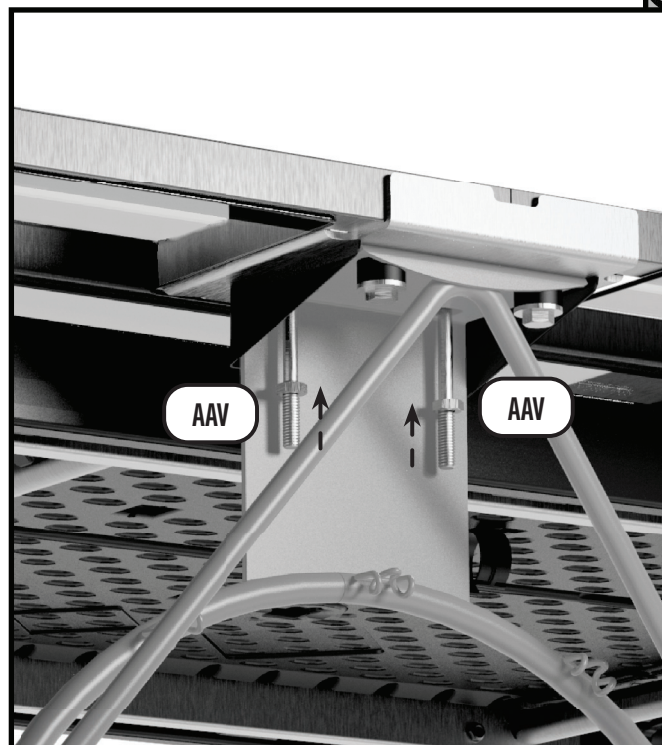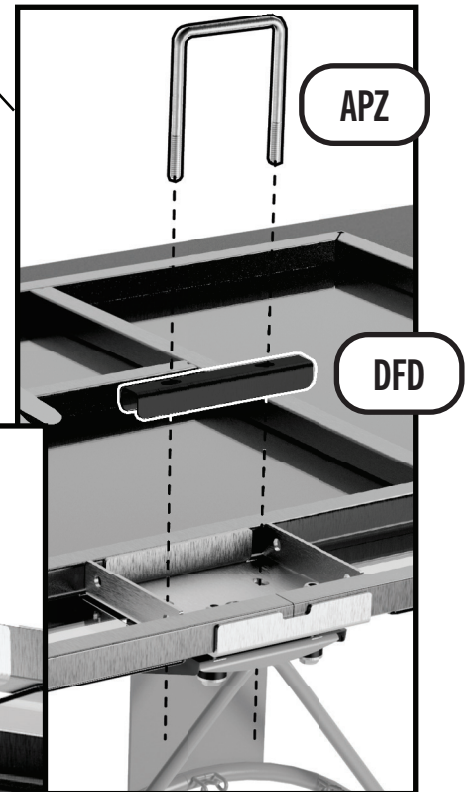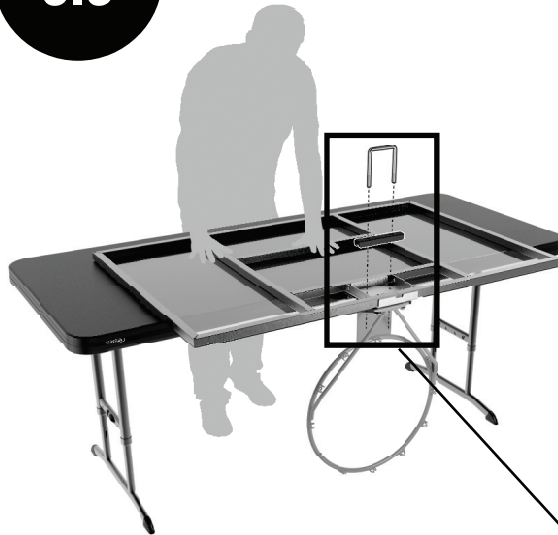



92103

 
ABK (x2) AJW (x2)*

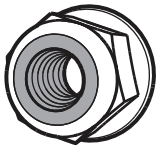




AOW (x1)*



 3.4

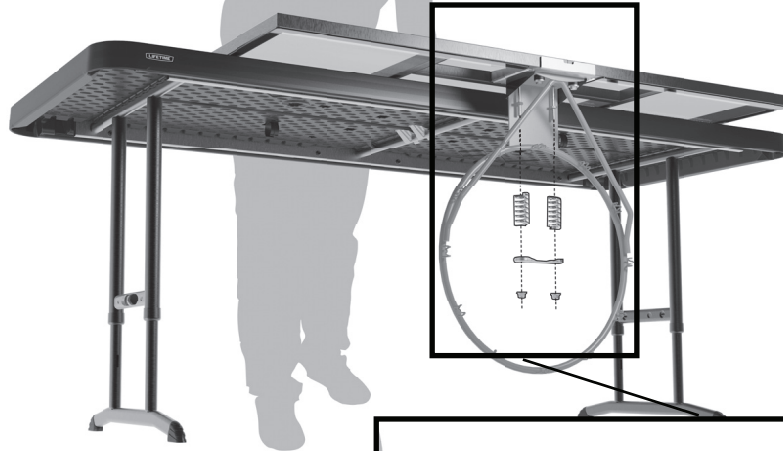


   - **DO NOT COMPLETELY TIGHTEN THE NUTS (ABK) IN THIS STEP!**
Only tighten the nuts until the rim does not wobble. These will be adjusted later, if necessary.

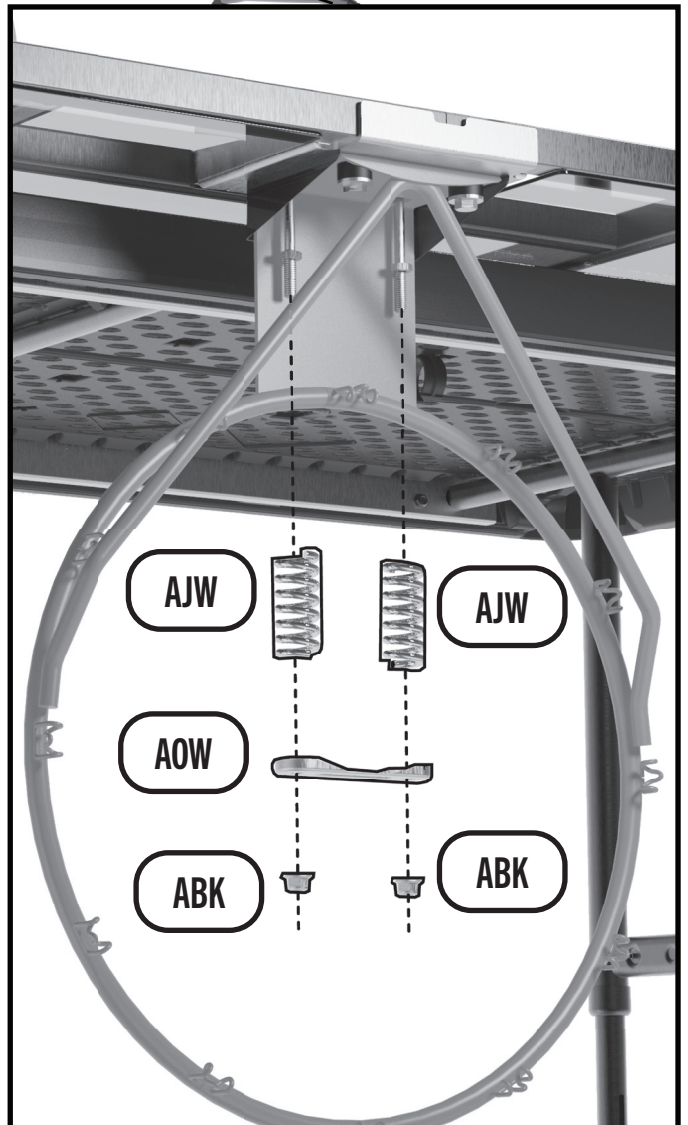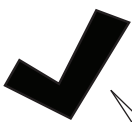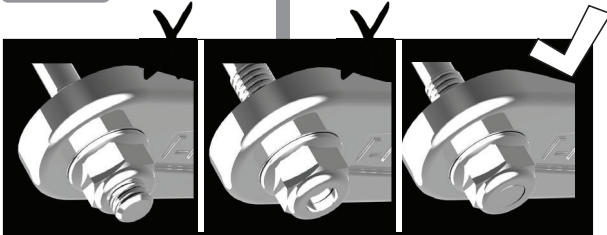



DFE (x4)

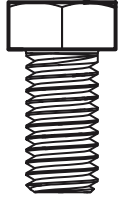 

AAA (x4)

 


92103



3.5



- Please leave the protective plastic film on the backboard until instructed to remove it.



9/16" (±13mm) (x2)

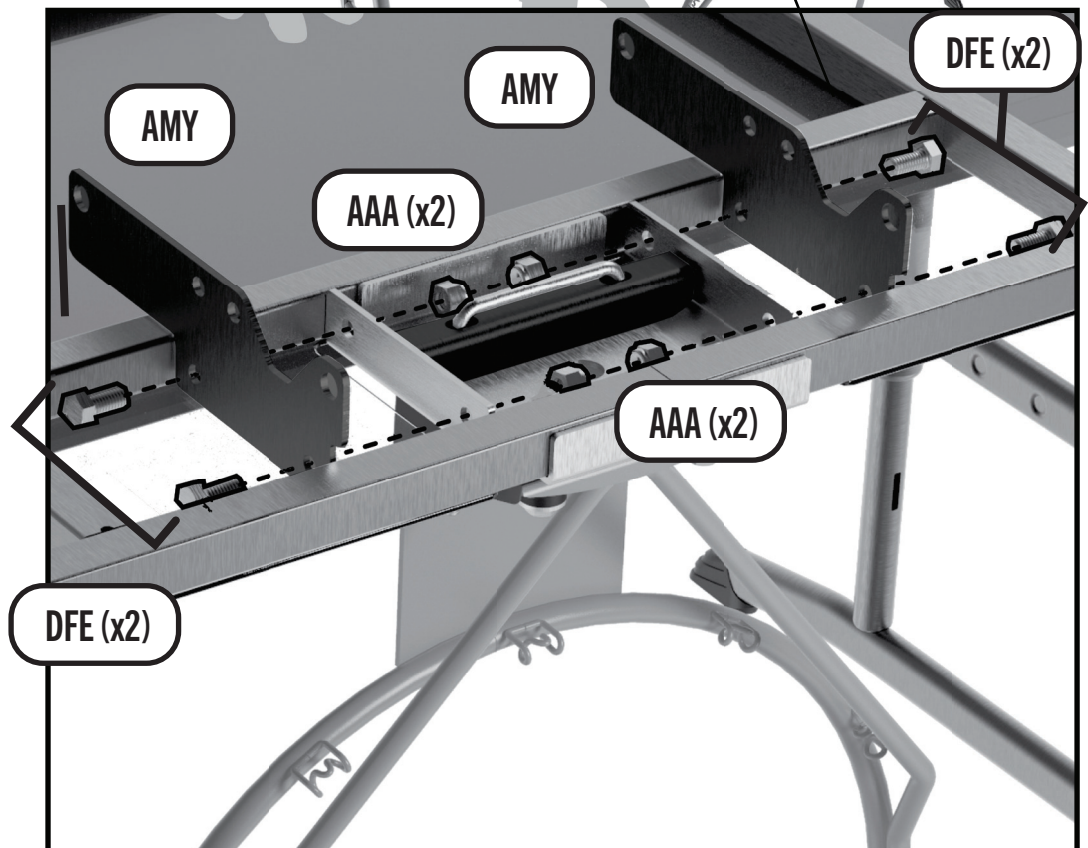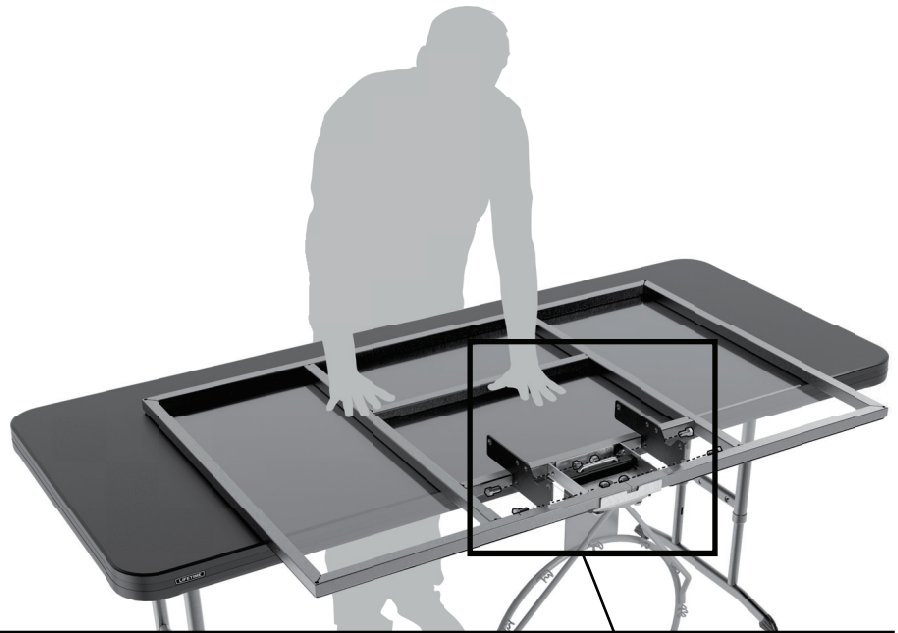  




POLE-TO-BACKBOARD ASSEMBLY


92103



 GBU (x1)





7-5/8" (≈19cm)

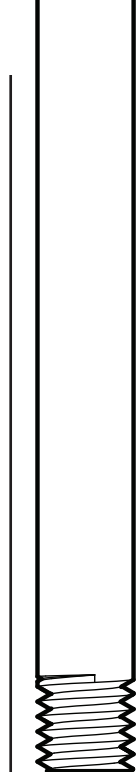 

4.1



  - Turn bolt to remove excess powder coating from the four holes indicated.
DO NOT use a mallet or hammer to force the bolt through the hole.

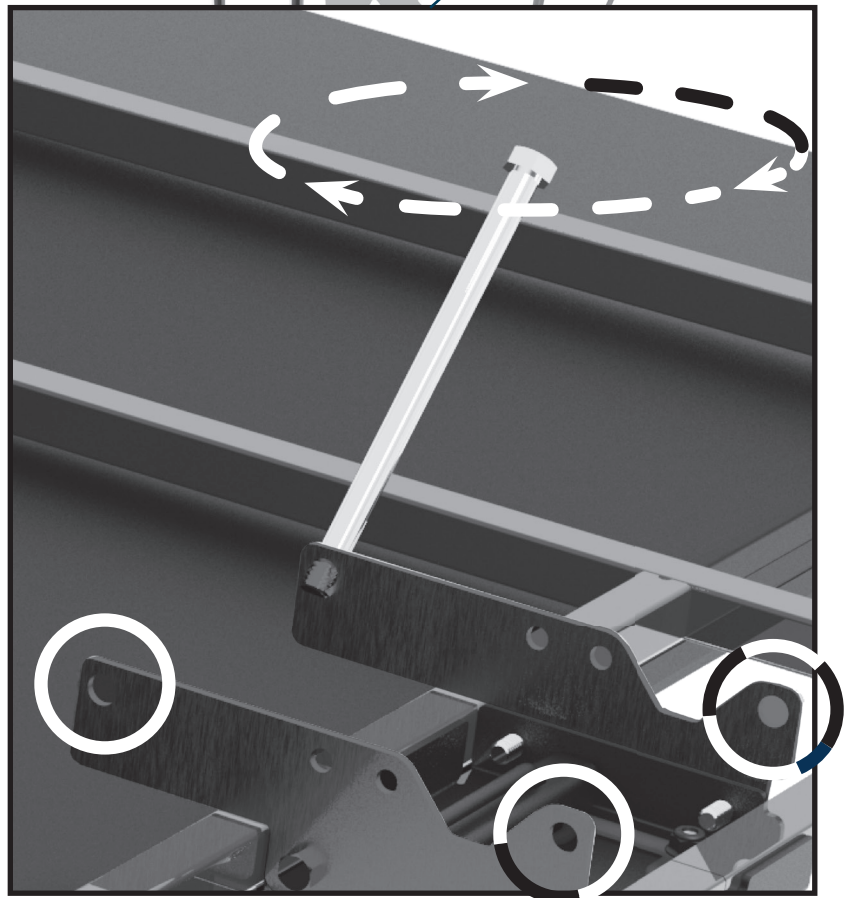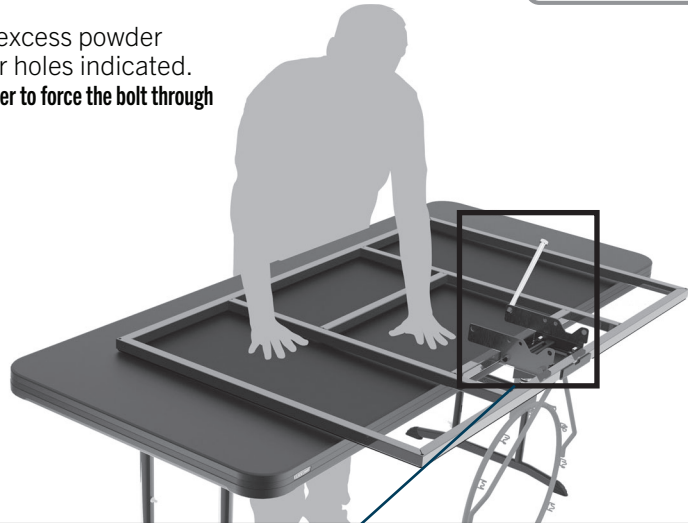



92103

GBU (x1)

 
HMP (x1)

4.2


- Use the two short extension arms (AKC). The nut (AAX) should be flush with the end of the bolt (GBU).







3/4" (≈19mm) (x2)

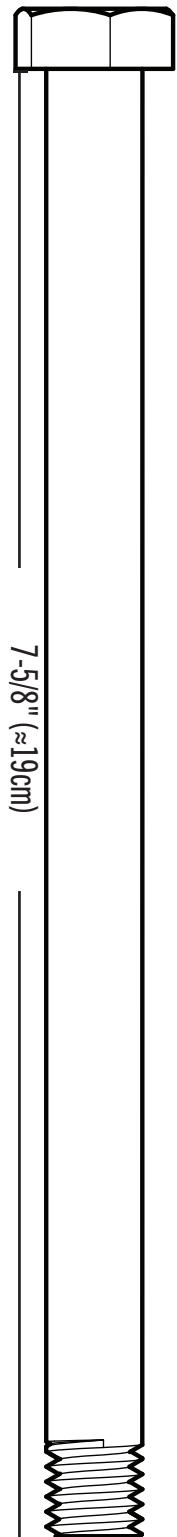

AAX (x1)

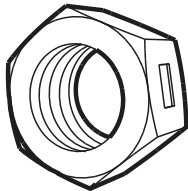 

ABN (x2)

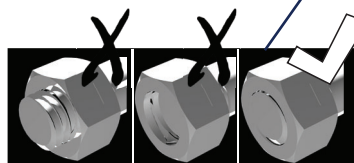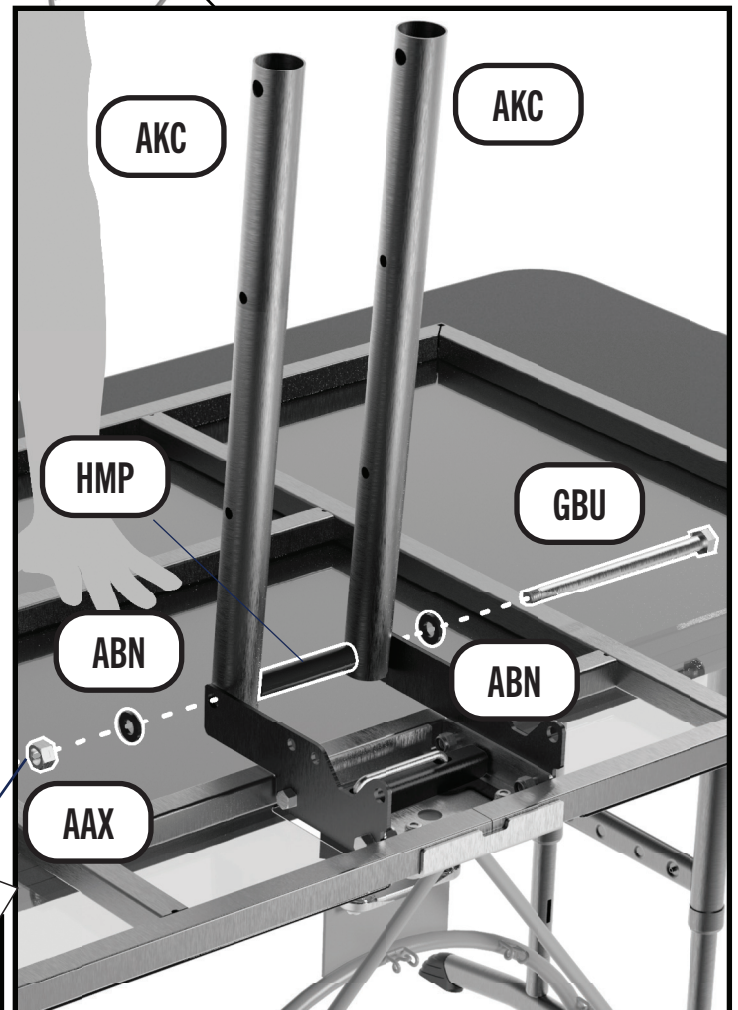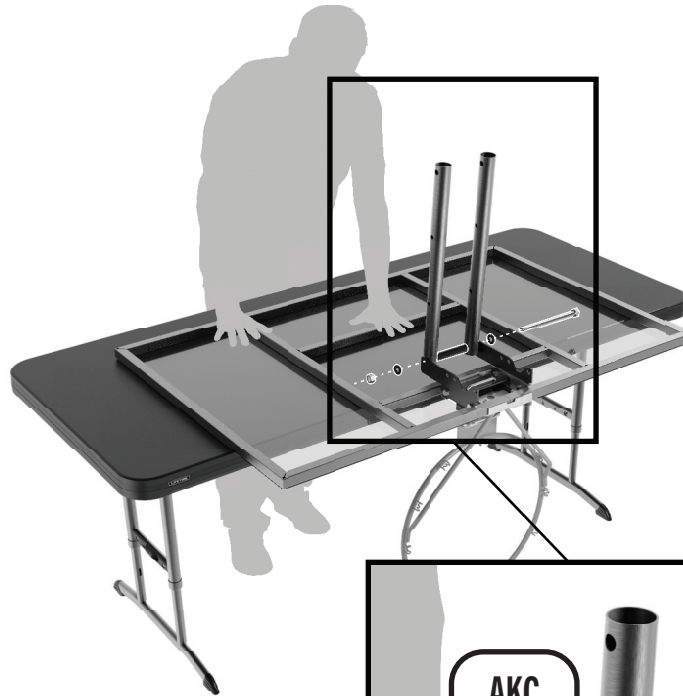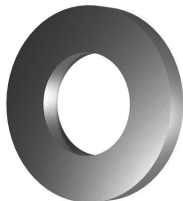    





92103

GBU (x1)

 HMP (x1)

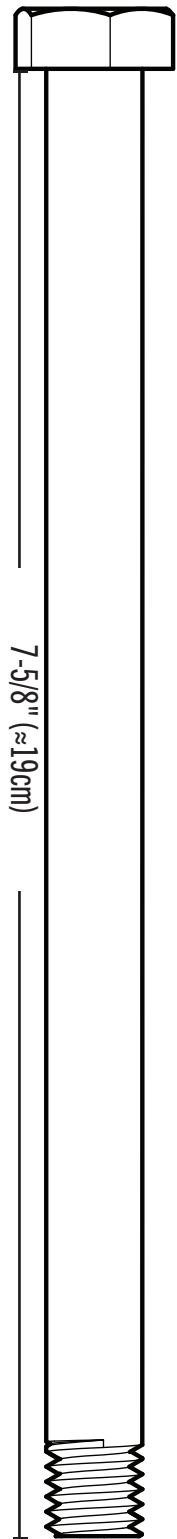

AAX (x1)



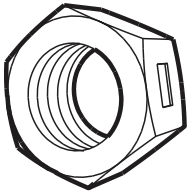 


ABN (x2)



4.3

   - For the two **long extension arms (AKB)**, the single hole at the end of the arm connects to the backboard.

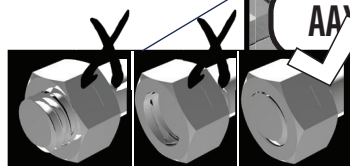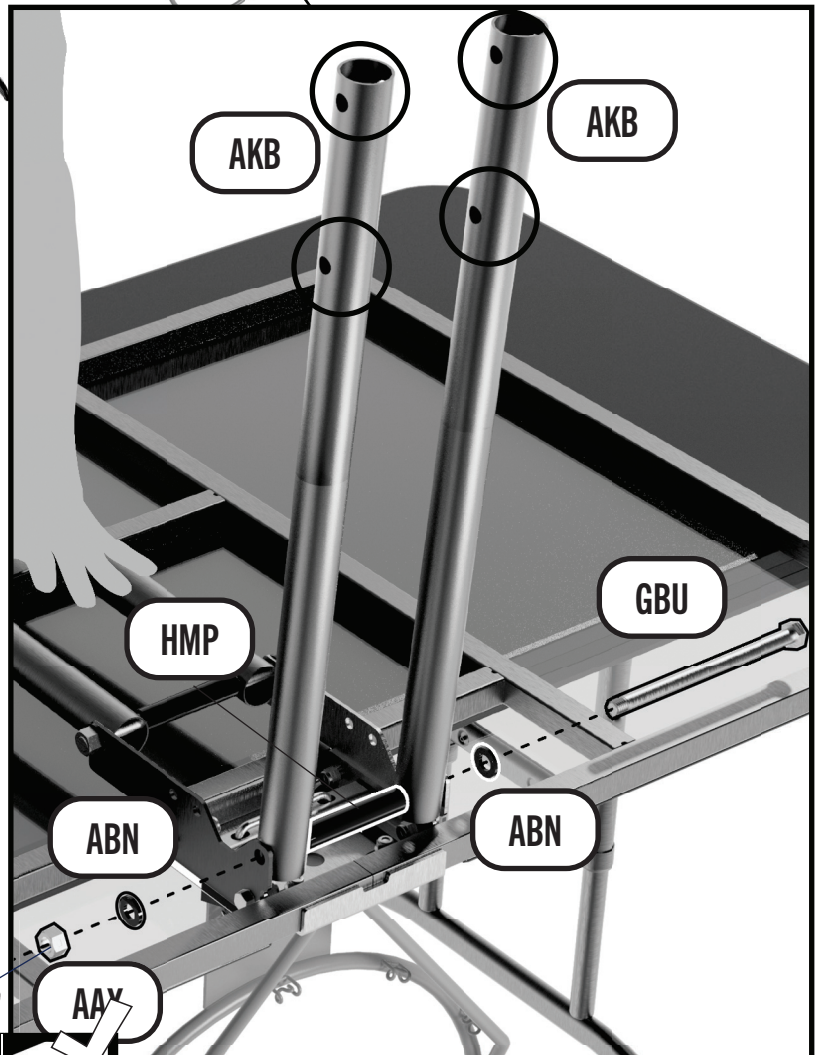
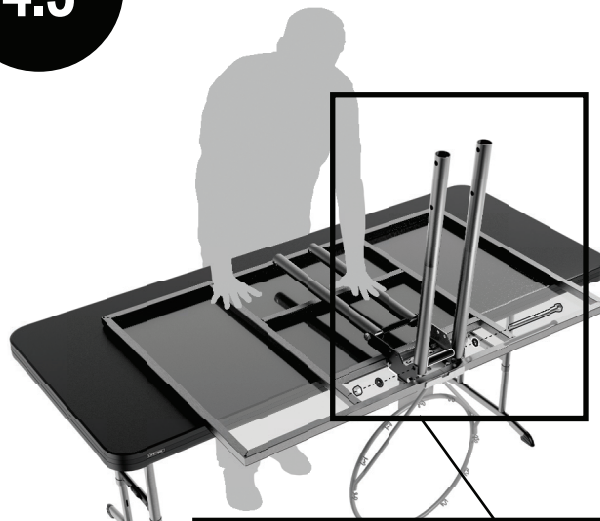




92103

AAD (x1)

  AAX (x1)

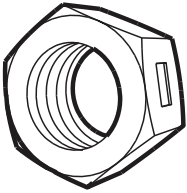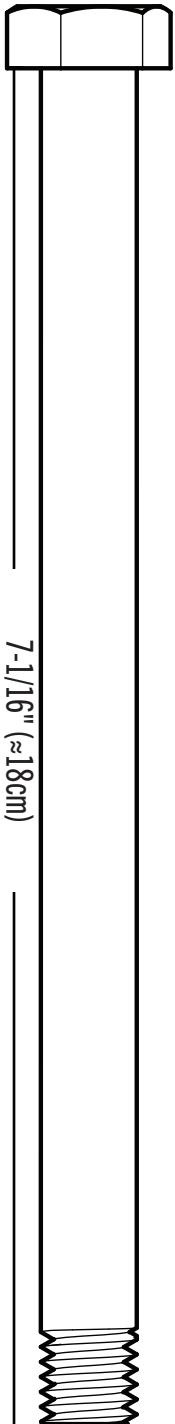

ABN (x2)

 
 
 


4.4

- Insert the **washers (ABN)** between the long extension arms and the pole.



3/4" (≈19mm) (x2)

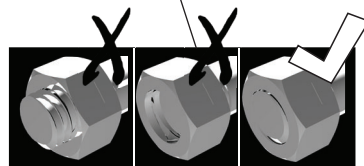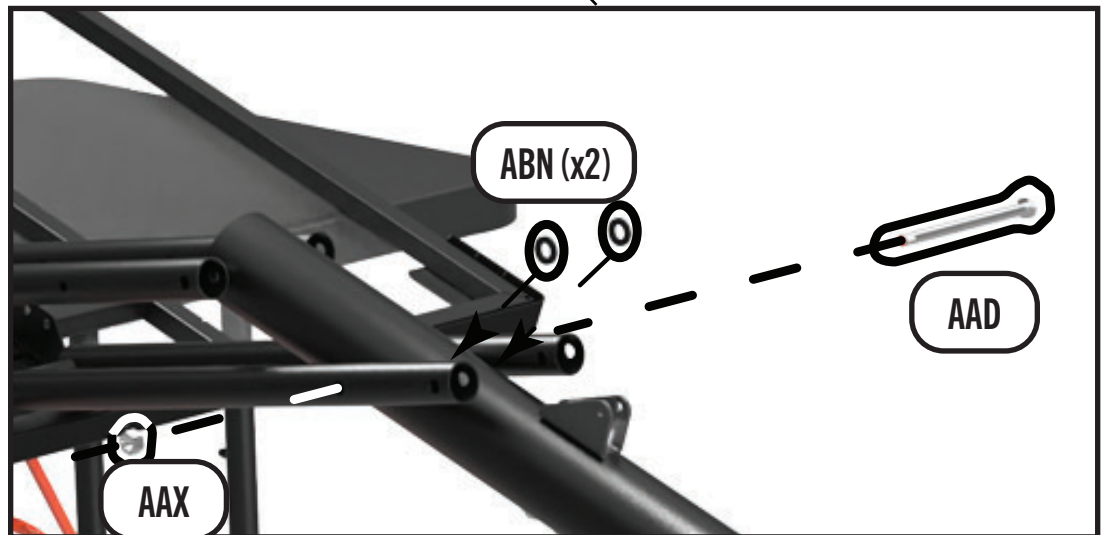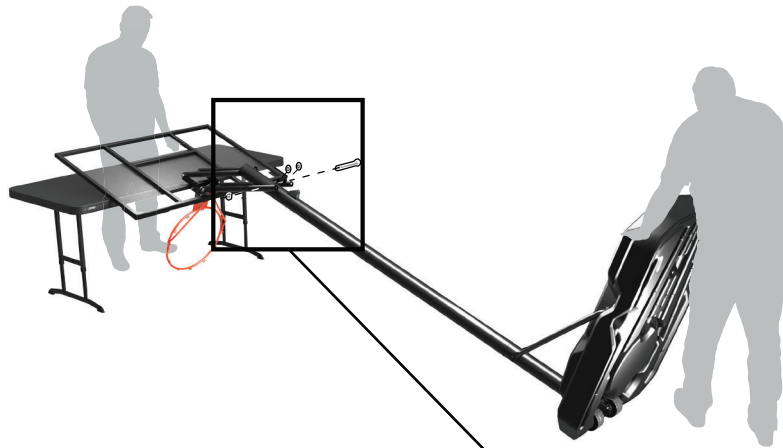





92103

AAD (x1)

 AAX (x1)

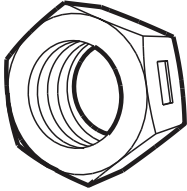

ABN (x2)



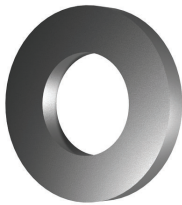 


4.5

- Insert the **washers (ABN)** between the short extension arms and the pole.



   3/4" (≈19mm) (x2)

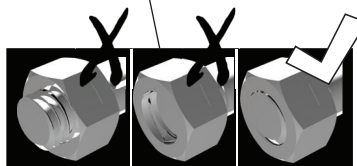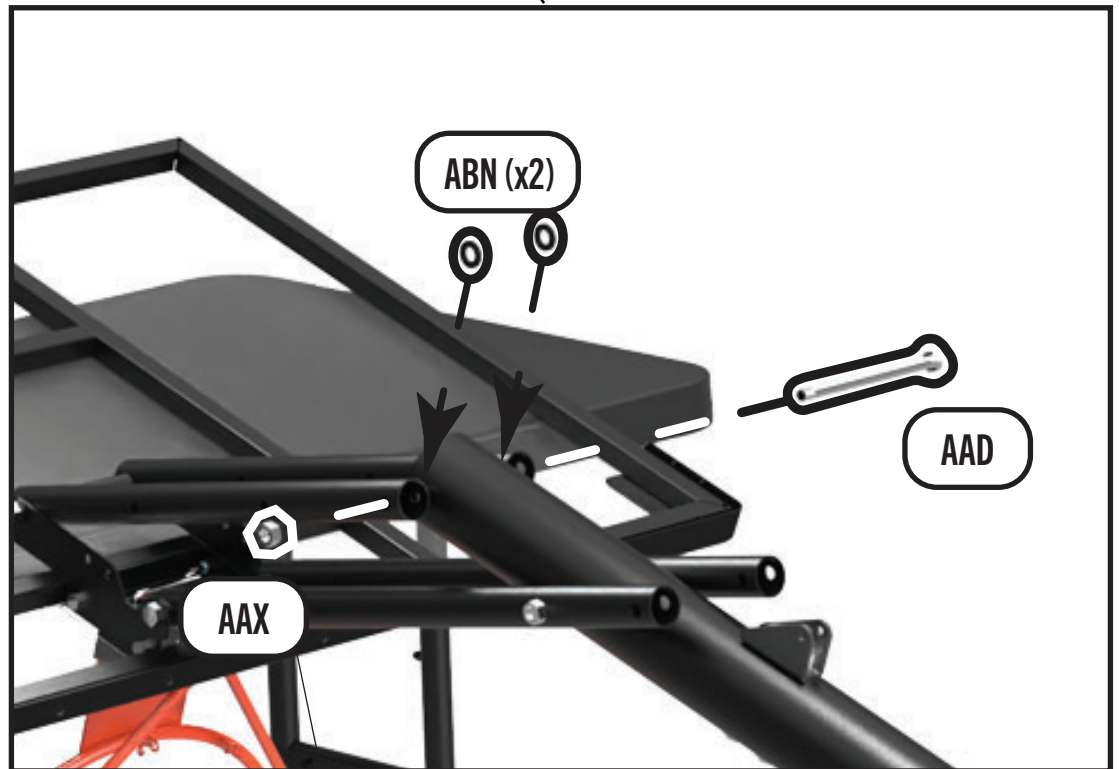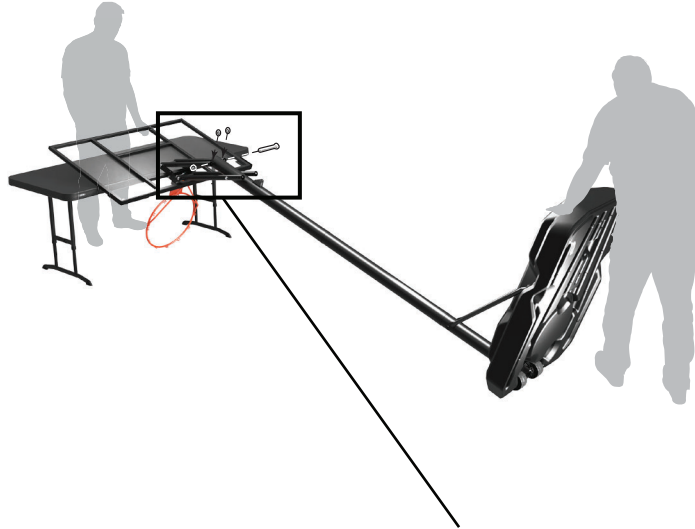




HANDLE ASSEMBLY

92103



 BSF (x1) BSG (x1)



AAO (x1)



(Not used)

5.1

- Slide the **gas spring cover (AKG)** over the **gas spring (AKF)**. Align the holes.



1

AKG



AKF



2

 
 
 
 


5.2

- Align the holes in the **gas spring cover** and **gas spring** with those in the **pole bracket (ALL)**. Secure with the hardware indicated. **Tighten the nut only until it's flush with the end of the bolt.**




1/2" (≈13mm) (x2)

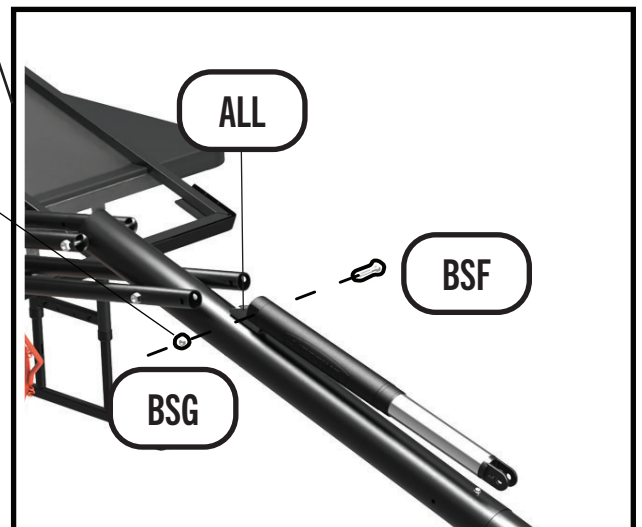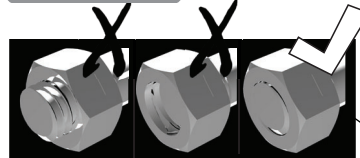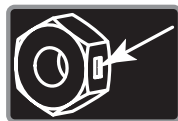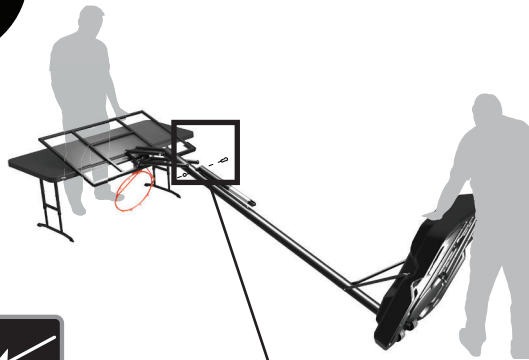



92103

 ABA (x2) ABB (x2)

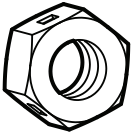

ABM (x2)



6-1/2" (≈17cm)

5.3

- Attach the **trigger (AKI)** to the **handle (AMN)**.



AKI

 
ABB

ABA



AMN

9/16" (≈14mm) (x2)

5.4

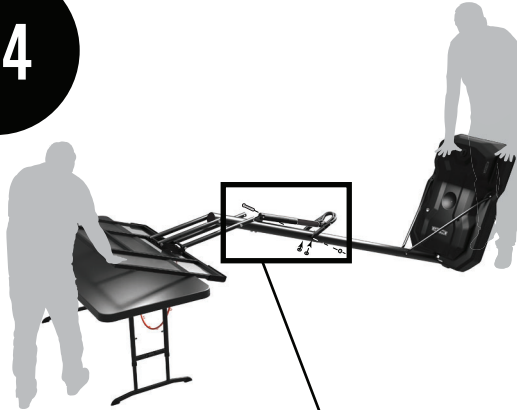

9/16" (≈14mm) (x2)

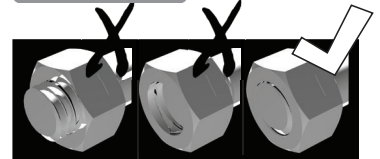  

ABA



- Tighten the centerlock nut (ABB) until it is flush with the end of the bolt.

ABM

ABM

ABB



 
AQE (x1)



92103


5.5

- Insert the **pin (AQE)** through the elongated holes at the end of the gas spring.

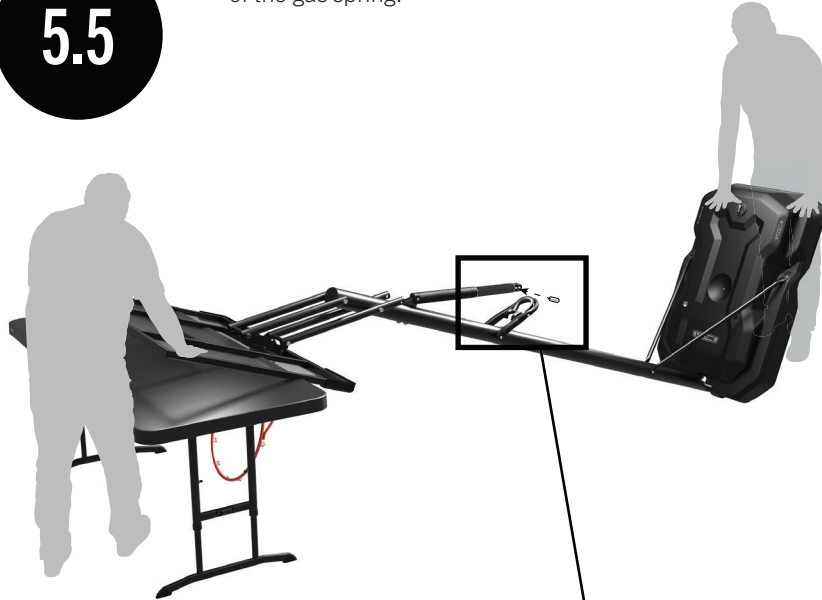


5.6

 - Rotate the handle upward and insert the pin into the notches in the trigger.

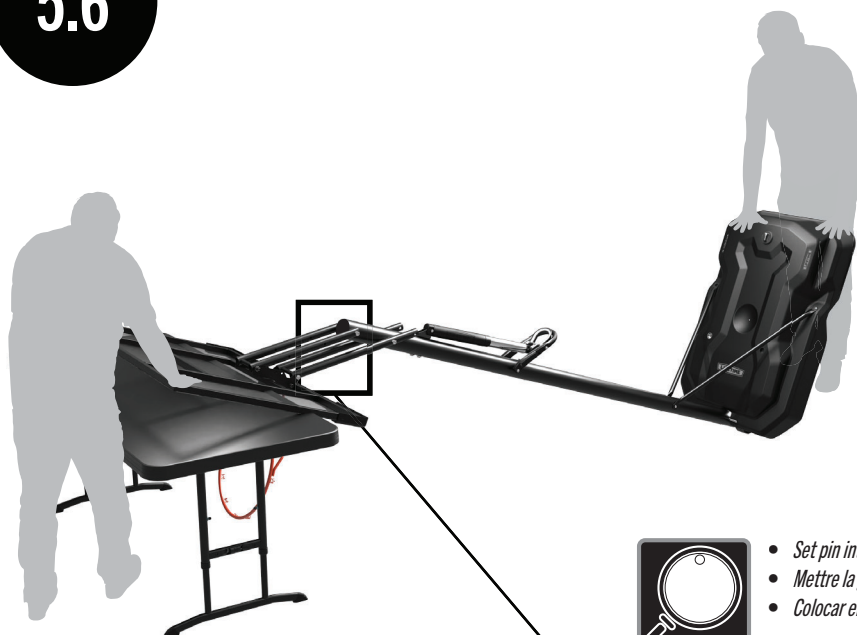


 
- Set pin into these recesses.
- Mettre la goupille dans ces enfoncements.
- Colocar el pasador en estos huecos.

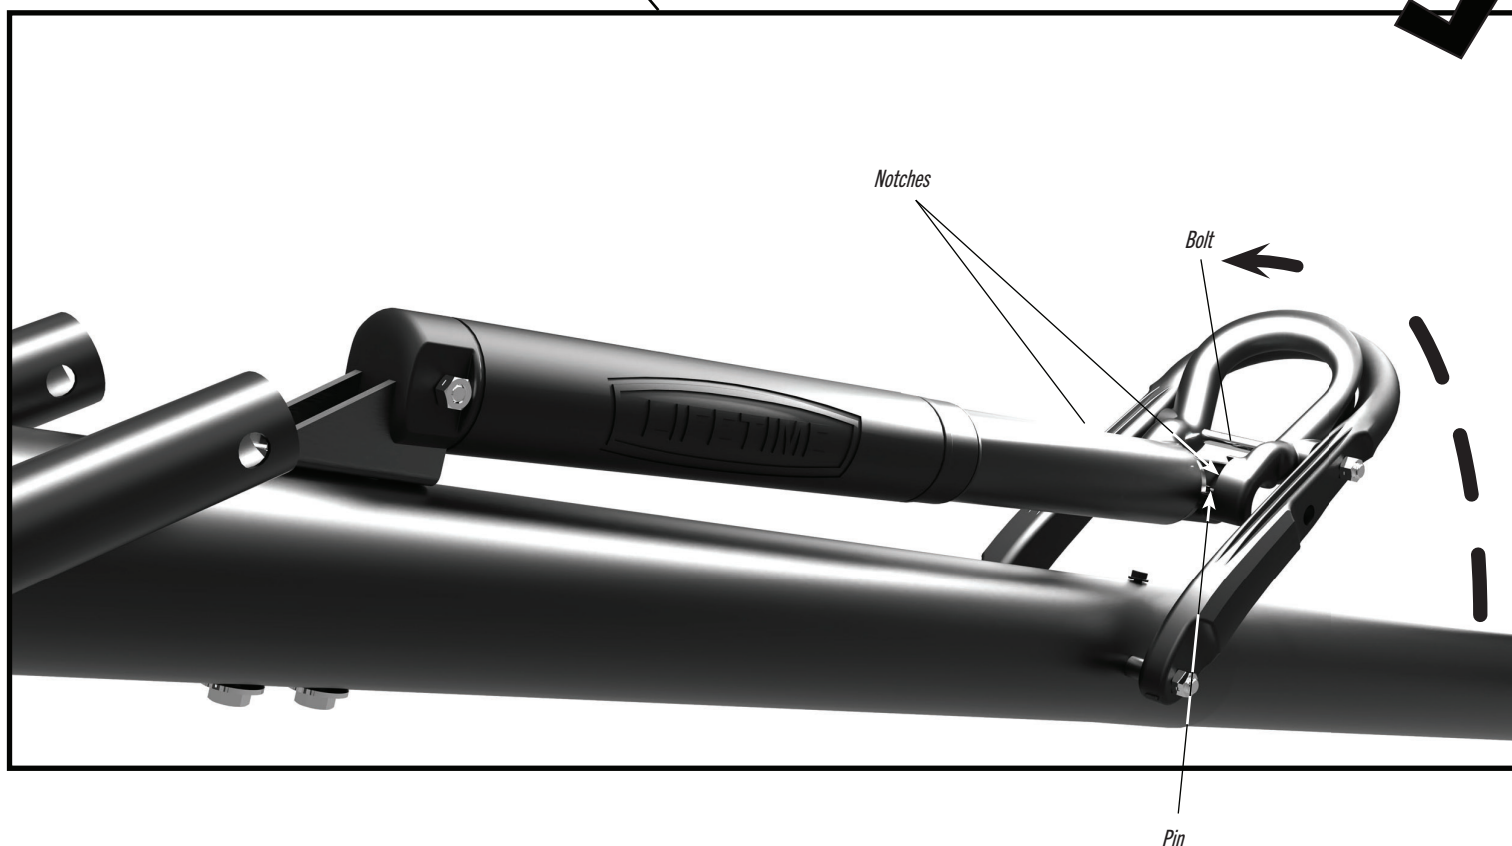




AAW (x1)

  AAX (x1)

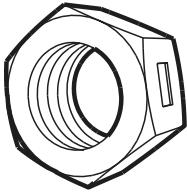


6-1/2" (≈17cm)

 
5.7

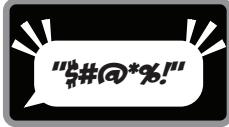

 - The lifter arms (ALS) go between the trigger and the handle. Insert the bolt (AAW) through the handle, both lifter arms (ALS) and the trigger.

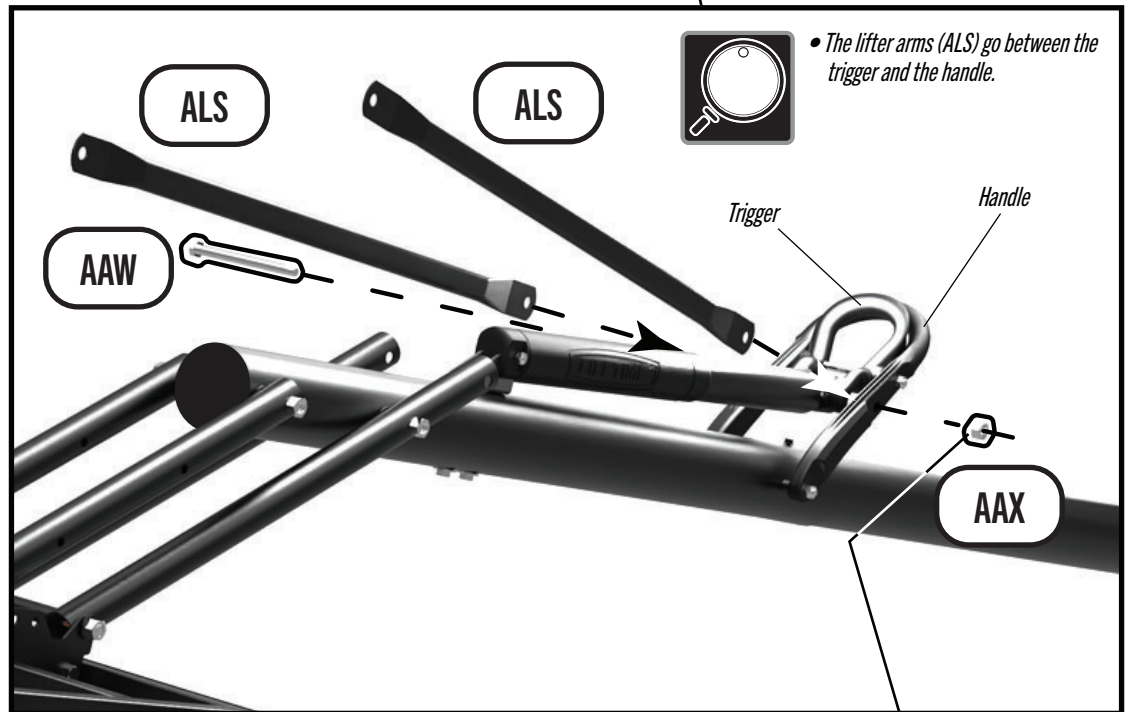

 
- The lifter arms (ALS) go between the trigger and the handle.

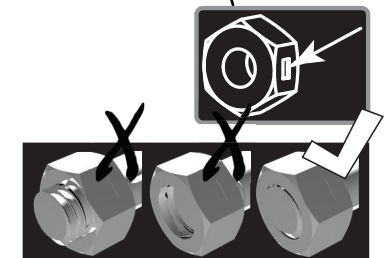



AAD (x1)

 AAX (x1)

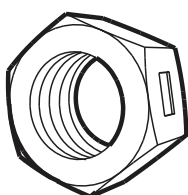

HNX (x1)

 
 
 


7-1/16" (≈18cm)

5.8





- You may need to move the pole forward or backward to help align the holes in the lifter arms with those at the end of the extension arms.

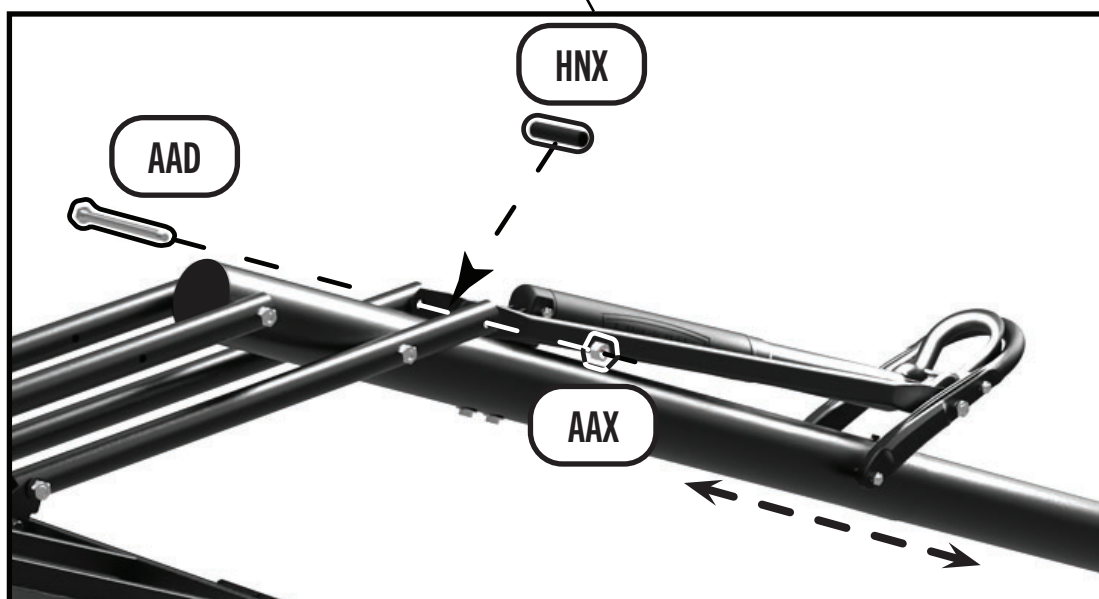
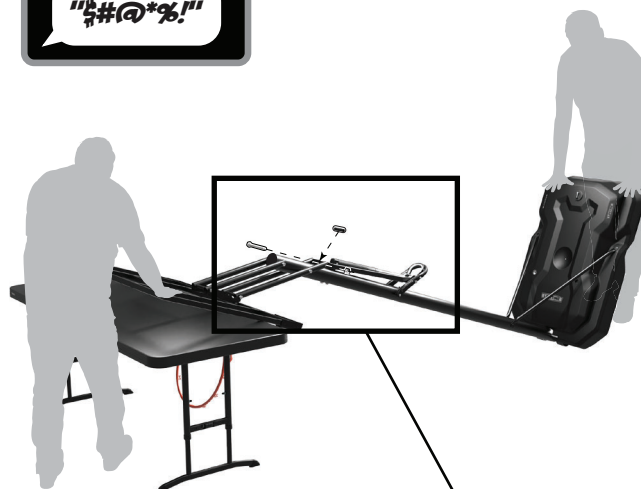


5.9

  - Apply grease (AKH) to the mating surfaces of the pin (AQE) and the gas spring (AKF).

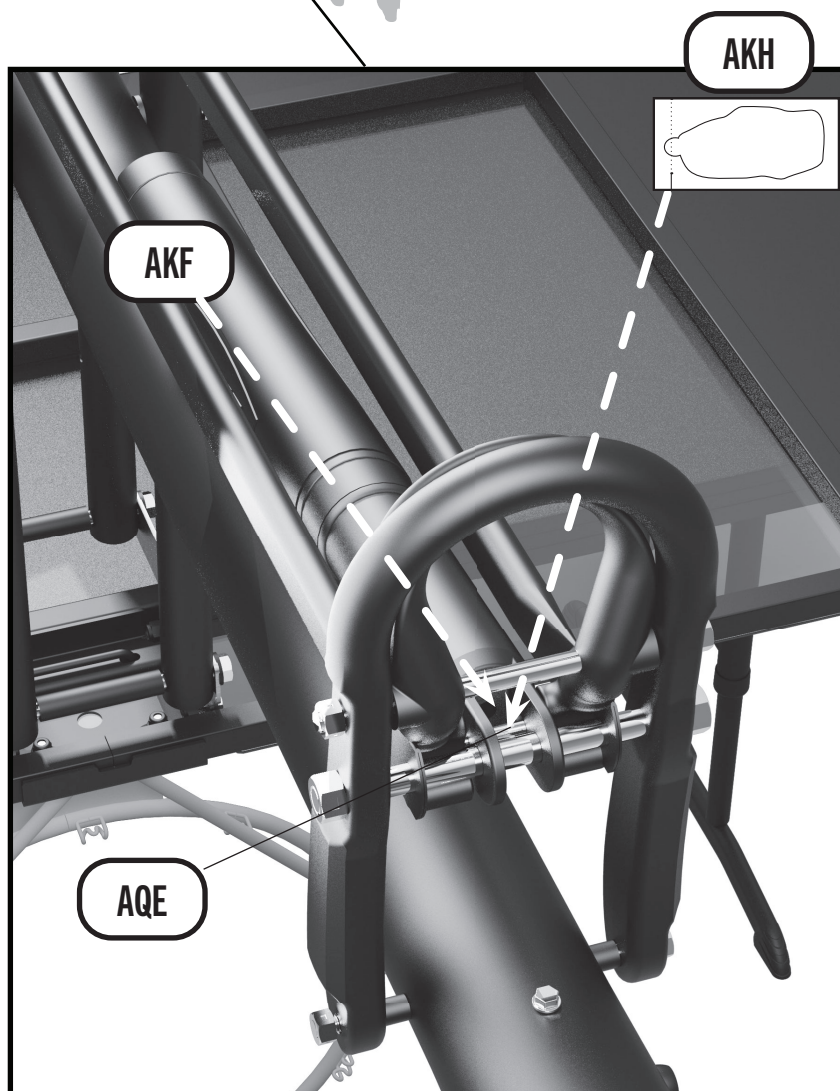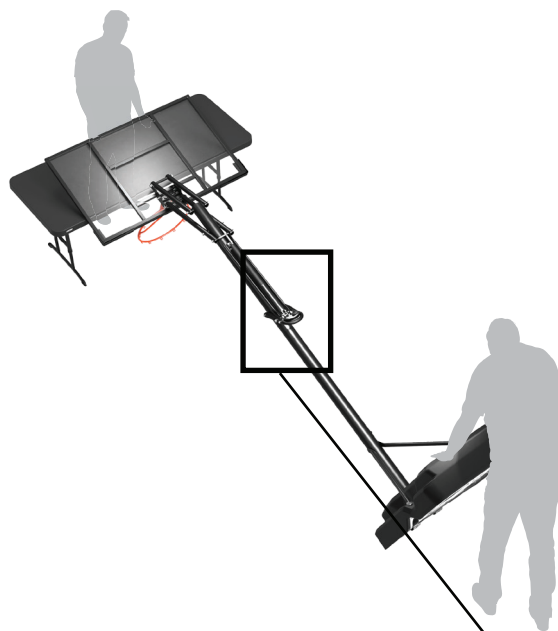

  6.1

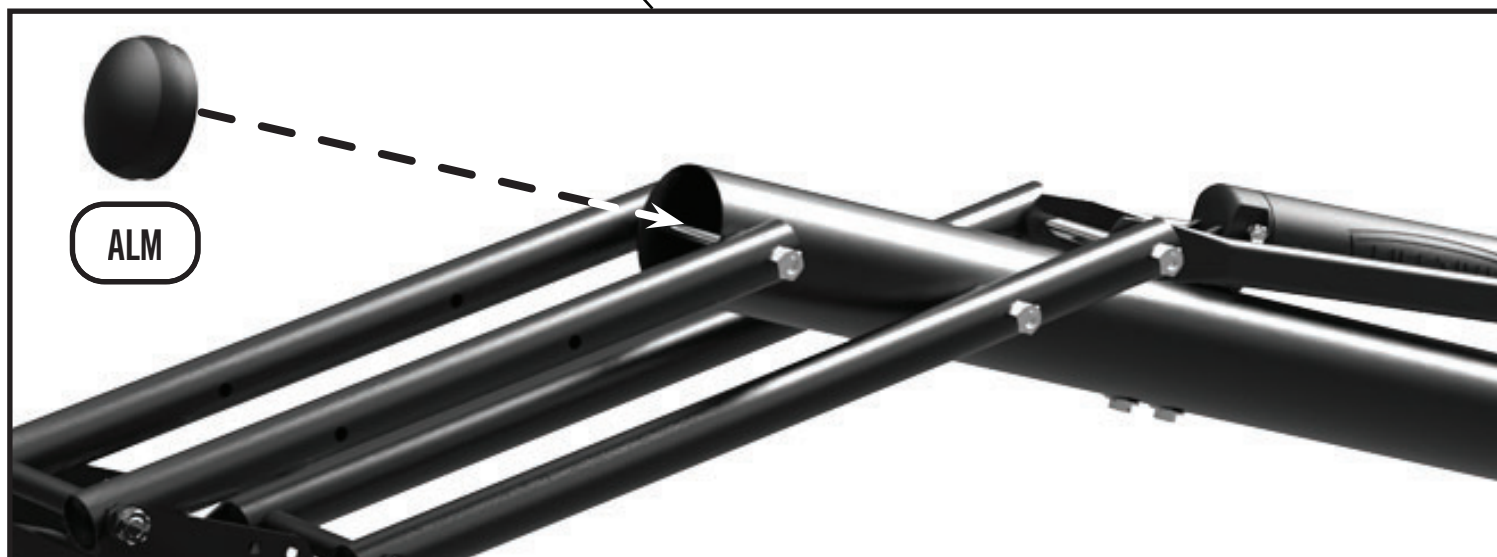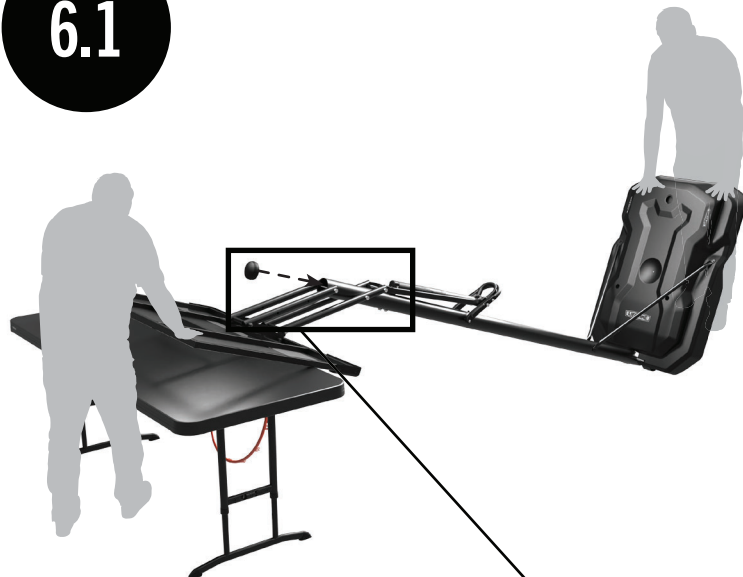




92103



 ADP (x4)





6.2

Partially peel up the protective backing from the bottom of the backboard as indicated.




6.3

  Center the **center frame guard (AJQ)** on the bottom edge to the frame. Push hard to insert the **screws (ADP)**.

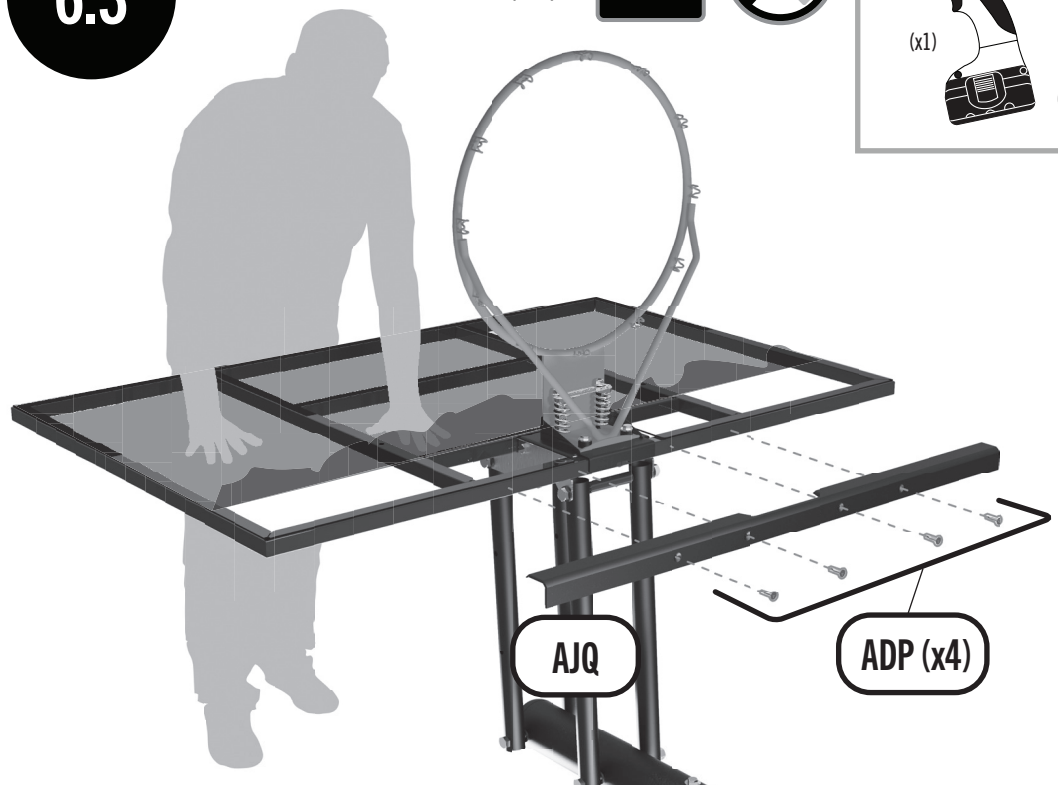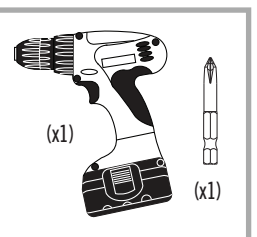




ADP (x6)

 


92103

6.4

 Push hard to insert screws (ADP). Start with the top-left screw (ADP) for the left frame guard and the top-right for the right frame guard.


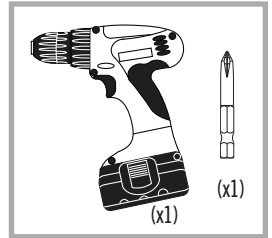


 The corner pads (BAA and BAB) will overlap the center pad.

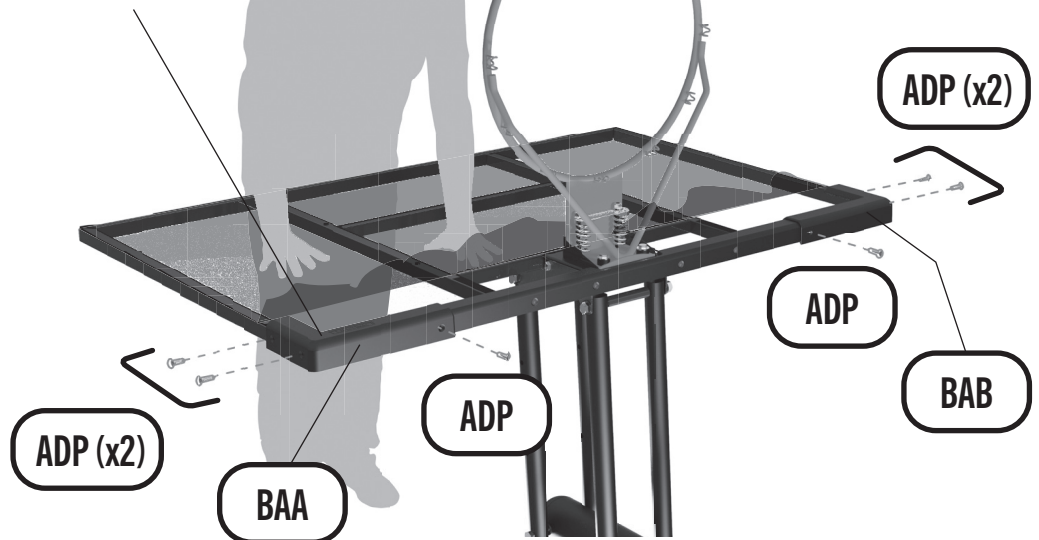



6.5

  Attach the net.

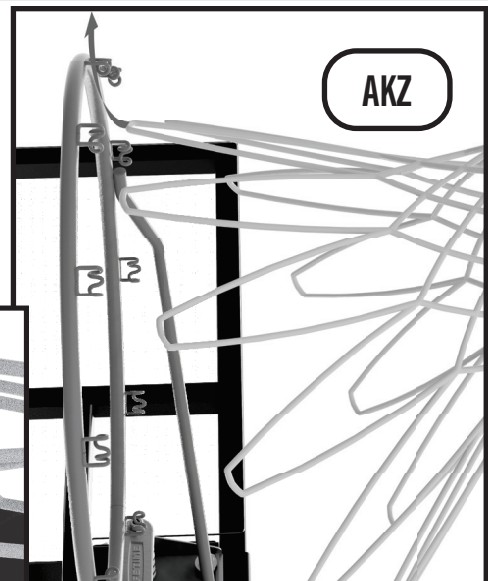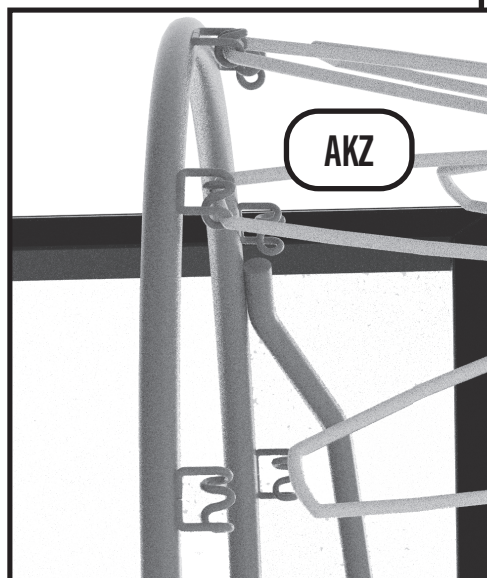


6.6a

  1. Insert the two **base plugs (AEF)** into the holes in the base.

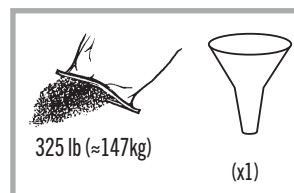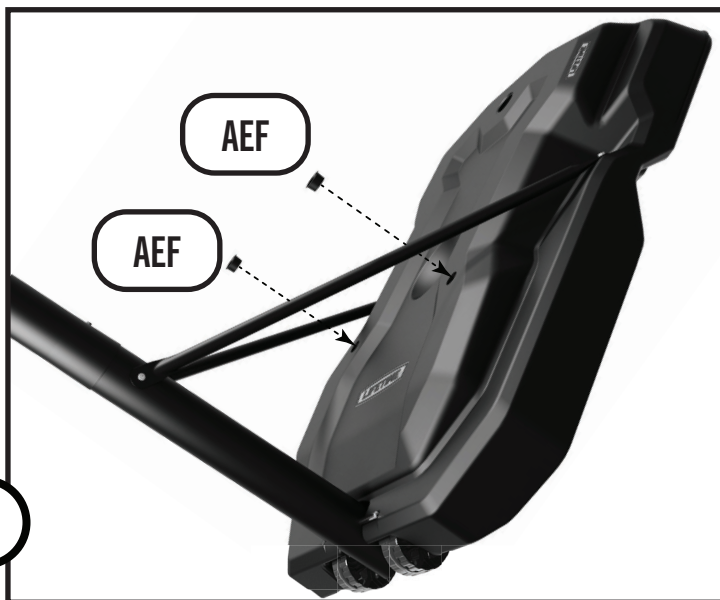

5/5

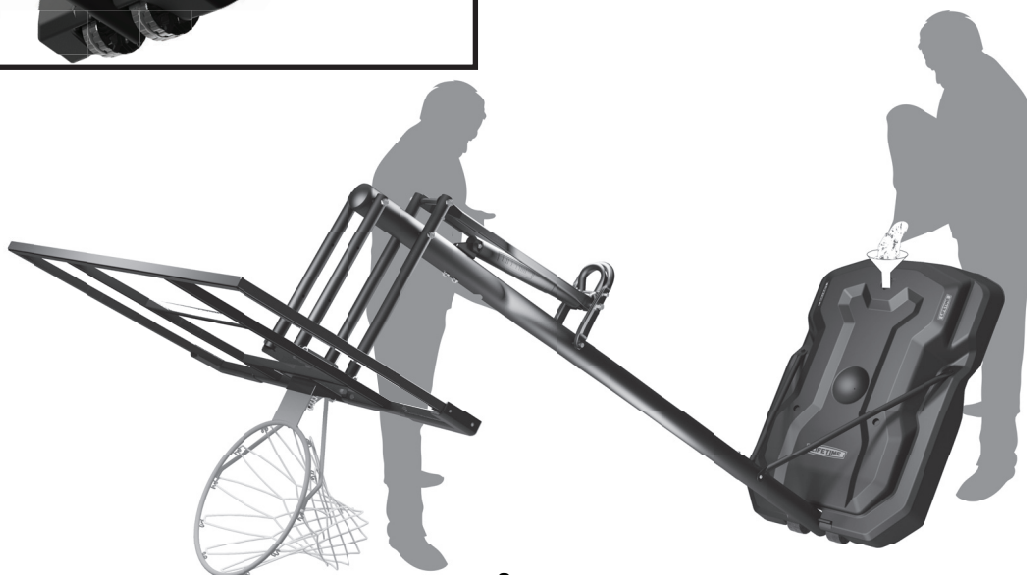 

2. Fill with 325 lb (≈147kg) of dry sand.



3. Attach the **screw-top plug (FIQ)** and **gasket (FIR)** to release the air pressure in the base.





 
WARNING



For safety reasons, we recommend that dry sand be used instead of water to fill the base. If a leak develops, water could run out unnoticed, allowing the system to fall over, resulting in serious personal injuries or property damage. If using water, check the base carefully for leaks. If a leak is found, lay the system down on the ground and call Customer Service. DO NOT use, stand up, or play on a leaking system.

6.6b


1. Insert the two **base plugs (AEF)** into the holes in the base.

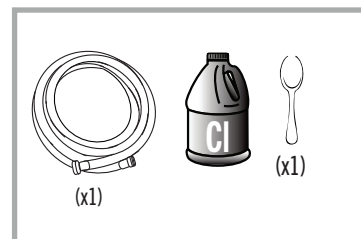


4/5

2

 2. Fill with water to just below the screw-top hole. Insert and tighten the **screw-top plug (FIQ)** and **gasket (FIR)**.


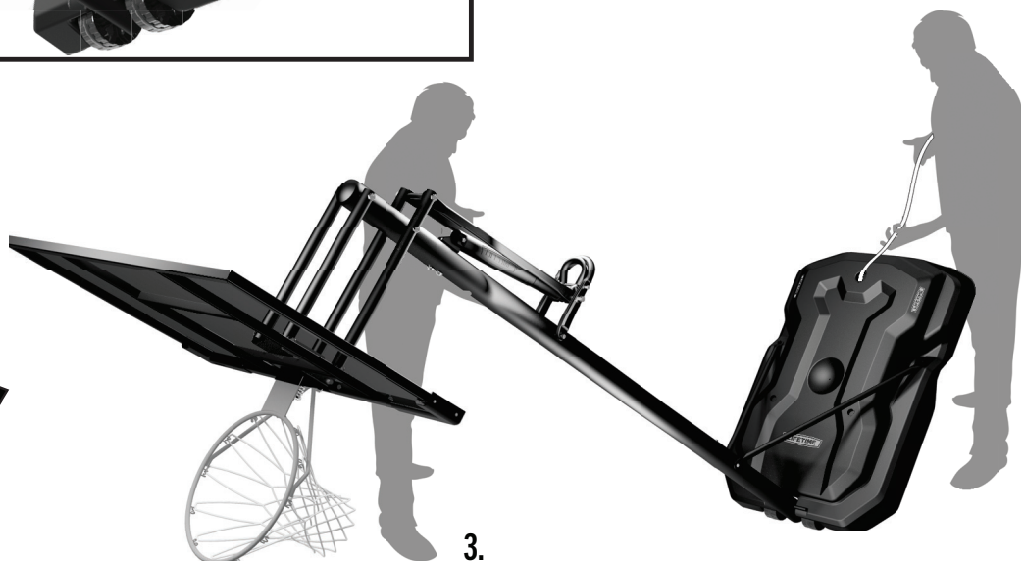


 3. Remove and re-attach the screw-top plug and gasket to release the air pressure in the base.

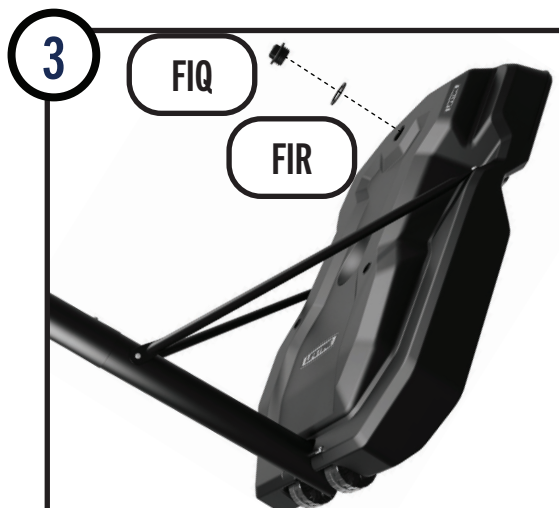


6.7

  1. Using a tape measure, raise the rim to 10 feet (3,1m).

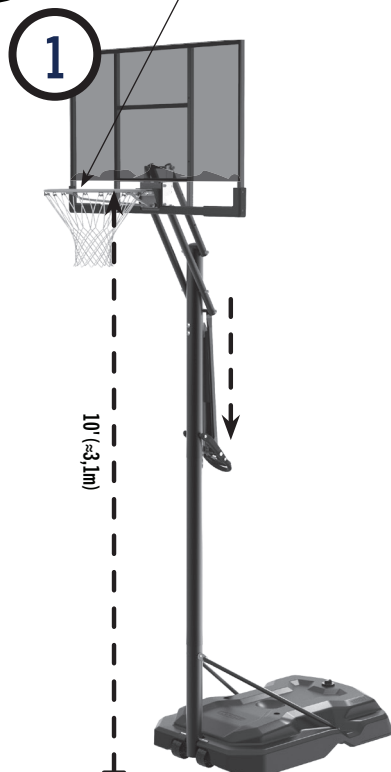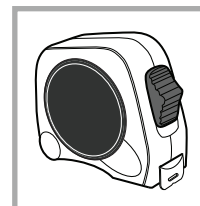

 
2. Align the 10-foot mark on sticker (AKP) with bottom of the gas spring cover

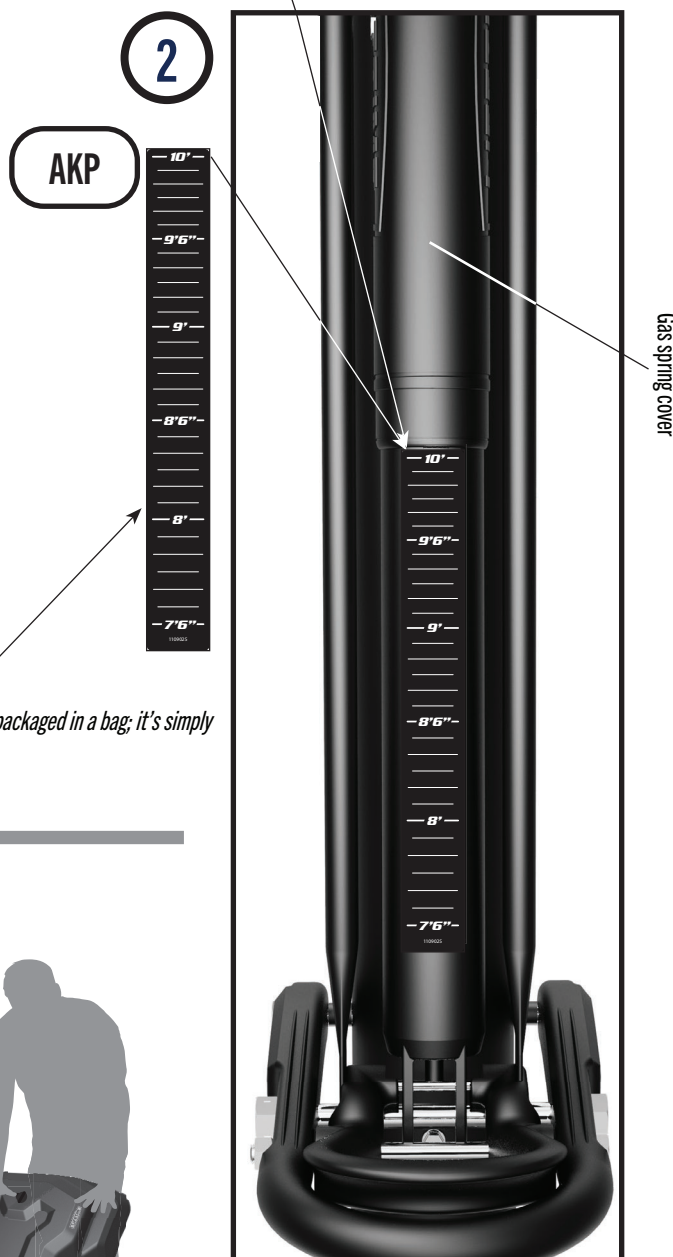

- The sticker is not packaged in a bag; it's simply placed in the box.


6.8

 - Now that the assembly is complete, remove the rest of the protective backing from the backboard.

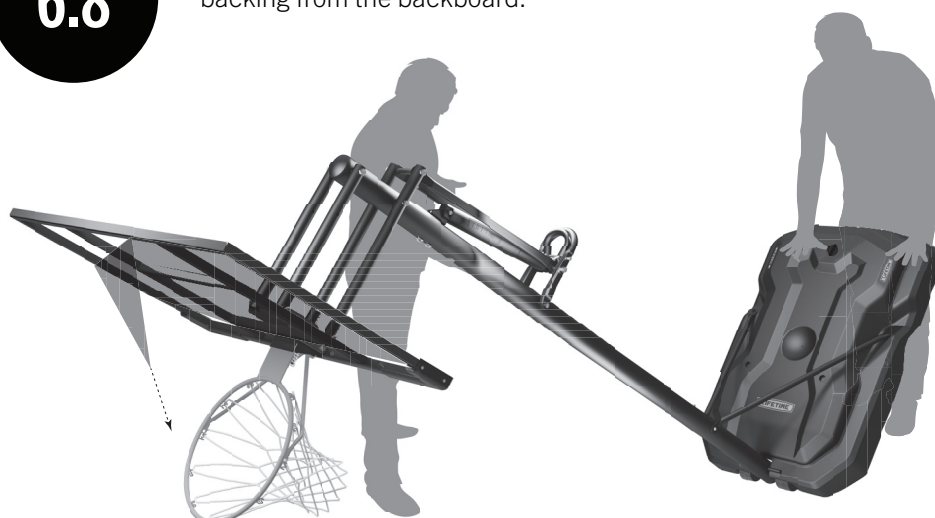


**A**

 
HEIGHT ADJUSTMENT

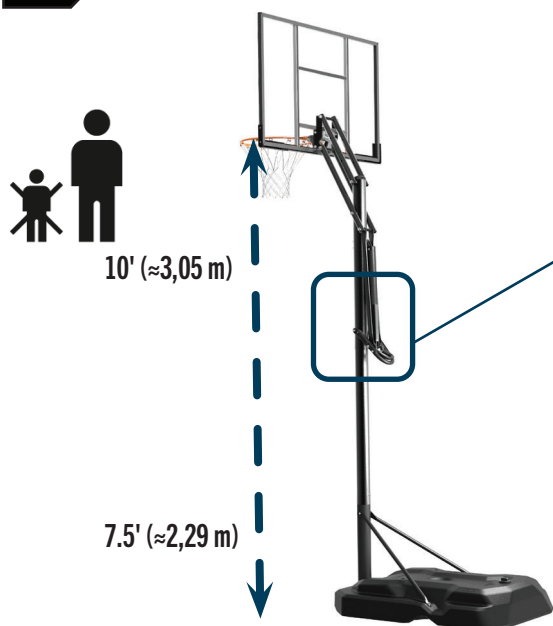**B**


WINDY WEATHER

  • Lay down in windy weather.

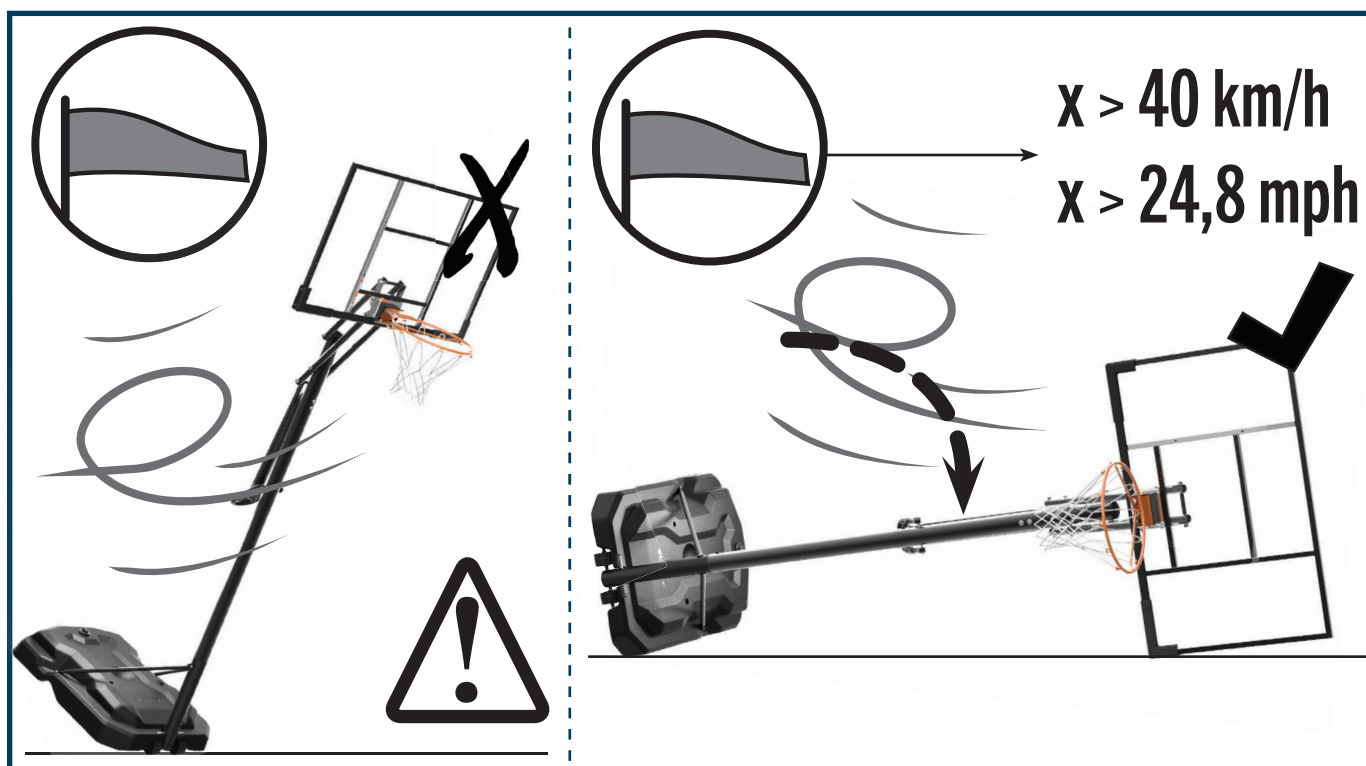


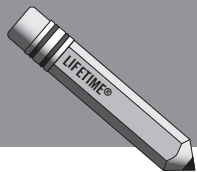


C

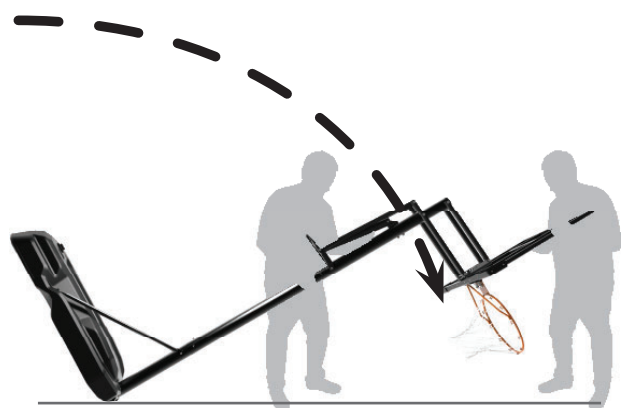 

 
(2)

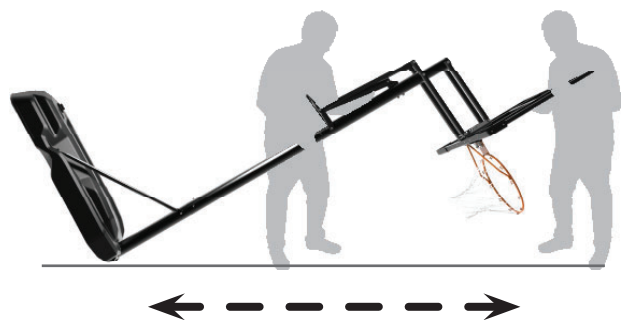

 
(3)

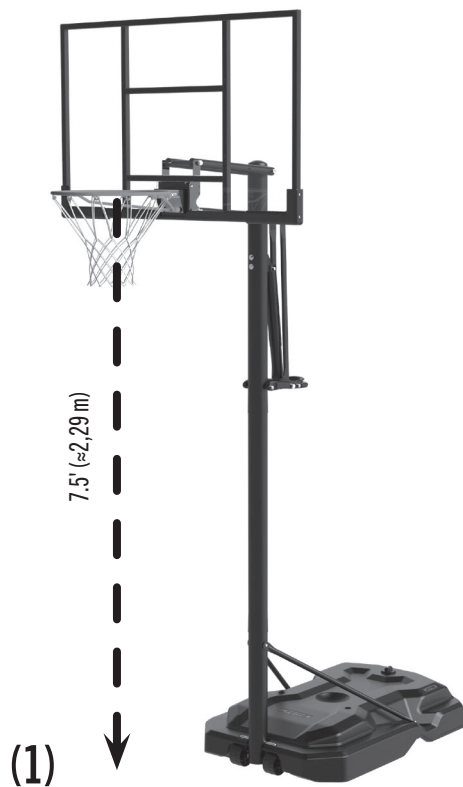

 (1)

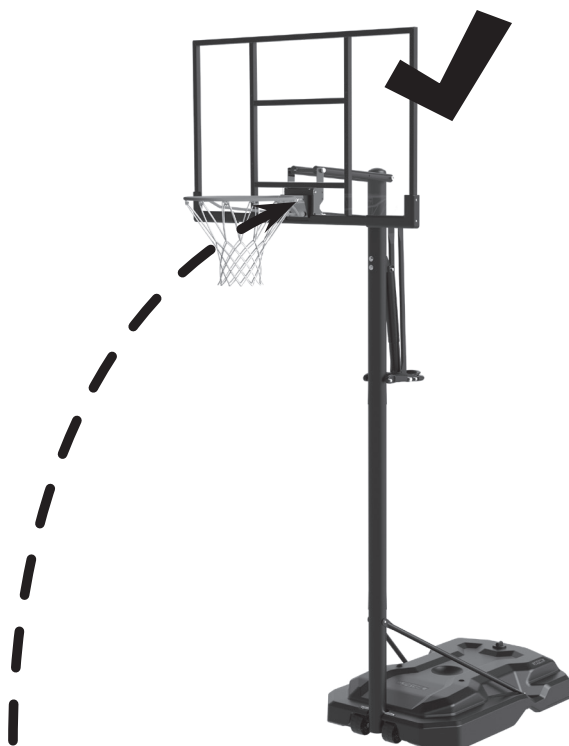

 (4)



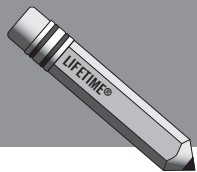


ADJUSTING RIM TENSION

92103

D

   - If necessary, tighten or loosen the tension nuts to adjust the rim tension.

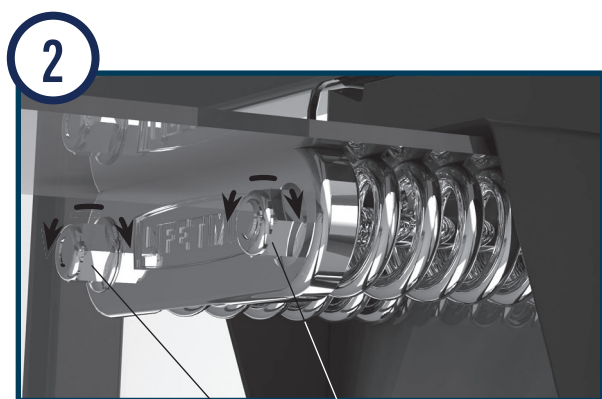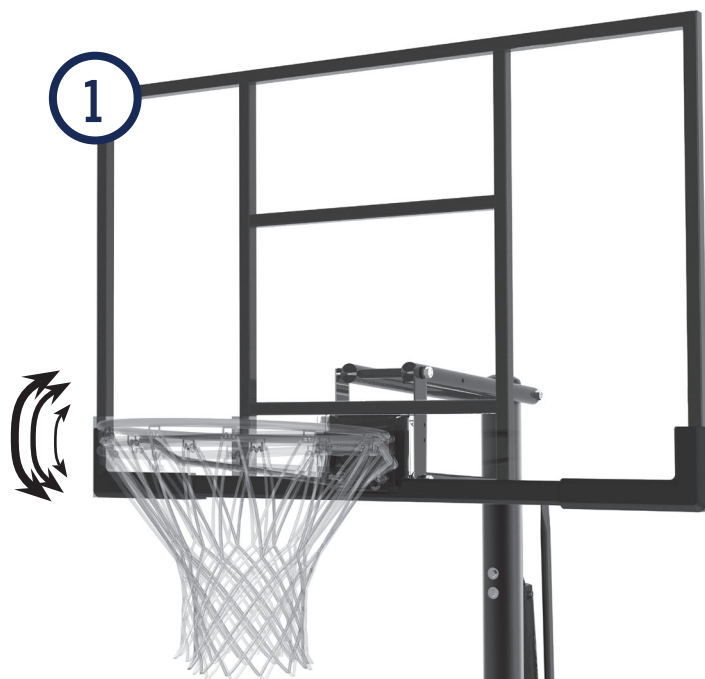



MAINTENANCE

The life of your basketball system depends on many variables. The climate, exposure to corrosives such as salt, pesticides, or herbicides, and excessive use or misuse can all contribute to pole failure, which may cause property damage or personal injury. Check your basketball system frequently for loose hardware, excessive wear, and signs of corrosion. For safety reasons, and to prolong the life of your basketball system, you must take the following preventive measures.

- A. Check all nuts and bolts. If any are loose, tighten them.
- B. Check all parts for excessive wear and tear. If necessary, replace any parts that have been worn or damaged through usage. Contact our customer service department for replacement parts.
- C. Inspect the warning sticker on the pole. If it is ripped, faded, or illegible, call our customer service department to request a replacement sticker.
- D. Check all pole sections for visible rust or chipped or cracked paint. If either are present, do the following:
 1. Use an emery cloth to completely remove any rust or chipped paint.
 2. Clean the area with a damp cloth and allow it to dry.
 3. Apply two coats of a rust preventative, high gloss enamel paint to the area. Allow the paint to dry between coats.

IF RUST HAS PENETRATED ANYWHERE THROUGH THE POLE, REPLACE THE POLE IMMEDIATELY!



REGISTER YOUR PRODUCT ONLINE AT WWW.LIFETIME.COM

At Lifetime®, we are committed to providing innovative and quality products. While registering, you will have the opportunity to give us your feedback. Your input is valuable to us.

- You can also opt in to receive new product notifications or promotions.
- In the unlikely event of a product recall or safety modification, your registration provides the information we need to notify you directly.
- Registration is fast, easy, and completely voluntary.

LIFETIME'S PROMISE TO YOU:

Maintaining your privacy is our long-standing policy at Lifetime®. And you can rest assured that Lifetime® will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!



WARNING

 


FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE.

Owners must ensure that all players know and follow these rules for safe operation of the system.

- Only hang from the Rim briefly to regain balance or avoid injuring others. Release the Rim as soon as safely possible.
- During play, especially when performing dunk type activities, keep player's face away from the Backboard, Rim, and Net. Serious injury could occur if teeth/face come in contact with the Backboard, Rim, or Net. Player should wear a mouth guard during play.
- Do not slide, climb, or play on Base or Pole.
- Completely fill Base according to manufacturer's instructions. Never leave the unit standing in an upright position without first filling the Base with weight or the system will tip quickly causing serious personal injury.
- When adjusting height or moving system, keep hands and fingers away from moving parts.
- Do not allow children to move or adjust system.
- Do not wear jewelry (rings, watches, necklaces, etc.) during play. Objects may entangle in Net.
- Keep water and organic material away from Pole Base. Grass, litter, etc. could cause corrosion and/or deterioration.
- Never play on damaged equipment.
- Surface beneath the Base must be smooth and free of gravel or other objects. Punctures cause leakage and could cause system to tip over.

- Once a month check Pole and all metal parts for signs of corrosion (rust, pitting, chipping). Completely remove rust and repaint with exterior enamel. If rust has penetrated any steel part, replace that part immediately.
- Check system before each use for proper ballast, loose hardware, excessive wear, instability, and signs of corrosion and repair before use.
- Do not use system during windy or severe weather. System may tip over. Place system in an area protected from the wind or in an area away from property that may be damaged if the system falls, and from overhead power lines.
- Do not use the system to lift or hoist anything. The mechanism is designed to lift only the weight of the Backboard and Rim. Do not hang anything from the Handle, Rim, Backboard, or Lifter Arms as this will damage the system and void the warranty.

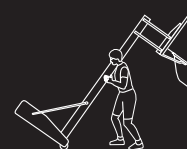

AVERTISSEMENT



ADVERTENCIA



FAUTE DE NE PAS SUIVRE CES AVERTISSEMENTS, VOUS RISQUEZ DE CAUSER DES BLESSURES GRAVES ET/OU DES DOMMAGES À L'ÉQUIPEMENT.

Le propriétaire doit s'assurer que tous les joueurs connaissent et appliquent les règles suivantes afin d'utiliser l'équipement en toute sécurité.

- Ne vous suspendez pas à l'anneau plus que nécessaire pour retrouver votre équilibre ou éviter de blesser les autres joueurs. Relâchez l'anneau aussitôt que possible.
- Lors d'un match, particulièrement dans le cas des smashes, le visage du joueur ne doit pas faire face au panneau, à l'anneau, ni au filet. Le joueur risque de graves blessures si ses dents ou son visage entrent en contact avec le panneau, l'anneau, ou le filet. Les joueurs doivent toujours porter un protège-dents lorsqu'ils jouent.
- Ne glissez pas, ne grimpez pas, et ne jouez pas sur la base ou le poteau.
- Remplissez complètement la base selon les instructions du fabricant. Ne laissez jamais l'unité debout de plein pied sans avoir d'abord rempli la base avec un poids ou l'équipement pourrait basculer rapidement et causer de graves blessures.
- Lorsque vous ajustez la hauteur ou lorsque vous déplacez l'équipement, gardez vos mains et doigts loin des pièces mobiles.
- Ne permettez pas aux enfants de déplacer ou d'ajuster l'équipement.
- Ne portez pas de bijoux (bagues, montres, colliers, etc.) lorsque vous jouez. Ces objets pourraient s'accrocher au filet.
- La surface sur laquelle est posée la base doit être lisse et sans gravier ou tout autre objet qui pourrait troubler la base entraînant ainsi une fuite ce qui pourrait faire basculer l'équipement.
- Gardez de l'eau et de la matière organique loin de la base. Le gazon, les déchets, etc. pourraient provoquer la corrosion et/ou la détérioration.
- Une fois par mois, vérifiez que le Poteau et toutes les pièces en métal ne montrent pas de signes de corrosion (rouille, piqures, écaillage). Enlevez toute la rouille et repeignez complètement avec une peinture pour extérieur. Si la rouille a pénétré une des pièces en acier, vous devrez remplacer immédiatement la pièce en question.
- A chaque fois que vous allez utiliser l'équipement, vérifiez d'abord l'équilibre, la possibilité de pièces desserrées ou usées, la stabilité de l'équipement et tout signe de corrosion ou réparation nécessaire avant utilisation.
- Ne jouez jamais avec un équipement endommagé.
- N'utilisez pas l'équipement lors de fortes rafales de vent ou de mauvais temps. L'équipement pourrait basculer. Placez l'équipement dans un endroit abrité du vent ou loin des structures qu'il pourrait endommager s'il basculait et loin des fils électriques.
- N'utilisez pas l'équipement pour lever ou soulever quoique ce soit. Son mécanisme a été conçu uniquement pour soutenir le poids du panneau et de l'anneau. N'accrochez rien au manche, à l'anneau, au panneau ni aux leviers sous peine d'endommager l'équipement et d'annuler la garantie.

SI NO SE OBEDECEN ESTAS ADVERTENCIAS PUEDEN PRODUCIRSE GRAVES LESIONES Y/O DAÑOS A LA PROPIEDAD.

El propietario del sistema debe asegurarse de que todos los jugadores conozcan y respeten estas reglas para que el sistema se use en forma segura.

- Cuélguese del aro sólo en forma breve, para recuperar el equilibrio o evitar lesionar a otros jugadores. Suéltese del aro lo más pronto que pueda hacerlo con seguridad.
- Durante el juego, especialmente al embocar violentamente de alto, la cara de los jugadores debe mantenerse alejada del tablero, el aro y la red. Pueden producirse lesiones graves si los dientes o la cara entran en contacto con el tablero, el aro o la red. Los jugadores deben usar un protector bucal durante el juego.
- No se deslice, no trepe ni juegue sobre la base o el poste.
- Llene la base completamente siguiendo las instrucciones del fabricante. Nunca deje la unidad en posición de uso sin haber llenado previamente la base con material de contrapeso, pues el sistema podría tumbarse rápidamente y causar graves lesiones personales.
- Mantenga las manos y los dedos alejados de las piezas móviles cuando regule la altura o desplace el sistema.
- No deje que los niños regulen ni desplacen el sistema.
- No use joyas (anillos, relojes, collares o gargantillas, etc.) durante el juego. Estos objetos pueden engancharse en la red.
- La superficie donde se coloque la base debe estar lisa y desprovista de piedras, grava u otros objetos. Las perforaciones pueden originar pérdidas, y éstas pueden hacer que el sistema se tumbe.
- Guarde agua y materia orgánica. Césped, basura, etc., podrían causar corrosión et/o deterioros.
- Controle el poste y todas las piezas metálicas una vez al mes en busca de signos visibles de corrosión (oxidación, picaduras, escamado). Elimine todo rastro de óxido y vuelva a pintar con esmalte para exteriores. Si el óxido ha penetrado cualquier pieza de acero, reemplace esa pieza de inmediato.
- Inspeccione el sistema antes de cada uso para verificar que esté adecuadamente contrapesado, que los elementos de fijación no estén flojos, que no haya desgaste excesivo, inestabilidad ni signos de corrosión. Si encuentra irregularidades, repárelas antes de usar el sistema.
- Nunca juegue con un equipo dañado.
- No use el sistema en presencia de vientos fuertes o condiciones climáticas adversas, ya que puede tumbarse. Coloque la unidad en su posición de almacenamiento y/o en una zona a resguardo del viento, lejos de propiedades personales que puedan dañarse si el sistema se cae, y de líneas de suministro de energía.
- No use el sistema para levantar ningún objeto. El mecanismo está diseñado para elevar solamente el peso del tablero con el aro. No cuelgue nada de la agarradera, el aro, el tablero ni los brazos de elevación, ya que esto puede dañar el sistema y anular la garantía.



92103



92103



5-YEAR LIMITED FACTORY WARRANTY

92103

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of five years (60 months) from the date of original retail purchase. The word “defects” is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, “acts of nature” or any other event beyond the control of the manufacturer.
2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory or distribution center are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or its components are not covered under this warranty.
3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the rim will void this warranty.
4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
6. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
7. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or dial 1-800-225-3865.

REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or dial 1-800-225-3865 to register your product today.

FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts.

To identify the representative for your region, please visit: www.lifetime.com/international



www.lifetime.com



www.lifetime.com

